


Western Oil Producers

Hunker "Comm" #1

1980 FSL & 1980 FWL

Sac 35; TS 21 S, Rte 292

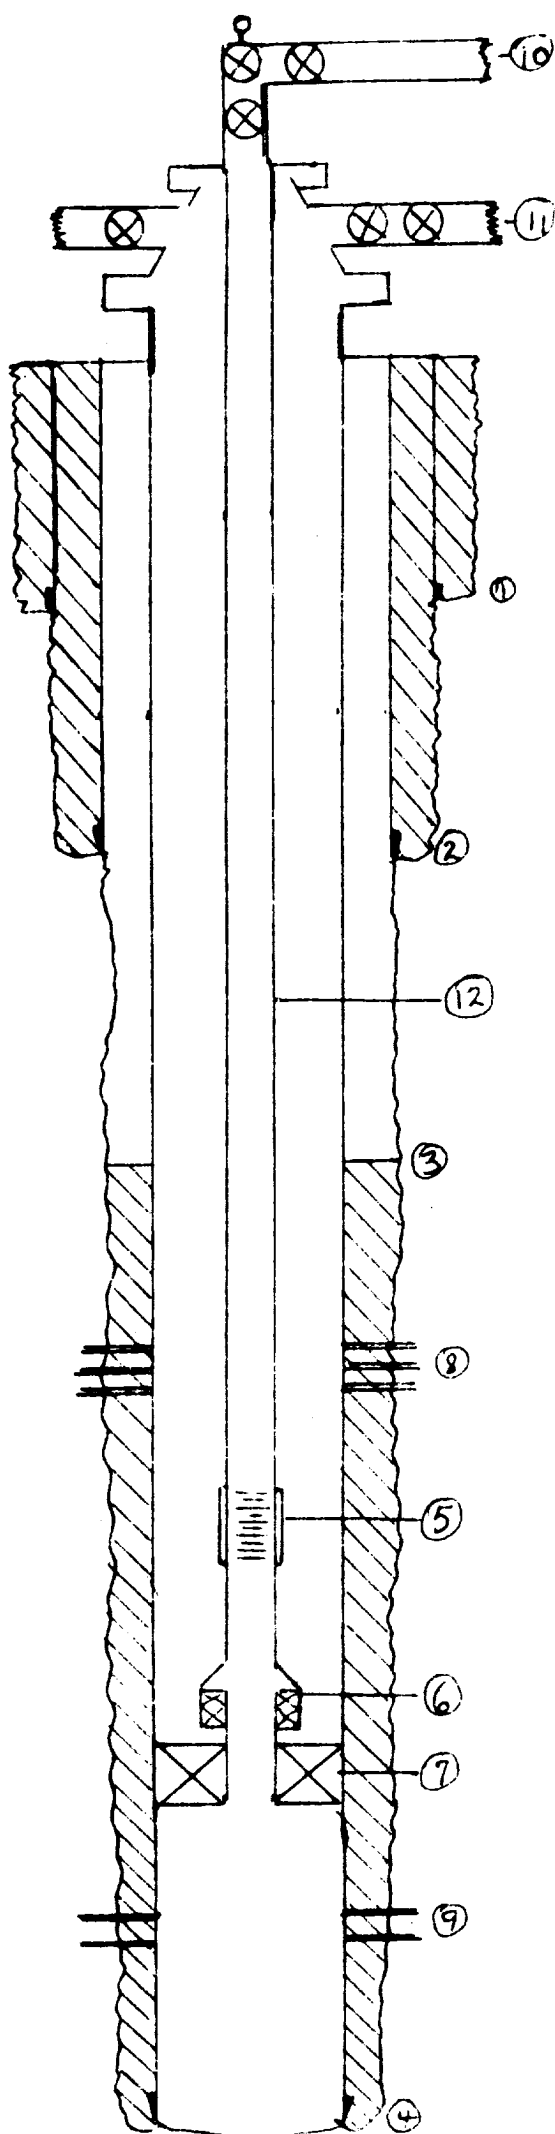

1. Run 425' of 13 7/8" Casing. Cemented with 450 SKs. Cement Circulated
2. Run 2650' of 8 7/8" Casing. Cemented with 950 SKs. Cement Circulated.
3. 5 1/2" Cemented with 1200 SKs Class H Cement Top 6300' Bond log top.
4. 5 1/2" Set @ 11,875'. Run as follows:
 1628' of 5 1/2", 20# N-80, LTC.
 6391' of 5 1/2", 17# N-80, LTC.
 2853' of 5 1/2", 20# N-80, LTC.
 1121' of 5 1/2", 20# S-95, LTC.
 2' 1-5 1/2" Float Collar; 1-5 1/2" Shoe
5. 1- 2 7/8" Sliding Sleeve XA (OTIS)
6. 1- 5 1/2" Tubing Seal Divider (OTIS) with 2.5" N" Nipple.
7. 1- 5 1/2" PL Packer @ 11,442 (OTIS)
8. Wolfcamp perforations 9,643' to 9,717'.
9. Morrow perforations 11,523' to 11,544' 11,681' to 11,695'.
10. Morrow outlet thru 2 7/8" tubing.
11. Wolfcamp outlet thru casing and tubing ANNULUS.
12. 2 7/8" tubing N-80 @ 11,409'
 Sliding sleeve @ 11,409'
 Tubing Seal Divider @ 11,440'
 Packer at @ 11,442' - 47'