


Operator ROSS ENT 1
 Well 600 East 1 - 30
 Unit 1 Section 33 Township 1 Range 1
 API # 30-0 15-15-1

TOPS

Yates _____
 T. Salt _____
 B. Salt _____
 Glorieta _____
 Bone Sp. _____
 Abo _____
 Wolfcamp _____
 Morrow _____
 Devonian _____
 Fusselman _____
 Other 1500 ft 1500

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

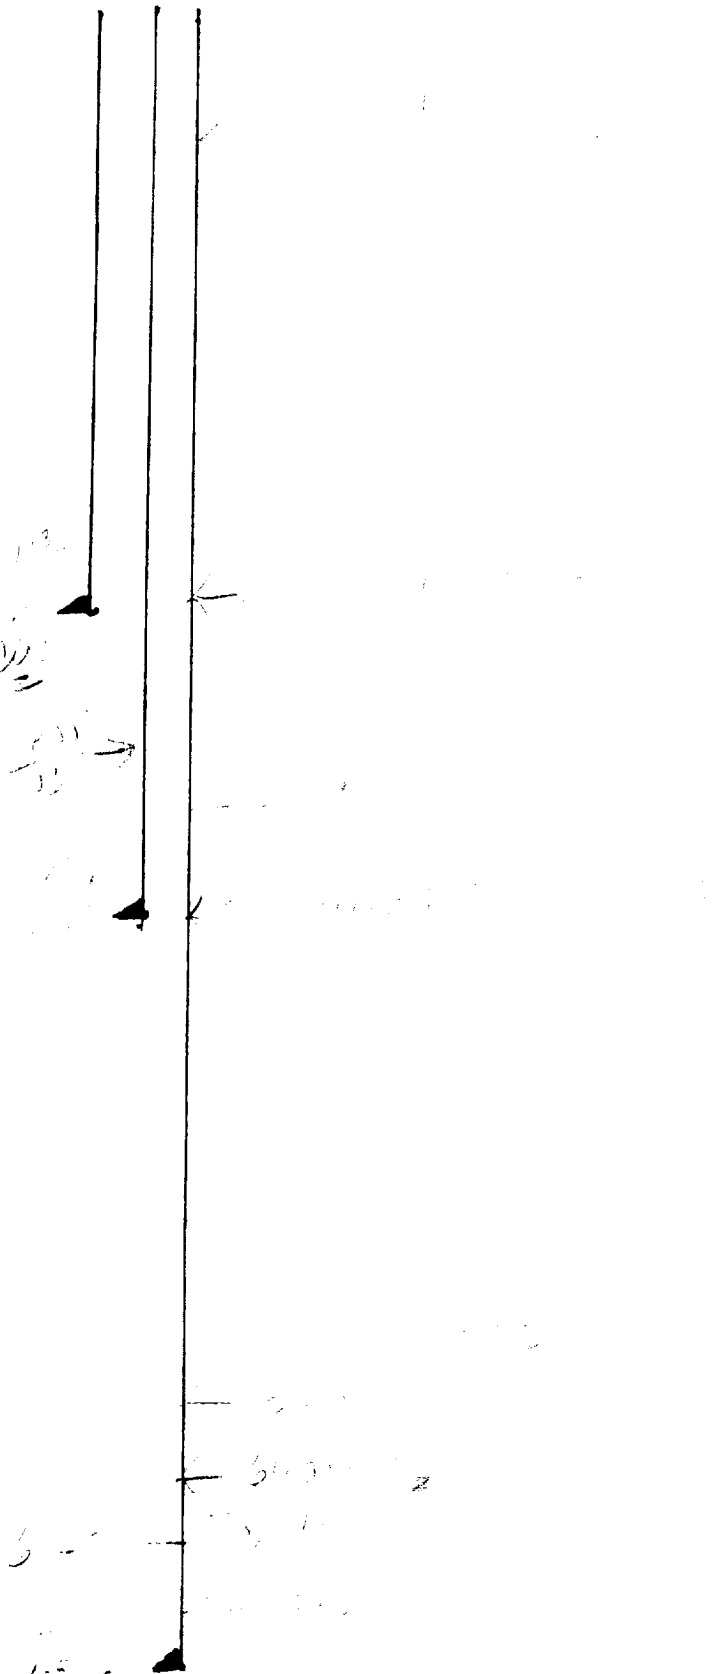

Rustler	~ 175'
? Capitan?	~ 1130'
°B Reef	~ 2280'
°B. Lawrence	2513'
Bone Spring	5712'
Wolfcamp	9341'
Penn	10329'
Strawn	10520'
Atoka	10905'
Permian Limestone	11450'
Permian clastics	11650'