


NO. OF COPIES RECEIVED	
DISTRIBUTION	
SANTA FE	<input checked="" type="checkbox"/>
FILE	<input checked="" type="checkbox"/>
U.S.G.S.	<input checked="" type="checkbox"/>
LAND OFFICE	<input checked="" type="checkbox"/>
OPERATOR	<input checked="" type="checkbox"/>

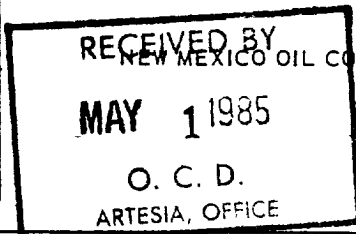

Form C-103
Supersedes Old
C-102 and C-103
Effective 1-1-65

5a. Indicate Type of Lease State <input checked="" type="checkbox"/> Fee <input type="checkbox"/>
5. State Oil & Gas Lease No. V-171
7. Unit Agreement Name
8. Farm or Lease Name Catclaw Draw St. Com.
9. Well No.
10. Field and Pool, or Wildcat Catclaw Draw (Morrow)
12. County

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR.
USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input type="checkbox"/> OTHER <input type="checkbox"/>
2. Name of Operator TXO Production Corp.
3. Address of Operator 900 Wilco Bldg., Midland, TX 79701
4. Location of Well UNIT LETTER <u>M</u> , <u>660</u> FEET FROM THE <u>South</u> LINE AND <u>660</u> FEET FROM THE <u>West</u> LINE, SECTION <u>18</u> TOWNSHIP <u>21-S</u> RANGE <u>26-E</u> NMPM.
15. Elevation (Show whether DF, RT, GR, etc.)

Check Appropriate Box To Indicate Nature of Notice, Report or Other Data
NOTICE OF INTENTION TO: SUBSEQUENT REPORT OF:

PERFORM REMEDIAL WORK <input checked="" type="checkbox"/>	PLUG AND ABANDON <input type="checkbox"/>	REMEDIAL WORK <input type="checkbox"/>	ALTERING CASING <input type="checkbox"/>
TEMPORARILY ABANDON <input type="checkbox"/>	*CHANGE PLANS <input checked="" type="checkbox"/>	COMMENCE DRILLING OPNS. <input type="checkbox"/>	PLUG AND ABANDONMENT <input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	OTHER <input type="checkbox"/>	CASING TEST AND CEMENT JOB <input type="checkbox"/>	OTHER <input type="checkbox"/>

17. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103.

Kill well. TOH w/tbg.
TIH & set CIBP @ 9900'. Dump 35' cmt.
TIH & log cmt bond (est. top 8900').
Squeeze 4 1/2" csg if necessary. Clean out 4 1/2" csg.
TIH & perforate Wolfcamp as follows: 9108-16' 1 spf
9053-64' 1 spf
TIH w/tbg & pkr. Stimulate as needed
Swab test well.
*This recompletion is being purposed due to lease time limitations. Procedure will be attempted only if Strawn recompletion fails & Wolfcamp recompletion approved.

18. I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNED <u>Lane Griffing</u>	TITLE <u>Production Engineer</u>	DATE <u>3/26/85</u>
Original Signed By <u>Les A. Clements</u> Supervisor District 11		
APPROVED BY	TITLE	DATE
		<u>MAY 6 1985</u>

CONDITIONS OF APPROVAL, IF ANY: