


Operator BASS ENT. Co. No.
 Well B. & E. 17. #92
 Unit L Section 14 Township 21 Range 28
 API # 30-015 - 24083

TOPS

Yates _____
 T. Salt 800
 B. Salt ?
 Glorieta _____
 Bone Sp. 6239
 Abo _____
 Wolfcamp 10000
 Morrow 11800
 Devonian _____
 Fusselman _____
 Other Delaware 2879

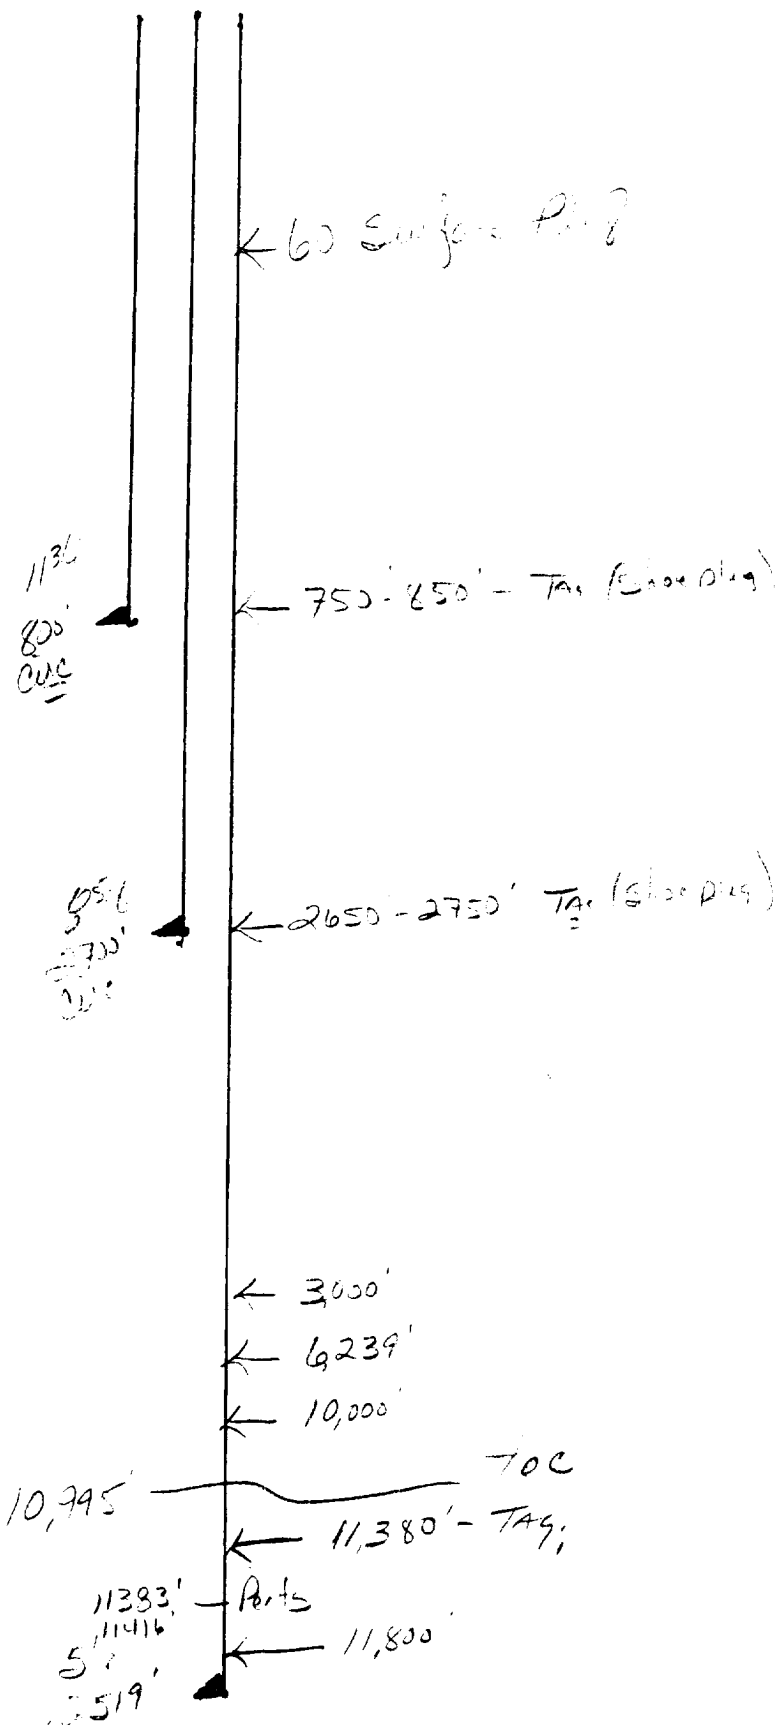

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.