


Operator Strata Production Company
 Well Doris Federal
 Unit K Section 26 Township 26 Range 28
 API # 30-015-24208

TOPS

Rustler	848'
Capitan	1405'
Delaware	2995'
Bone Spring	5496'
Wolfcamp	8955'
Penn	9873'
Strawn	10120'
Atoka	10483'
Mcrown Limestone	10947'
Mcrown Clastics	11090'
Barnett	11591'

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

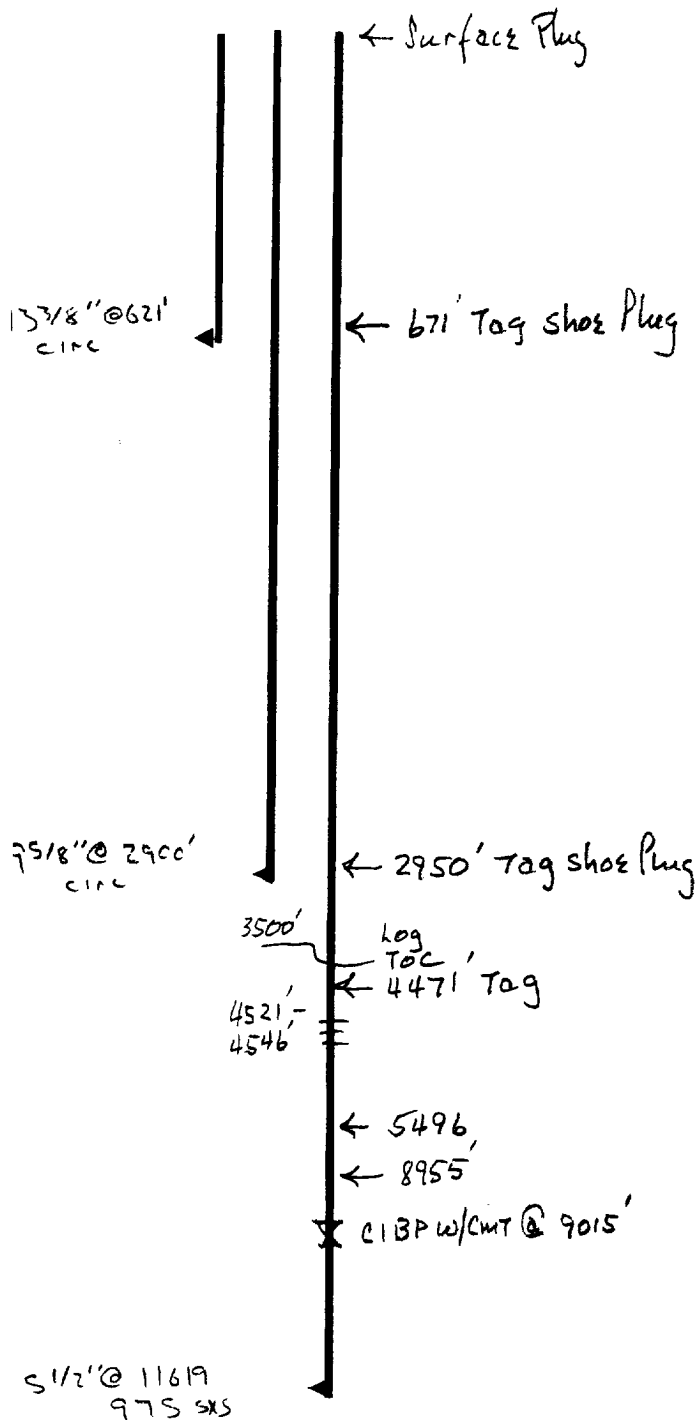

B.