


Operator Louis De Rue  
 Well E.V. St. 1  
 Unit K Section 32 Township 22 Range 26  
 API # 30-015--25352

TOPS

Yates \_\_\_\_\_  
 T. Salt \_\_\_\_\_  
 B. Salt \_\_\_\_\_  
 Glorieta \_\_\_\_\_  
 Bone Sp. 4828  
 Abo \_\_\_\_\_  
 Wolfcamp 8462  
 Morrow 11036  
 Devonian \_\_\_\_\_  
 Fusselman \_\_\_\_\_  
 Other Delaware 2550  
Reef to Surf

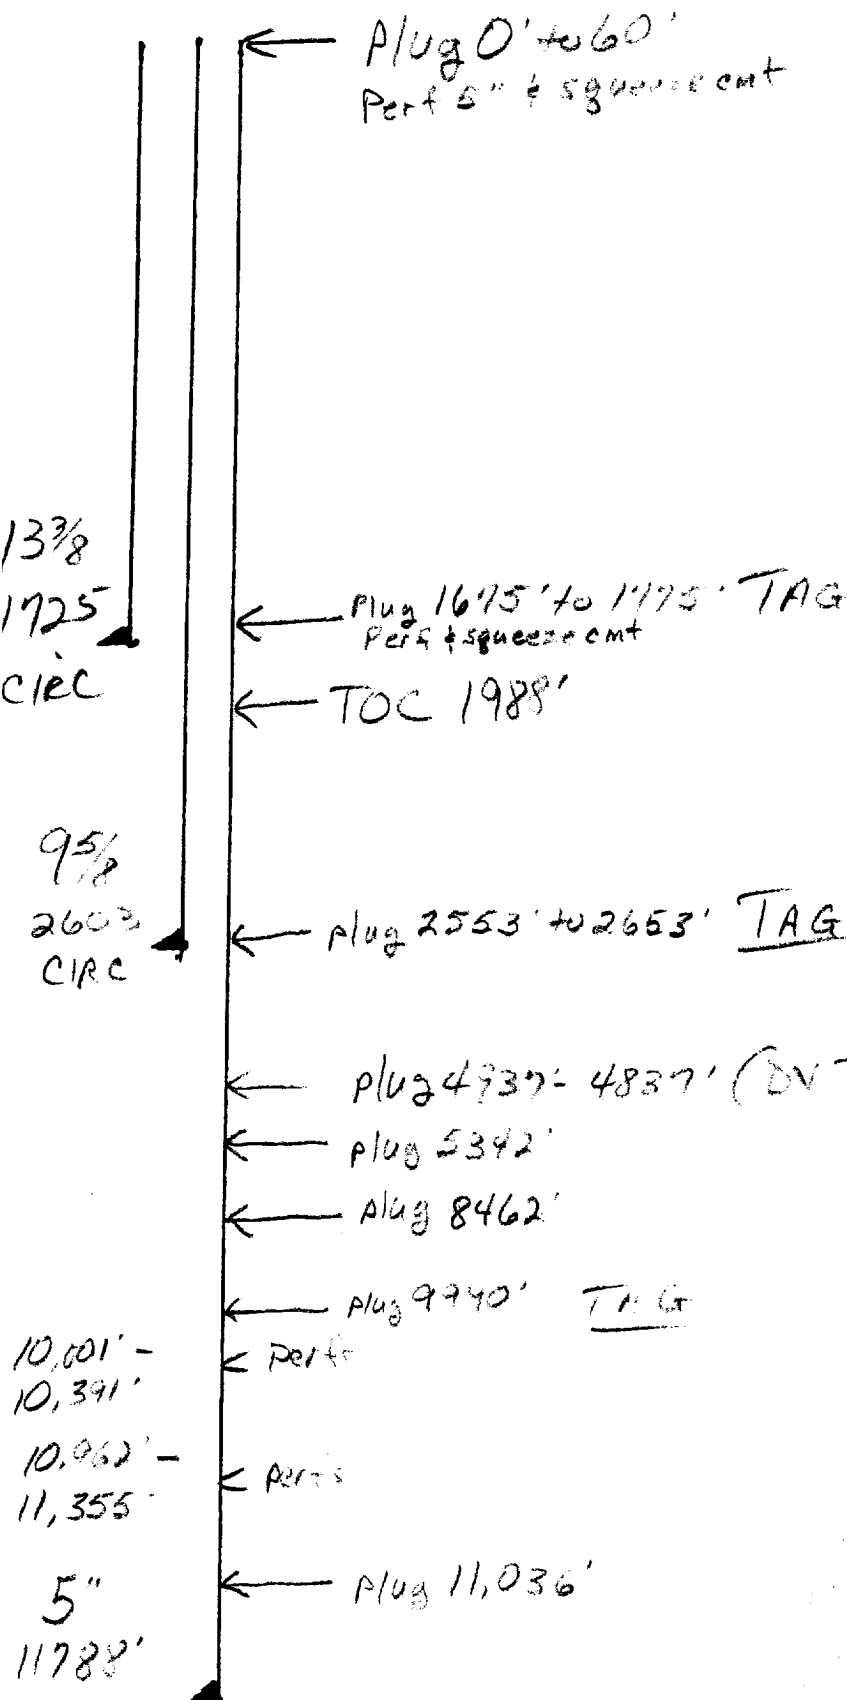

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.

MLB