


Operator LOUIS Dreyfus NAT. GAS Corp.
 Well McGruder 13 lateral Com. #1
 Unit N Section 13 Township 22E Range 25E
 API # 30-015-29871

Delaware

Y s _____
 T. Salt _____
 B. Salt _____
 Glorieta 2080'
 Bone Sp. 4575'
 Abo _____
 Wolfcamp 8470'
 Morrow 10930'
 Devonian _____
 Fusselman _____
 Other _____

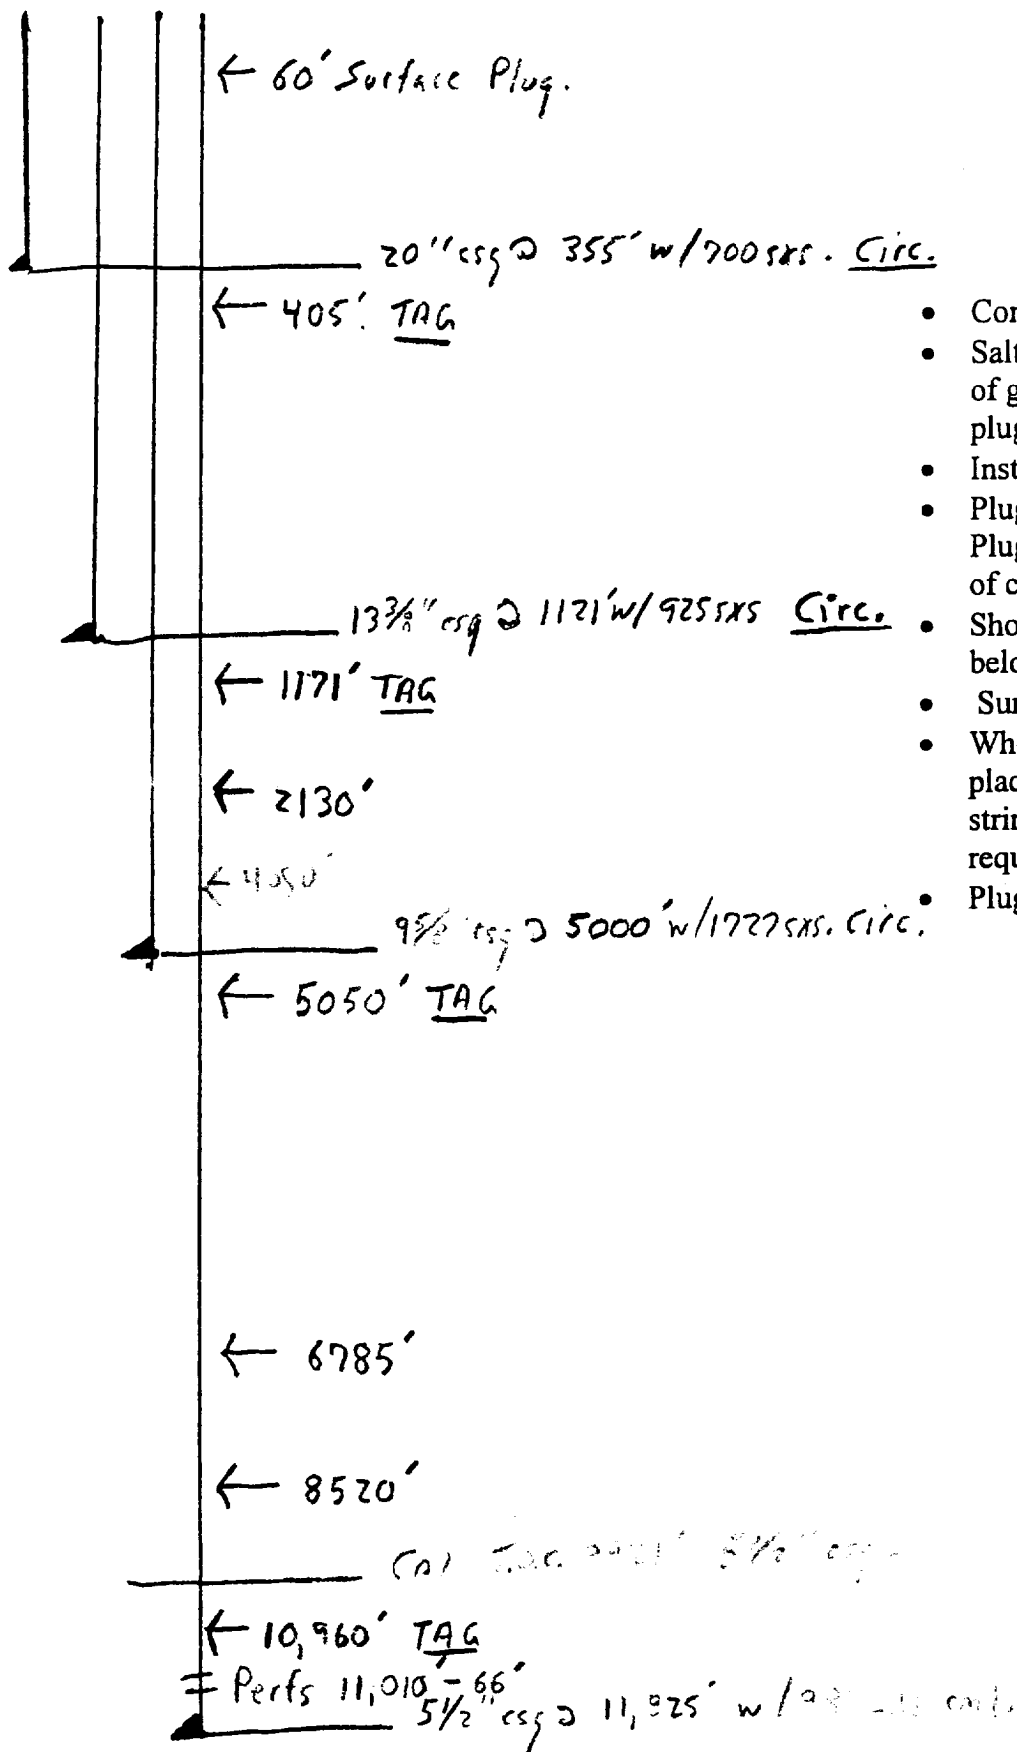

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.