


OXY USA WTP LP
MERLAND B 1
SEC 30 T22S R27E EDDY NM

Install Dry hole marker As Per Rule 202.B.2

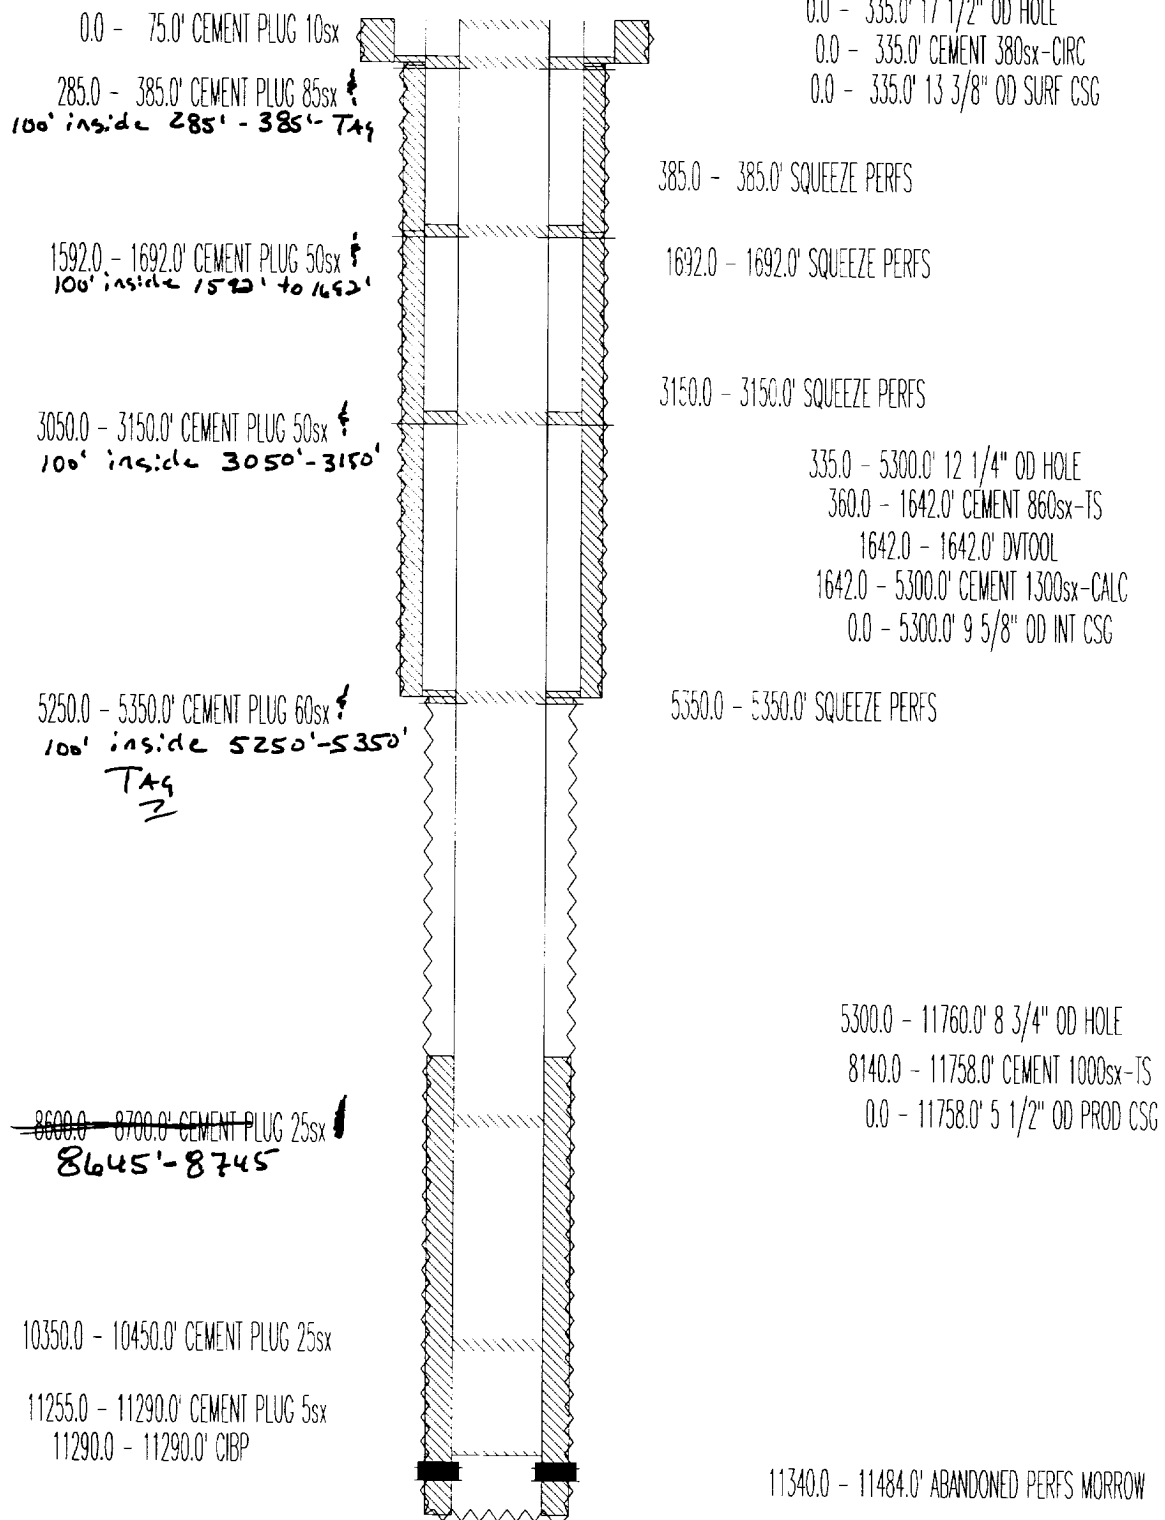

PBTD: 11710'

TD: 11760'

Notify OCD 24 hrs. prior to any work done

Salt gel mud consisting of 10#
Brine W/25# of gel per bbl
must be placed between each plug