


Operator Mineral Technologies Inc.
 Well Mary Federal #1
 Unit H Section 11 Township 23 Range 25
 API # 30-015-20785

TOPS

Neef	Surface
Co. Sheep	
Neef	1800
Dela	~ 2300
Base Spring	4952
Wolfcamp	8542
Penn	9620
Strawn	9850
Atoka	10309
McAraw Cimestone	10710
McAraw Clastics	11000
Barnett	11502

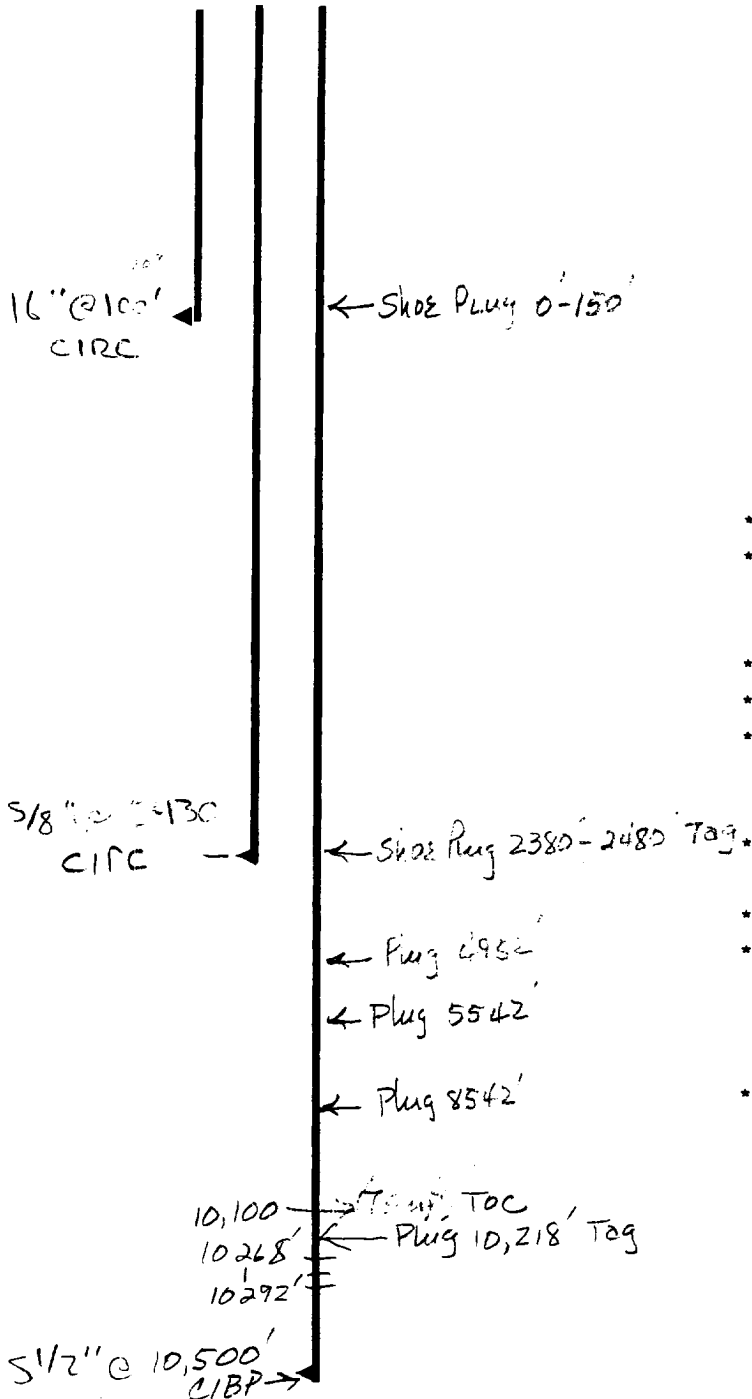

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

10