


R-111-P

Operator Pacific Sun, Inc.
 Well Laguna Grande Fed. #1
 Unit I Section 28 Township 23 Range 29
 API # 30-0

TOPS

Rustler	210
Salado	~ 4cc
B Salt	~ 2720
Delaware	3000
Bone Spring	6718
Wolfcamp	9950
Pern	11504
Strawn	11698
Atoka	11887
Morrow Limestone	12730
Morrow Classics	12993

350
2770

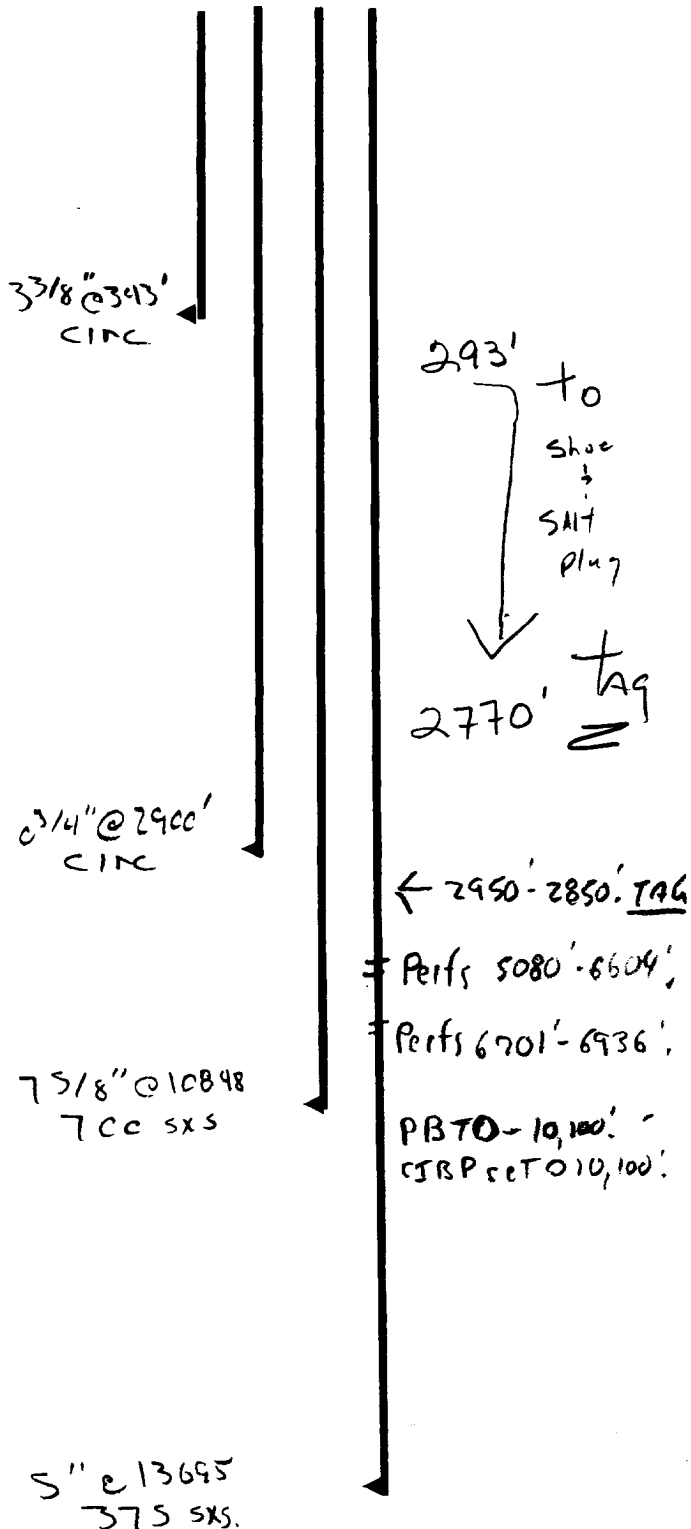

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

MS