

Operator DASS ENT

Well JAMES RANE ut. #11

Unit E Section 36 Township 22 Range 30

API # 30-015-23377

C-103 Approved to plug BACK to T.A well 6-5-02
well is R-111-P

TOPS

Salt 576

B. Salt 3551

Yates

Glorieta

Delaware 3842

Bone Sp. 7665

Abo


Wolfcamp 1092

Morrow 13510

Devonian

Fusselman

Other Rustler 277

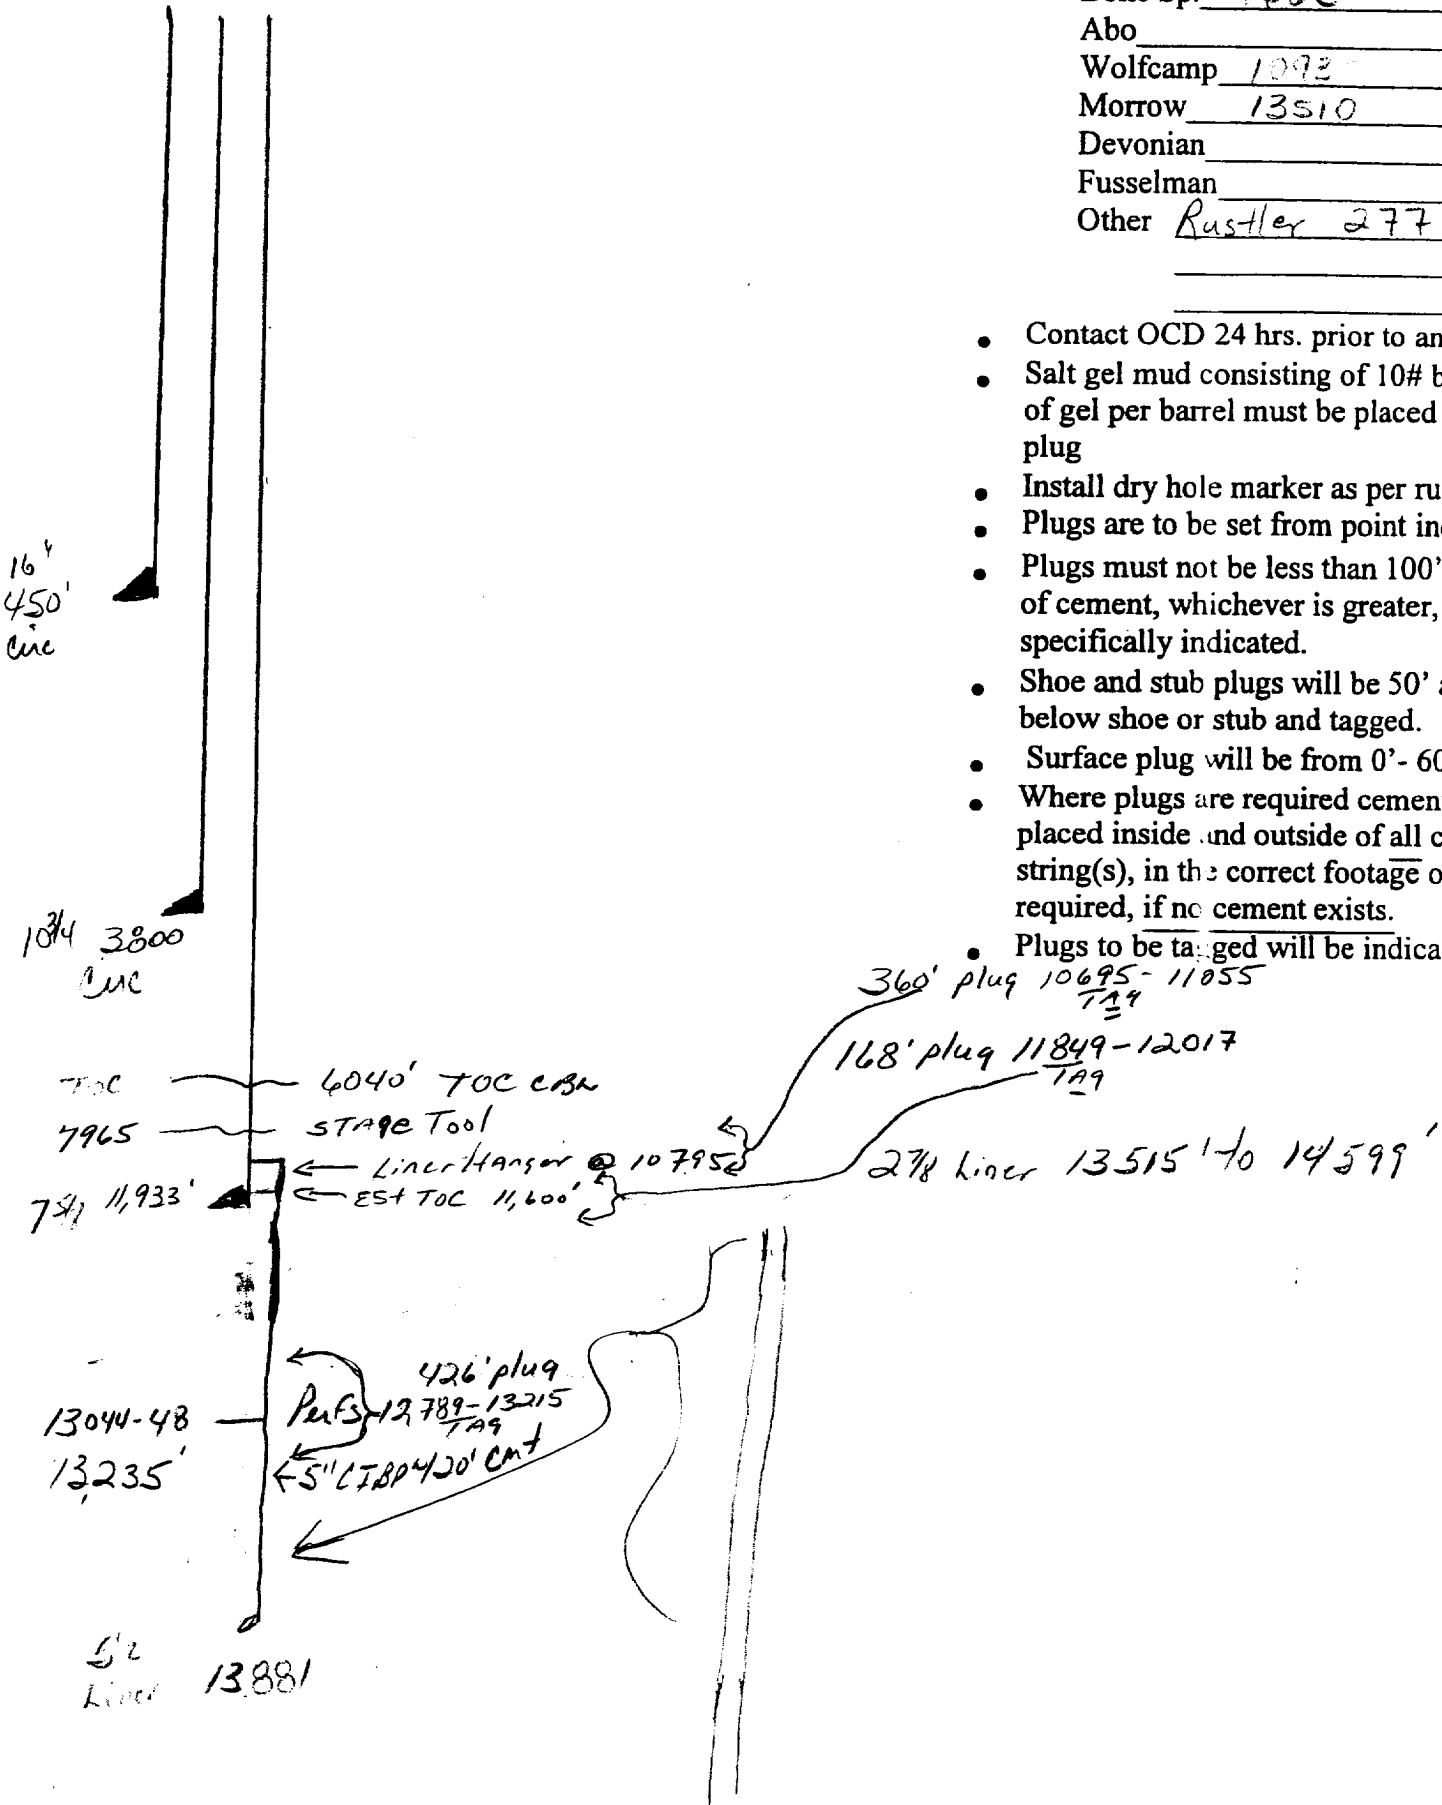

- Contact OCD 24 hrs. prior to any work done
- Salt gel mud consisting of 10# brine with 2% of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up
- Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.