


Operator Ray  
Well Shoe  
Unit I Section 11 Township 25 Range 11  
API # 30-0 11 - 25 - 25

TOPS

Yates  
T. Salt 170  
B. Salt 170  
Glorieta  
Bone Sp.  
Abo  
Wolfcamp  
Morrow  
Devonian  
Fusselman  
Other De la Vina 1875

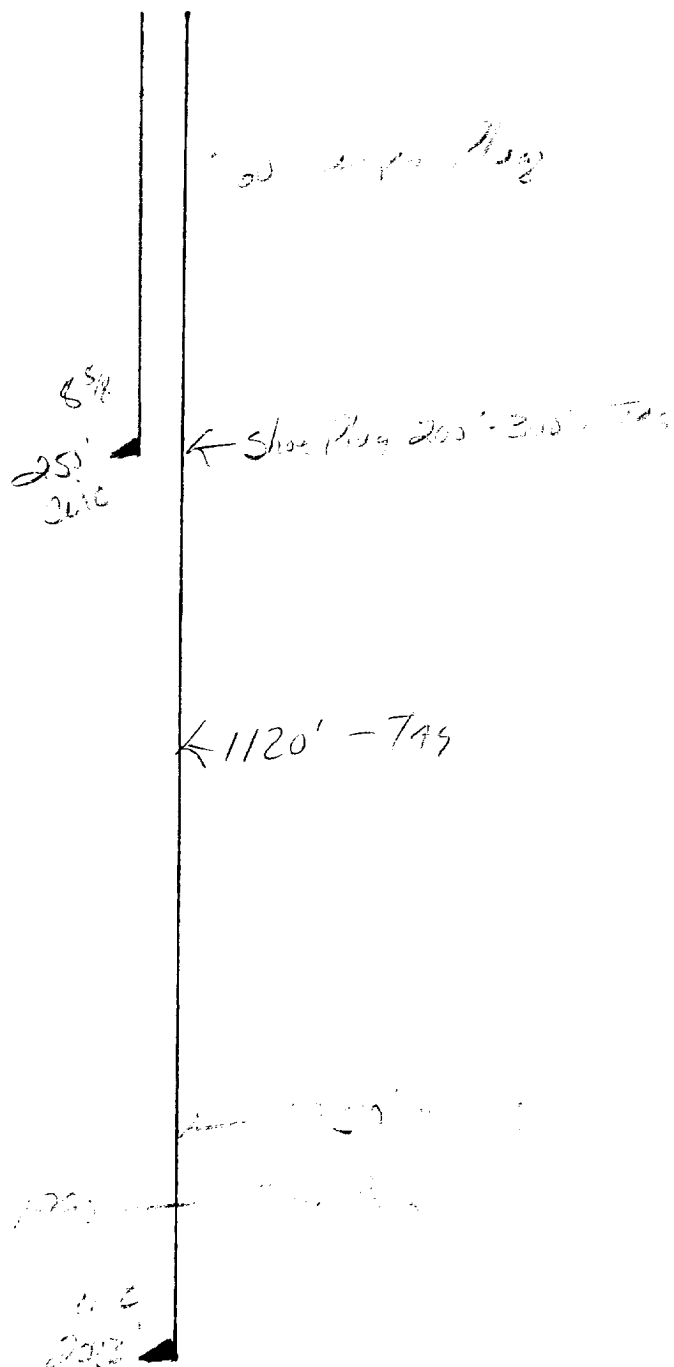

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 100# of gel per barrel must be placed between plugs.
- Install dry hole marker as per rule 202.B.1.
- Plugs are to be set from point indicated up to point indicated down. Plugs must not be less than 100' or 25 Sacs of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'.
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.