

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

RECEIVED

FEB 11 11 05 AM '93

FORM APPROVED
Budget Bureau No. 1004-0135
Expires September 30, 1990

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.

SUBMIT IN TRIPLICATE

RECEIVED

1. Type of Well ☐ Oil Well ☐ Gas Well ☒ Other	Gas Storage Well	3. Lease Designation and Serial No. NM-22207
2. Name of Operator	El Paso Natural Gas Co.	6. If Initial, Abandon or Test Name
3. Address and Telephone No.	P.O. Box 1492, El Paso, Texas 79978 (915) 541-2600	7. If U.S. or C.A. Agreement Designation
4. Location of Well (Feetage, Sec., T., R., M., or Survey Description)	2209' FEL & 935' FNL SEC. 34, T-25-S, R-24-E	8. Well Name and No. W.I.. #10
		9. API Well No.
		10. Field and Pool, or Exploratory Area Wsh. Rnch Mor.
		11. County or Parish, State Eddy Co., N.M.

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION
☒ Notice of Intent	☐ Abandonment
☐ Subsequent Report	☐ Recompletion
☐ Final Abandonment Notice	☐ Plugging Back
	☐ Casing Repair
	☒ Altering Casing
	☐ Other
	Inspect and Cement

(Note: Report results of multiple completions on Well Completion or Recompletion Report and Log form.)

13. Describe Proposed or Completed Operations (Clearly state all pertinent details and give pertinent data, including estimated date of starting any proposed work. If well is permanently drilled, give subsurface locations and measures and true vertical depths for all markers and other pertinent to this work.)

- | | |
|---|--------------------------------|
| 1) MI & RU PU & Surface Equipment | 13) Run Bit & Drill Collars |
| 2) RU WL (Run GR, JB & Set Plug in Pkr) | & Drill Out Ret. & Cement |
| 3) Load Tbg, Remove WH & Install BOP | 14) Pressure-Test Prod Csg |
| 4) Release Tbg & POOH & Inspect | 15) Run Cement Bond Log |
| 5) Run CBL and Tag TOC | 16) Retrieve BP & Lay Down |
| 6) Run Casing Inspection Log | Work String |
| 7) Run BP & Set Below TOC | 17) Test In-Hole w/Seal |
| 8) Run Perf Gun & Perf Prod Csg | Assembly & Prod Tbg |
| 9) Run Cement Ret. & Set Above Perfs | 18) Fill Annulus w/Pkr Fluid |
| 10) Pump Cement & Circ to Surface | 19) Swab Well to Equalize |
| 11) Wait on Cement | 20) RU WL & Fish Plug from Pkr |
| 12) Sting out of Cement Ret. & Lay Down | 21) Flow Well to Clean-up |
| Work String | 22) Return Well to Service |

14. I hereby certify that the foregoing is true and correct.

Reservoir Engineer

2/05/93

Signed David R. Brewster

Title

Date

(This space for Federal or State official use)

Approved by DAVID R. GLASS
Consent of approval, if any.

Title


PETROLEUM ENGINEER

Date

2-17-93

W.I. FEDERAL # 10
(Current Wellbore)

Location:
Sec 34, T-25S, R-24E
Eddy County, New Mexico

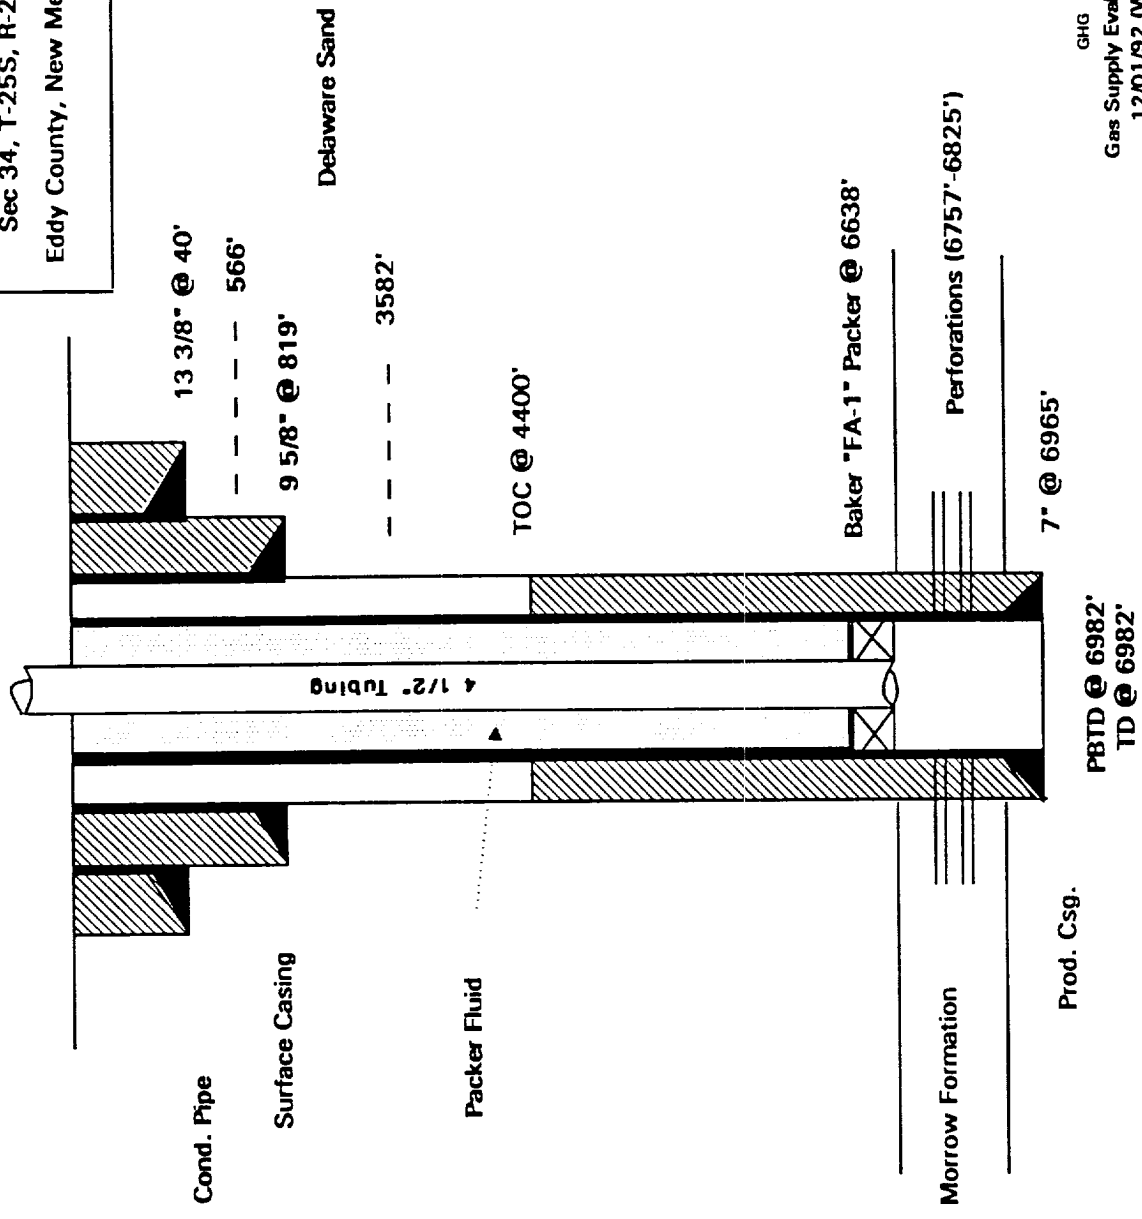

GHG
Gas Supply Evaluations
12/01/92 (W110BP)