


Operator D. J. 10154 A.C.H.
 Well Wh. to City 11/3rd #2
 Unit J Section 14 Township 25 Range 16
 API # 30-015-25661

TOPS

Yates
 T. Salt 411
 B. Salt 1689
 Glorieta
 Bone Sp. 5455
 Abo
 Wolfcamp
 Morrow
 Devonian
 Fusselman
 Other Delaware 1948

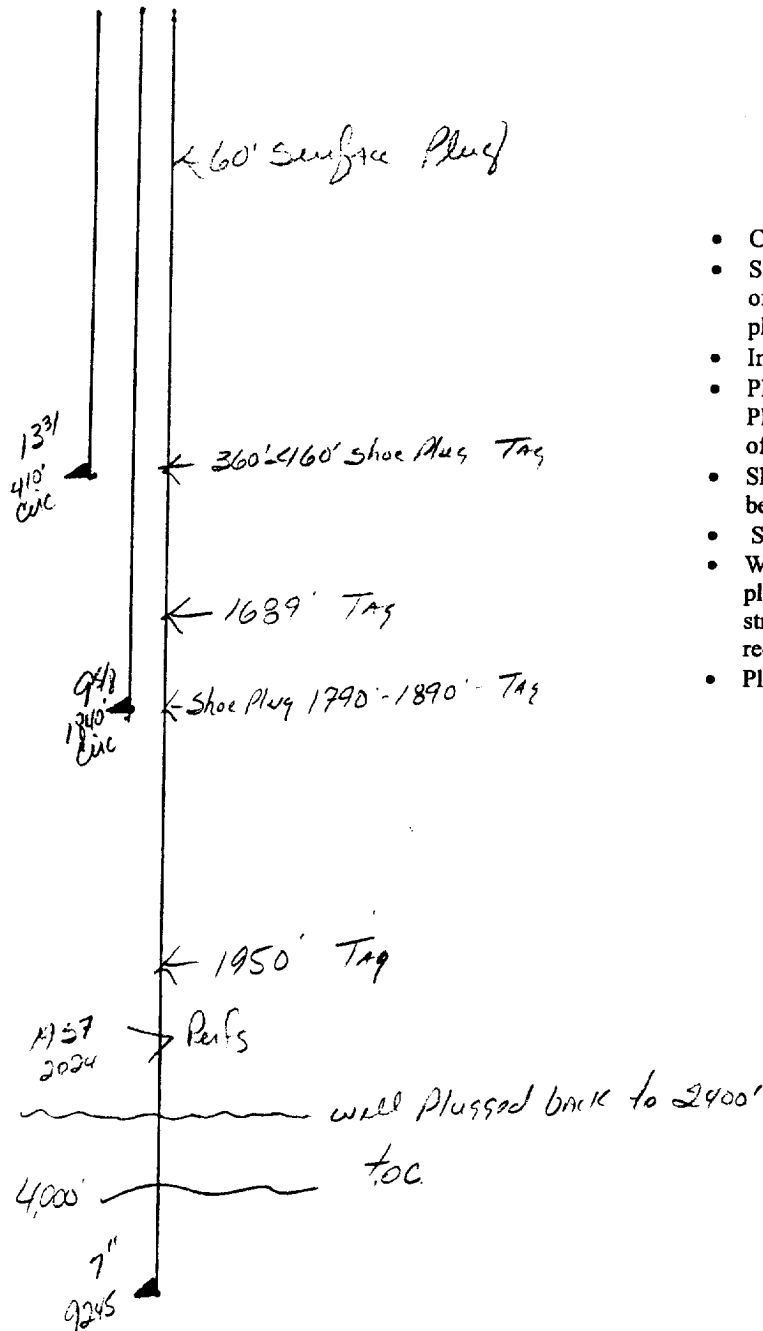

- Contact OCD 24 hrs. prior to any work done.
- Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug
- Install dry hole marker as per rule 202.B.2
- Plugs are to be set from point indicated up. Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater.
- Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- Surface plug will be from 0' - 60'
- Where plugs are required cement must be placed inside and outside of all casing string(s), in the correct footage or sacks required, if no cement exists.
- Plugs to be tagged will be indicated.