

8

H2S Contingency Plan

(Emergency Response and Public Protection Plan)


30-045-32662

State Gas Com "M" # 3

XTO ENERGY INC.

PREPARED BY:
Al Lara

Office: 970-564-1103
Cell: 970-560-1349

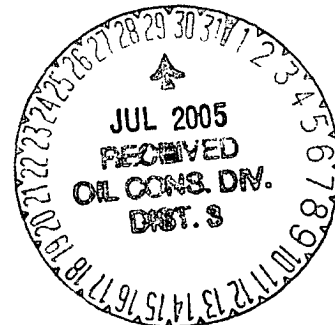

H2S Contingency Plan

Company Name: XTO Energy, INC.
Address: 2700 Farmington Avenue Farmington, NM 87401
Phone: (505) 324-1090

Well Name: State Gas Com "M"#3
TD: 2,807ft
Location: Lot M sec16 31n 12w 880' FSL 1040' FWL
Field Name: Basin Fruitland Coal/Aztec Pictured Cliffs
Surface Casing: 225 '
H2S Formation and Depth: TBD after surface casing cemented

OPERATIONS ENGINEER

Jeff Patton
Office: (505) 324-1090

FIELD FOREMAN

Don Johnson
Office (505) 324-1090
Cell: (432) 559-2961

RIG CONTRACTOR

Pense Brothers
(719) 859-3640

CONTRACT SAFETY COMPANY

Jacobs Engineering
Al Lara
Office (970) 564-1103
Cell (970) 560-1349

XTO SAFETY CONTACT

Jeff Clement
Office: (505) 324-1090
Cell: (505) 215-0533

CONTENTS

| | | |
|------|---|---|
| 1.00 | PURPOSE..... | 4 |
| 2.00 | GENERAL INFORMATION ON AND PHYSIOLOGICAL RESPONSES TO HYDROGEN SULFIDE (H ₂ S) AND SULFUR DIOXIDE (SO ₂)..... | 5 |
| 2.10 | HYDROGEN SULFIDE (H ₂ S)..... | 5 |
| 2.20 | SULFUR DIOXIDE (SO ₂) | 5 |
| 2.30 | TOXICITY CHART | 6 |
| 3.00 | TREATMENT PROCEDURES FOR H ₂ S AND SO ₂ EXPOSURE | 6 |
| 4.00 | OPERATIONAL PRECAUTIONS AND PROCEDURES | 7 |
| 4.10 | LOCATION LAYOUT..... | 7 |
| 4.20 | OPERATING PROCEDURES..... | 9 |
| 4.30 | OPERATING CONDITIONS | 9 |

| | | |
|------|---|----|
| 5.00 | HYDROGEN SULFIDE EMERGENCY PROCEDURES..... | 11 |
| 6.00 | TRAINING PROGRAM | 12 |
| 7.00 | PROTECTION OF THE GENERAL PUBLIC | 14 |
| 7.10 | NOTIFICATION OF POTENTIAL DANGER..... | 14 |
| 7.20 | EMERGENCY EVACUATION AND ISOLATION OF DANGER AREA | 14 |

APPENDICES

| | |
|------------|---|
| APPENDIX A | AREA MAP |
| APPENDIX B | LOCATION LAYOUT |
| APPENDIX C | EMERGENCY CONTACT LIST |
| APPENDIX D | H ₂ S RADIUS OF EXPOSURE |
| APPENDIX E | H ₂ S RADIUS OF EXPOSURE MAP |
| APPENDIX F | HYDROGEN SULFIDE MSDS |
| APPENDIX G | EMPLOYEE SIGNOFF SHEET |

1.00 PURPOSE

This Emergency Response Plan and Public Protection Plan (Plan) is specific to the State Gas Com M # 3 well location operated by XTO Energy, Inc. (XTO). This document is designed to provide for the safety and welfare of XTO and contract personnel, the community, the environment, and property.

This Plan establishes evacuation procedures, assigns response duties to specific individuals, provides for notification of outside agencies, and provides details of actions to alert and protect the public. This Plan will be activated immediately upon the detection of the release of a potentially hazardous volume of hydrogen sulfide (H₂S).

2.00 GENERAL INFORMATION ON AND PHYSIOLOGICAL RESPONSES TO HYDROGEN SULFIDE (H₂S) AND SULFUR DIOXIDE (SO₂)

2.10 HYDROGEN SULFIDE (H₂S)

Hydrogen sulfide is a flammable, highly toxic, colorless gas that is heavier than air, with the odor of rotten eggs. It can be detected by smell at a concentration in air of only 0.002 parts per million (ppm). Above concentrations of 100 ppm, it will deaden the sense of

smell in a few minutes, and at a concentration of 700 ppm, a single breath can be fatal. If ignited, it burns with a blue flame. In still air it tends to accumulate in low places in dangerous concentrations. However, if it is warmer than the surrounding air, it may tend to rise. The upper flammability limit of H₂S in air is 44% and the lower flammability in air is 4%.

Breathing low concentrations of H₂S can cause headaches. Higher concentrations (0.01 percent by volume) cause irritation of the eyes, nose, throat, and lungs. Eyes become red and swollen, accompanied by sharp pain in more severe cases. Still higher concentrations (0.05 percent by volume) cause dizziness, unconsciousness, and failure of respiration.

The Threshold Limit Value (TLV) is 10 ppm (0.001%) in air. This is the limit for eight hours of continuous exposure as recommended by the American Conference of Governmental Industrial Hygienists. The health and safety reference values of various concentrations of H₂S are listed in the toxicity chart below. A Manufacturers Safety Data Sheet (MSDS) for hydrogen sulfide is included in Appendix D.

2.20 SULFUR DIOXIDE (SO₂)

Sulfur dioxide is formed with the burning of hydrogen sulfide gas. Sulfur dioxide is a pungent, irritating, suffocating, colorless gas. This gas is normally heavier than air and concentrations above 400 ppm are considered dangerous for even brief exposures.

Under special circumstances hydrogen sulfide gas may be ignited in order to dissipate a gas cloud and reduce the impact on a local area. Often these burning temperatures are enough to raise and mix the SO₂ with air in a ratio well below toxic levels. However, great care and proper monitoring should be used when this is attempted.

Due to the irritating effect of SO₂ at low concentrations of less than 5 ppm, there is usually no doubt as to its presence in an area, which provides better warning characteristics than H₂S.

2.30 TOXICITY CHART

| NAME | SPECIFIC GRAVITY ¹ | TLV ² (ppm) | HAZARDOUS LIMIT ³ | LETHAL CONCENTRATION ⁴ |
|------------------|-------------------------------|------------------------|------------------------------|-----------------------------------|
| Hydrogen Sulfide | 1.18 | 10 | 100 ppm/1 hr. | 700 ppm |
| Sulfur Dioxide | 2.21 | 2 | 50 ppm/1 hr. | 400 ppm |

Notes:

- (1) Specific gravity of air = 1.00.
- (2) TLV - Threshold Limit Value.
- (3) Hazardous Limit - concentration that may cause death with short term exposure.
- (4) Lethal concentration - Concentration that may cause death with only a few breaths.

3.00 TREATMENT PROCEDURES FOR H₂S AND SO₂ EXPOSURE

- A. Remove the patient to fresh air. Personnel should **always** use fresh air breathing equipment when entering an area to retrieve a person who has been overcome with H₂S.

- B. Call a physician and get patient under his care as soon as possible.
- C. If breathing has ceased, begin artificial respiration immediately. Give cardiopulmonary resuscitation (CPR) only if there is no pulse and no breathing. Continue revival efforts until physician arrives or, if patient is mobile and it is determined that he should go to the hospital, continue oxygen inhalation under the physician's direction.
- D. Administer oxygen to help eliminate toxic substances from blood stream.
- E. Keep the patient at rest and protect from chilling.

4.00 INDIVIDUAL RESPONSIBILITIES

It is the responsibility of *all personnel* on the location to familiarize themselves with the procedures outlined in this contingency plan.

- A. All Personnel
 - 1. Responsible for their assigned safety equipment.
 - 2. Responsible for familiarizing themselves with the location of all safety equipment.
 - 3. Responsible for reporting any indications of H₂S to those in the area and to a supervisor.
- B. Operations Supervisor
 - 1. Responsible for thoroughly understanding and seeing that all aspects of this contingency plan are enforced.
 - 2. Responsible for implementing all phases of this contingency plan.
 - 3. Responsible for keeping a minimum of personnel on the location during expected hazardous operations.
 - 4. Responsible for coordinating all well site operations and communications in the event that an emergency condition develops.
 - 5. Responsible for ensuring that all visitors receive and H₂S safety orientation. A visitors log will be maintained as well as a list of all personnel on location after drilling has progressed to the suspected H₂S formation.

4.10 LOCATION LAYOUT

The location of at least two pre-determined safe areas to assemble at in the event of an emergency. These locations should be located 180 degrees to one another, and in the direction of the prevailing winds.

- A. H₂S rig monitor with at least three heads. One located at the bell nipple, one located at the shale shaker, and a third one on the rig floor.
 - The location and type of all air masks. Self-contained breathing apparatus for use by rig personnel for this well will be kept in the following location(s):

| | |
|-------------------------------|--------------------------------------|
| Type: 1-30 min rescue unit | Location: Safety Contractors Trailer |
| Type: 1-30 minute rescue unit | Location: All Trailers |
| Type: 2-30 min rescue unit | Location: Briefing Area #1 |
| Type: 2-30 min rescue unit | Location: Briefing Area #2 |
| Type: 5-Hoseline work unit | Location: Safety Trailer |
| Type: 3-5 min escape unit | Location: Rig Floor |
| Type: 1-5 min escape unit | Location: Tubing board (derrick) |

If a cascade system is utilized, indicate the location(s);

| | |
|---------------------------|---|
| Type: 10 cylinder cascade | Location: Safety Trailer with 10 cylinder cascade is to be located by rig at base of catwalk. |
|---------------------------|---|

The location of windsocks or streamers. The wind direction indicators for this well will be located at:

| | |
|----------------|----------------------------|
| Type: Windsock | Location: Briefing Area #1 |
| Type: Windsock | Location: Briefing Area #2 |
| Type: Windsock | Location: On floor & pits |

The location of any other safety equipment used, such as flare guns or bug blowers.

| | |
|-----------------|--------------------------|
| Type: Flare gun | Location: Safety Trailer |
|-----------------|--------------------------|

The location of all telephones and/or means of communications are as follows:

| | |
|------------------|--|
| Type: Cell phone | Location: Drilling Superintendent Tool Pusher |
|------------------|--|

Warning Signs:

“No Smoking” signs should be strategically located around the rig and rig location. The following locations are appropriate:

Rig Floor
Dog House
Substructure
Lower landing of all stairs to rig floor
Mud pits
Shale shaker

“Poison Gas” signs should also be strategically located around the rig and rig location. The following locations are appropriate:

All entrances leading to location.
Lower landing of all stairs leading to rig floor.

All areas around substructure, including mud pits and shale shaker.
Various points along the perimeter of the radius of exposure.

NOTE: *All warnings should be black and yellow in color and of readable size at a distance.*

4.20 OPERATING PROCEDURES

The following operating procedures will be utilized for drilling in areas with H₂S.

- A. Plan of operation for handling gas kicks and other problems. Any gas kick will be controlled by using approved well control techniques. Upon evidence that ambient H₂S concentrations have reached 10 ppm, all non-essential personnel will be evacuated to pre-determined safe areas. Personnel remaining on the rig floor will continue to control the well until the situation indicates the area is safe to re-enter.

Special Operations:

Drill Stem Tests: All drill stem tests must be closed chamber and conducted during daylight hours only.

Coring: After a core has been cut, circulate bottoms up and monitor for H₂S. If hole conditions (and/or detectors) indicate potentially hazardous conditions, put breathing equipment on (10) ten stands before core barrel reaches surface. Breathing equipment will be worn by all personnel while core barrel is pulled, broken out and opened, and until a safe atmosphere is indicated.

All equipment with potential for H₂S shall be suitable for H₂S service, i.e. Drill String, Casing, Well Head, Blowout Preventor equipment and trim, Rotating Head, Kill Lines, Choke Manifold and Lines.

A remote controlled choke will be installed prior to all H₂S drilling.

Mud system pH will be maintained at or above 10.0 with sufficient materials on location to maintain the required pH.

A flare pit will be located a minimum of 150' from wellhead and 30' from the reserve pit.

4.30 OPERATING CONDITIONS

Operating conditions are defined in three categories. A description of each of these conditions and the required action to take are given below.

A. **Condition I – Normal Operating Conditions, Potential Danger**

Characterized by: Normal Drilling Operations in zones which contain or may contain H₂S.

Warning Flag: Yellow

Alarm: None

Probable Occurrence: No detectable gas present at surface

General Action:

Know location of safety equipment.

Check safety equipment for proper function. Keep it available.

Be alert for a condition change.

Follow instructions of supervisor.

B. Condition II – Potential To Moderate Danger to Life

Characterized by: H₂S gas present. Concentration less than 10 ppm.

Warning Flag: Orange

Alarm: Flashing light at 10 ppm H₂S. Intermittent blasts on horn at 10 ppm H₂S.

Probable Occurrence: As drill gas.
As trip gas when circulating bottoms up.
When a core barrel is pulled.
When a well kick is circulated out.
Surface pressure, well flow or lost operations.
Equipment failure during testing operations.

General Action:

Follow instructions of supervisor.

Put on breathing equipment if directed, or if conditions warrant it.

Stay in “SAFE BRIEFING AREA” if instructed and not working to correct the problem.

The Drilling Superintendent will initiate action to reduce the H₂S concentration to zero.

C. Condition III - Moderate to Extreme Danger to Life

Characterized by: H₂S present in concentrations at or above 10 ppm. Critical well operations or well control problems. In the extreme, loss of well control.

Warning Flag: Red

Alarm: Flashing light and continuous blast on horn at 10 ppm H₂S.

Probable Occurrence: As drill gas.
As trip gas when circulating bottoms up.
When a core barrel is pulled.
When a well kick is circulated out.
Surface pressure, well flow or lost return problems.
Equipment failure during testing operations.

General Action:

Put on breathing equipment. Move to "SAFE BRIEFING AREA" and remain there if not working to correct or control problem.

Follow instructions of Drilling Superintendent or other supervisor.

The Drilling Superintendent will initiate emergency action as provided in the contingency plan and as appropriate to the actual conditions. If testing operations are in progress, the well will be shut in.

The Drilling Superintendent will conduct any necessary operations with an absolute minimum of personnel. All persons in the immediate area will wear a breathing apparatus. All other personnel will restrict their movements to those directed by the Superintendent.

If gas containing hydrogen sulfide (H₂S) is ignited, the burning hydrogen sulfide will be converted to sulfur dioxide which is poisonous.

5.00 HYDROGEN SULFIDE EMERGENCY PROCEDURES

The procedures listed below apply to drilling and testing operations.

- A.** If at any time during Condition I, the mud logger, mud engineer, or any other person detects H₂S, he will notify the Drilling Superintendent. All personnel should keep alert to the Drilling Superintendent's orders. He will:
1. Immediately begin to ascertain the cause or the source of the H₂S and take steps to reduce the H₂S concentration to zero. This should include having the mud engineer run a sulfide and pH determination on the flowline mud if water-base mud is in use. If an oil-base mud is in use, the mud engineer should check the lime content of the mud.
 2. Order non-essential personnel out of the potential danger area.
 3. Order all personnel to check their safety equipment to see that it is working properly and in the proper location. Persons without breathing equipment will not be allowed to work in a hazard area.
 4. Notify the Contract Supervisor of condition and action taken.
 5. Continue gas monitoring activities and continue with caution.
 6. Display the orange warning flag.
- B.** If the H₂S concentration exceed 10 PPM the following steps will be taken:
1. Put on breathing equipment.
 2. Display red flag.
 3. Driller – prepare to shut the well in.
 - a. Pick up pipe to get Kelly out of BOP's.
 - b. Close BOP's if necessary.
 4. If testing operations are in progress, the well will be shut-in.
 5. Help anyone who may be affected by gas.
 6. Evacuate quickly to the "SAFE BRIEFING AREA" if instructed or conditions warrant.

- C. In the event a potentially hazardous volume of H₂S is released into the atmosphere, the following steps must be taken to alert the public:
1. Remove all rig personnel from the danger area and assembly at a pre-determined safe area, preferable upwind from the well site.
 2. Alert the drilling office, public safety personnel, regulatory agencies, and the general public of the existence and location of an H₂S release. See List of Emergency Telephone Numbers.
 3. Assign personnel to block any public road (and access road to location) at the boundary of the area of exposure. Any unauthorized people within the area should be informed that an emergency exists and be ordered to leave immediately.
 4. Request assistance from public safety personnel to control traffic and/or evacuate people from the threatened area.

6.0 TRAINING PROGRAM

All personnel associated with the drilling operations will receive training to ensure efficient and correct action in all situations. This training will be in the general areas of: (A.) Personnel Safety (B.) Rig Operations (C.) Well Control Procedures.

- A. **Personnel Safety Training** All Personnel shall have received H₂S training in the following areas:
1. Hazards and characteristics of H₂S.
 2. Effect on mental components of the system.
 3. Safety precautions.
 4. Operation of safety equipment and life support systems.
 5. Corrective action and shutdown procedures.

- B. **Rig Operations** All rig personnel shall have received training in the following areas.
1. Well control procedures.
 2. Layout and operations of the well control equipment.
- NOTE: *Proficiency will be developed through BOP drills which will be documented by the Drilling Superintendent*

- C. **Service Company Personnel** All service personnel shall have been trained by their employers in the hazards and characteristics of H₂S and the operation of safety equipment and life support systems.

Visitors All first time visitors to the location will be required to attend a safety orientation. The Drilling Superintendent shall be responsible for this orientation and he shall see that every visitor is logged correctly.

Public The public within the area of exposure shall be given an advance briefing by the Drilling Superintendent. This briefing must include the following elements:

Hazards and characteristics of hydrogen sulfide. It is an extremely dangerous gas. It is normally detectable by its "rotten egg" odor, but odor is not a reliable means of detections because the sense of smell may be dulled or lost due to intake of the gas. It is colorless, transparent and flammable. It is heavier than air and may accumulate in low places.

The necessity of an emergency action plan. Due to the danger of persons exposed to hydrogen sulfide and the need for expeditious action should an emergency occur, this action plan will be put into effect if and when a leak occurs.

The location of hydrogen sulfide within the area of exposure at the drilling location.

The manner in which the public will be notified of an emergency.

Steps to be taken in case of an emergency.

Abandon danger area.

Notify necessary agencies and request assistance for controlling traffic and evacuating people.

7.00 PROTECTION OF THE GENERAL PUBLIC

7.10 NOTIFICATION OF POTENTIAL DANGER

- Warning signs will be prominently displayed at the well site and at all access points.

7.20 EMERGENCY EVACUATION AND ISOLATION OF DANGER AREA

In the event toxic gases are released in such quantities as to be a possible hazard to the public the following steps (in addition to the procedure outlined in Section 5.0) will be taken by the person in charge:

- Choose a command post site in a safe area.
- Alert by telephone the Incident Commander or the Safety Manager and notify the person of the situation and your choice of a command posts.
- Notify local Law Enforcement Officials of the need to restrict entry to the area and the **location of your command post**. Request their assistance in restricting entry into the danger area by placing roadblocks or barriers in safe areas.

Note-Alternate command posts and roadblocks may be required, the Incident Commander may make changes in the locations listed above. Care should be taken to notify all responders of the changes.

- If evacuation cannot be accomplished in a timely manner and the H₂S release is posing an immediate threat to human life, the Incident Commander may chose to ignite the gas. Because of the increased risks igniting the gas can pose for response personnel, only the Incident Commander can give this order.

**APPENDIX C
EMERGENCY CONTACT LIST**

| | |
|---|--------------|
| EPA 24-Hour Spill Notification Number | 303-293-1788 |
| Department of Transportation National Response Center | 800-424-8802 |

Medical Personnel:

| | |
|--|--------------|
| Ambulance | 911 |
| Hospitals | |
| San Juan Regional Medical Center | 505-325-5011 |
| Lifeguard Air Emergency Services (life flight) | 800-345-7737 |

Firefighting & Public Safety Personnel:

| | |
|-------------------|--------------|
| Fire Department | 505-334-6622 |
| Police Department | 505-334-6622 |
| County Sheriff | 505-344-6622 |
| State Patrol | 505-325-7547 |

Government Agencies:

| | |
|--------------------------|--------------|
| County Health Department | 505-334-9481 |
| BLM Office | 505-599-8900 |

Rig Personnel:

| | |
|---------------------------------------|--------------|
| Jerry Lacy, Operations Superintendent | 505-324-1090 |
| Don Johnson, Company Man | 432-559-2961 |
| Jeff Patton, Drilling Superintendent | 505-324-1090 |
| Dale Brady, Tool Pusher | 505-327-5218 |

Service Companies:

| | |
|--|--------------|
| Pump Trucks: TBA | |
| Dirt Contactor: TBA | |
| H2S Safety Company: Jacobs Engineering | 970-564-1103 |
| Al Lara, Safety Supervisor | 970-564-1103 |

Emergency calls should dial **911**.

Note: If 911 is unavailable, call the applicable County Sheriff Dispatch number.

APPENDIX G

EMPLOYEE SIGNOFF SHEET

I have read the To XTO Energy, Inc. **Emergency Response Plan/Public Protection Plan** and understand its contents. I understand my personal responsibilities under this policy and will make use of this information to contribute to safety of the public and for my own personal safety while an employee of XTO Energy, Inc.

Signed

Date _____

[illegible]