

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUBMIT IN TRIPLICATE*
(Other instructions on re-
verse side)

Form approved.
Budget Bureau No. 42-R1424.

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals.)

1. OIL WELL ☐ GAS WELL ☒ OTHER ☐		5. LEASE DESIGNATION AND SERIAL NO. SP-078094	
2. NAME OF OPERATOR Beta Development Co.		6. IF INDIAN, ALLOTTEE OR TRIBE NAME	
3. ADDRESS OF OPERATOR 125 Pet. Club Plaza, Farmington, New Mexico 87401		7. UNIT AGREEMENT NAME	
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements.* See also space 17 below.) At surface 1140/S 790/W 1830/S 1850/W		8. FARM OR LEASE NAME Mancock Federal	
14. PERMIT NO.		9. WELL NO. 2	
15. ELEVATIONS (Show whether DF, RT, GR, etc.) 6364' G. R.		10. FIELD AND POOL, OR WILDCAT Basin Dakota	
		11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA 14-27N-11W NMPH	
		12. COUNTY OR PARISH San Juan	
		13. STATE New Mexico	

16. Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF ☐
FRACTURE TREAT ☐
SHOOT OR ACIDIZE ☐
REPAIR WELL ☒
(Other) ☐

PULL OR ALTER CASING ☐
MULTIPLE COMPLETE ☐
ABANDON* ☐
CHANGE PLANS ☐

SUBSEQUENT REPORT OF:

WATER SHUT-OFF ☐
FRACTURE TREATMENT ☐
SHOOTING OR ACIDIZING ☐
(Other) ☐



REPAIRING WELL ☐
ALTERING CASING ☐
ABANDONMENT* ☐

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Repair casing leak as follows:

Rig up work over unit, pull 1½" tubing with Model "D" assembly on bottom stand in derrick, pick up a 2 3/8" J-55 working string, go in hole with Bakers D-1 plug, set in Model "D" production packer, test plug and casing to 2000 lbs. find bottom hole in casing with packer, find top hole in casing with packer, pull and lay down packer, go in hole open ended spot cement over top and bottom holes pick up tubing approximately 300' above top hole spot cement down tubing, close back side and squeeze all holes in casing, hold squeeze pressure until there is no flow back. Pull out of hole, wait on cement 16 to 18 hrs. drill out cement and test casing to 2000 lbs. retrieve D-1 plug lay down 2 3/8" tubing run 1½" tubing with seal assembly back in hole. Swab well off and acidize if necessary.

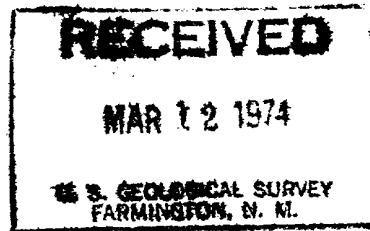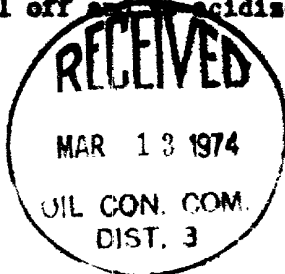

18. I hereby certify that the foregoing is true and correct

SIGNED *D. E. B. [Signature]*

TITLE Superintendent

DATE 3-6-74

(This space for Federal or State office use)

APPROVED BY _____
CONDITIONS OF APPROVAL, IF ANY:

TITLE _____

DATE _____

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not set off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount and method of casing of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking for approval of the abandonment.