Form 3160-5 (December 1989)

UNITED STATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: September 30, 1990

5. Lease Designation and Serial No.

SF-078902A

SUNDRY NOTICES AND REPORTS ON WELLS

SUBMIT IN	I TRIPLICATE	7. If Unit or CA, Agreement Designation
Type of Well OIL WELL GAS WELL OTHE	ER	เริ่มก็ยชูซร°เรื่อที่yon Unit 183E
2. Name of Operator Amoco Production Company Melissa Velasco 3. Address and Telephone No. P.O. Box 3092 Houston, TX 77253 (281) 366-2548 4. Location of Well (Footage, Sec., T., R., M., or Survey Description)		9. API Well No.
		30-045-26027
		10. Field and Pool, or Exploratory Area Basin Dakota
		11. County or Parish, State
60' FNL 1570' FWL Sec 9 T	27N R12W	San Juan New Mexico
) TO INDICATE NATURE OF NOTICE, RE	PORT, OR OTHER DATA
TYPE OF SUBMISSION	TYPE OF AC	
Notice of Intent	Abandonment	Change of Plans
	Recompletion	New Construction
Subsequent Report	Plugging Back	Non-Routine Fracturing
Final Abandonment Notice	Casing Repair	Water Shut-Off
	☐ Altering Casing ☐ Other	Conversion to Injection
		iple completion on Well Completion or
3. Describe Proposed or Completed Operations. (Clear	ly state all pertinent details, and give pertinent dates, inclu tions and measured and true vertical depths for all markers	iding estimated date of starting any proposed w
14. I hereby certify that the foregoing is fue and corre	SEP	2000
	Control of the Contro	Date
Signed // CLUMA // WOR		
- 1100 MG VAVIVOW		-1- /
Signed // CLUMA YEV (C)	Title	Date


GCU 183E Original Completion 1/85 TD = 6,110' PBTD = 2,820' (plugged back 12/97) Page 2 of 2

- Notify regulatory agencies (BLM, NMOCD, FIMO) 24 hours in advance of plugging activity. <u>Contact BLM and indicate well is allotted</u> (FIMO regulations effective April 1, 1997).
- 2. Check location for anchors. Install if necessary. Test anchors.
- 3. MIRUSU. Blow down well. Kill if necessary with fresh water. NDWH. NUBOP.
- 4. Pick up 2 3/8" tubing worksting, TIH and tag cement plug at 2,820'. TOH to 2,260', spot cement plug from 2,260' to 2,160' (29 sacks). TOH to 1,381', spot cement plug from 1,381' to 1,281' (29 sacks). TOH to 1,050', spot cement plug from 1,050' to 950' (29 sacks). TOH to 365', spot cement plug from 365' to surface (104 sacks).
- NDBOP. Cut off casing and wellhead. Install PXA marker according to BLM or State requirements.
- 6. Contact FMC and ship surface equipment to yard or other location per instructions.
- 7. Provide workorder to Buddy Shaw for reclamation.
- 8. Rehabilitate location according to BLM or State requirements.

GCU 183E (DK)

C9 T27N-R12W, 660 FNL, 1570 FWL API 3004526027 SF-078902-A

Proposed PXA Wellbore Schematic

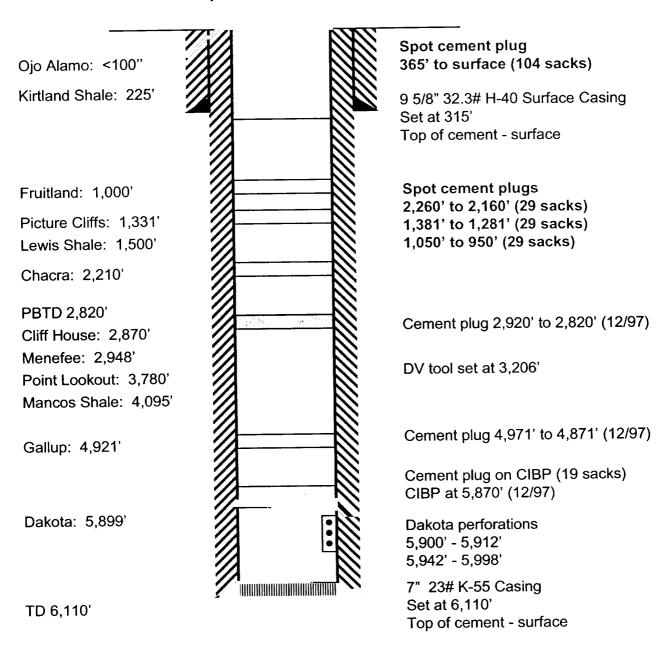

8/18/00 jkr

Not to scale