#### UNITED STATES

### DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT

[] COM <sub>08</sub> D( DISIL 3 9.	Lease Number SF-080713 If Indian, All. or Tribe Name Unit Agreement Name Sen Juan 30-6 Unit Well Name & Number San Juan 30-6 U #4: API Well No. 30-039-24319 Field and Pool Basin Fruitland Cocounty and State Rio Arriba Co, NM
[] COM <sub>08</sub> D( DIST. 3 9. 10.	Well Name & Number San Juan 30-6 U #4: API Well No. 30-039-24319 Field and Pool Basin Fruitland Co. County and State
10.	Field and Pool Basin Fruitland Coo County and State
REPORT. OTHER	
Change of Pla New Construct Non-Routine F Water Shut of Conversion to	ns cion Cracturing Ef
rrect. nistrator_Date trc	ECEIVED -4 PH 1:31
1 1	Water Shut of Conversion to ation  l according to the conversion t

Title 18 U.S.C. Section 1001, makes it a crime for any person knowingly and willfully to make any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

# San Juan 30-6 #435 PUMPING UNIT INSTALLATION PROCEDURE 7/28/99

# <u>Unit G, Section 13, T30N-R6W, Rio Arriba County, New Mexico</u> <u>Lat. 36.815670 / 36° 48.94'</u> <u>Long. 107.409790 / 107° 24.59'</u>

- 1. MIRU pulling unit.
- 2. NDWH / NU BOP. Kill if necessary with produced Fruitland coal water.
- 3. PU one joint of tubing and TIH to tag for fill.
- 4. TOOH, laying down 2-7/8" tubing (tubing is set @ 3146'. There are 101 joints of 2-7/8" 6.5# J-55 and a seating nipple @ 3123').
- 5. PU 4-3/4" bit and 2-3/8", 4.7#, J-55 EUE tubing and TIH to COTD. Circulate hole clean. (Note: PBTD is @ ~3147'.)
- 6. TIH w/ 2-3/8" tubing string configured for downhole pump and land @ 3142'. Purge valve will be on bottom, followed by pup joint, perforated sub, and seating nipple. Space out as needed with pup joints.
- 7. Hang tubing in donut. ND BOP / NUWH.
- 8. TIH w/ new 1.25" top hold down pump, 3/4" Grade D sucker rods w/ spray metal couplings, polished rod, and polished rod liner. (Note: Vendor contact is listed below)
- 9. Seat the downhole pump, hang horses head, and space out pump.
- 10. Load tubing, and pressure test.
- 11. Start pumping unit and test (adjust spacing as required).
- 12. RDMO.

COMPLY WITH ALL FEDERAL, STATE AND LOCAL RULES AND REGULATIONS RELATING TO OIL AND GAS OPERATIONS.

Prepared: D.W. Mussett


Pump vendor: ENERGY PUMP

Leo Noyes @ 564-2874

## San Juan 30-6 #435

### 07/28/99

### **Basin Fruitland Coal** Unit G, Section 13, T30N, R6W, Rio Arriba County, New Mexico

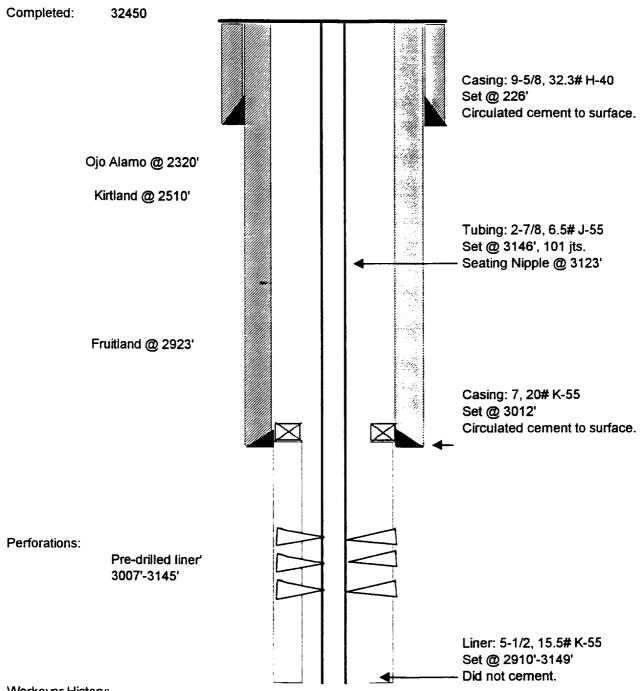

Workover History:

9/95 - install one180 HP Ajax natural gas comp PBTD 3147' 11/97 - Recav. Pull tbg & liner, CO, replaced tb and liner

TD 3149'