

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use Form 9-331-C for such proposals.)

1. oil ☐ gas ☒ other ☐2. NAME OF OPERATOR
Southland Royalty Company3. ADDRESS OF OPERATOR
P.O. Drawer 570, Farmington, New Mexico 87499

4. LOCATION OF WELL (REPORT LOCATION CLEARLY. See space 17 below.)

AT SURFACE: 1750' FSL & 1650' FWL

AT TOP PROD. INTERVAL:


AT TOTAL DEPTH:

16. CHECK APPROPRIATE BOX TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA


REQUEST FOR APPROVAL TO:

TEST WATER SHUT-OFF ☐
FRACTURE TREAT ☐
SHOOT OR ACIDIZE ☐
REPAIR WELL ☐
PULL OR ALTER CASING ☒
MULTIPLE COMPLETE ☐
CHANGE ZONES ☐
ABANDON* ☐
(other) ☐

SUBSEQUENT REPORT OF:

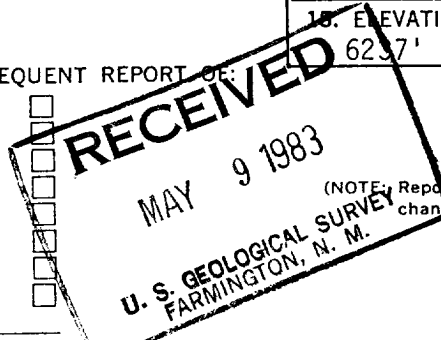

(NOTE: Report results of multiple completion or zone change on Form 9-330.)

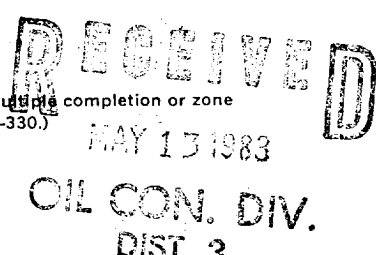

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

SOUTHLAND ROYALTY COMPANY proposes to repair a casing leak in the following manner:

- 1) MIRU
- 2) ND and install BOP. Pull tubing.
- 3) PU 1-1/2" drill pipe, bit and scraper, and clean out to 5500'.
- 4) Run Model RC packer and Model C bridge plug to locate casing leaks. Check for annular communication. (3-1/2" X 5-1/2" and 5-1/2" X open hole.) POOH.

CONTINUED OTHER SIDE

Subsurface Safety Valve: Manu. and Type _____ Set @ _____ Ft.

18. I hereby certify that the foregoing is true and correct

SIGNED Jimmy N. [Signature] TITLE Pet. Engineer DATE May 5, 1983

(This space for Federal or State office use)

APPROVED BY _____ TITLE _____ DATE _____

CONDITIONS OF APPROVAL, IF ANY:

MAY 13 1983
JAMES F. SMITH
DISTRICT ENGINEER

*See Instructions on Reverse Side

NMOC

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

GPO : 1976 O - 214-149

- 5) Run and set plugged Model B-1 cement retainer 50' below bottom hole. POOH.
- 6) TIH with Model RC packer to squeeze.
 - a) If annulus loads attempt to circulate cement.
 - b) If annulus will not hold fluid, squeeze with volume to cover Ojo Alamo. POOH. WOC 12 hours.
- 7) Pick up four drill collars and bit to drill out cement and retainer. Clean out to 5500', POOH.
- 8) Run and land 1-1/2" IJ tubing at 4973'. Nipple up. Swab to insure fluid entry.