

Form 3160-5
(June 1990)

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

5. Lease Designation and Serial No.
SF-065588

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.
Gioni B #1

9. API Well No.
30-045-12062

10. Field and Pool, or Exploratory Area
Pictured Cliffs/Fruitland Sand

11. County or Parish, State
San Juan, NM

1. Type of Well
☐ Oil Well ☒ Gas Well ☐ Other

2. Name of Operator
Amoco Production Company Attn: John Hampton

3. Address and Telephone No.
P.O. Box 800 Denver, Colorado 80201

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)
1190' FNL, 790' FWL Sec. 33, T30N-R9W Unit D

12. CHECK APPROPRIATE BOX(s) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION
☒ Notice of Intent	☐ Abandonment
☐ Subsequent Report	☐ Recompletion
☐ Final Abandonment Notice	☐ Plugging Back
	☐ Casing Repair
	☐ Altering Casing
	☒ Other <u>Packer/Tubing Repair</u>
	☐ Change of Plans
	☐ New Construction
	☐ Non-Routine Fracturing
	☐ Water Shut-Off
	☐ Conversion to Injection
	☐ Dispose Water

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)

Please see attachment for procedures.

APR 15 1992
OK TO 1. BLM
MAY 3

RECEIVED
BLM
APPROVED

APR 15 1992

AREA MANAGER

If you have any questions please contact Ed Hadlock @ (303) 830-4982.

14. I hereby certify that the foregoing is true and correct

Signed J. C. Hampton

Title Sr. Staff Admin. Supv.

Date 3/3/92

(This space for Federal or State office use)

MAILED

GIOMI B #1
BLANCO PC/BLANCO FRUITLAND SAND
SEC 33-30N-09W


REPAIR PROCEDURES

1. NOTE CASING, TUBING AND BRADENHEAD PRESSURES.
2. RIH ON SLICKLINE W/TBG PLUG X SET IN 1-1/8" BORE F NIPPLE @ 2400'.
3. BLOW DOWN FRUITLAND SIDE. KILL, IF NECESSARY, WITH 2% KCL WATER.
NDWH. NUBOP.
4. POOH W/1-1/4" TUBING AND BOTTOM HOLE SEAL ASSEMBLY.
5. VISUALLY INSPECT AND REPLACE BAD JOINTS.

NOTE: IF BAD JOINTS WERE IN THE BOTTOM 250' (ACROSS THE FRUITLAND
SAND PERFS) REPLACE WITH BLAST JOINTS OR AS HEAVY WALLED TUBING
AS POSSIBLE.

6. RIH W/1" X 5' PROD TUBE W/PUMP OUT PLUG, BAKER SEAL ASSEMBLY W/2
SEALS 1.9 X 1-1/4" 10 RD NON UPSET XOVER TO 1-1/4" 10 RD COLLAR,
1-1/8" BORE F NIPPLE AND SLIDING SLEEVE ON 1-1/4" TBG.
7. RIG UP HYDRO TEST X TEST TBG WHILE RIH TO 2000#.
8. LAND SEAL ASSEMBLY IN MODEL FA PKR AT 2400'.
9. NDBOP X NUWH.
10. PUMP OUT PLUG W/N2 X FLOW BOTH ZONES TO CLEAN UP.
11. SWAB PC IN IF NECESSARY.
12. TURN WELL OVER TO PRODUCTION.

GIOMI B 001 30
Location - 33D- 30N- 9W
DUAL FT-PC
Orig. Completion - 7/67
Last File Update - 1/89 by DDM

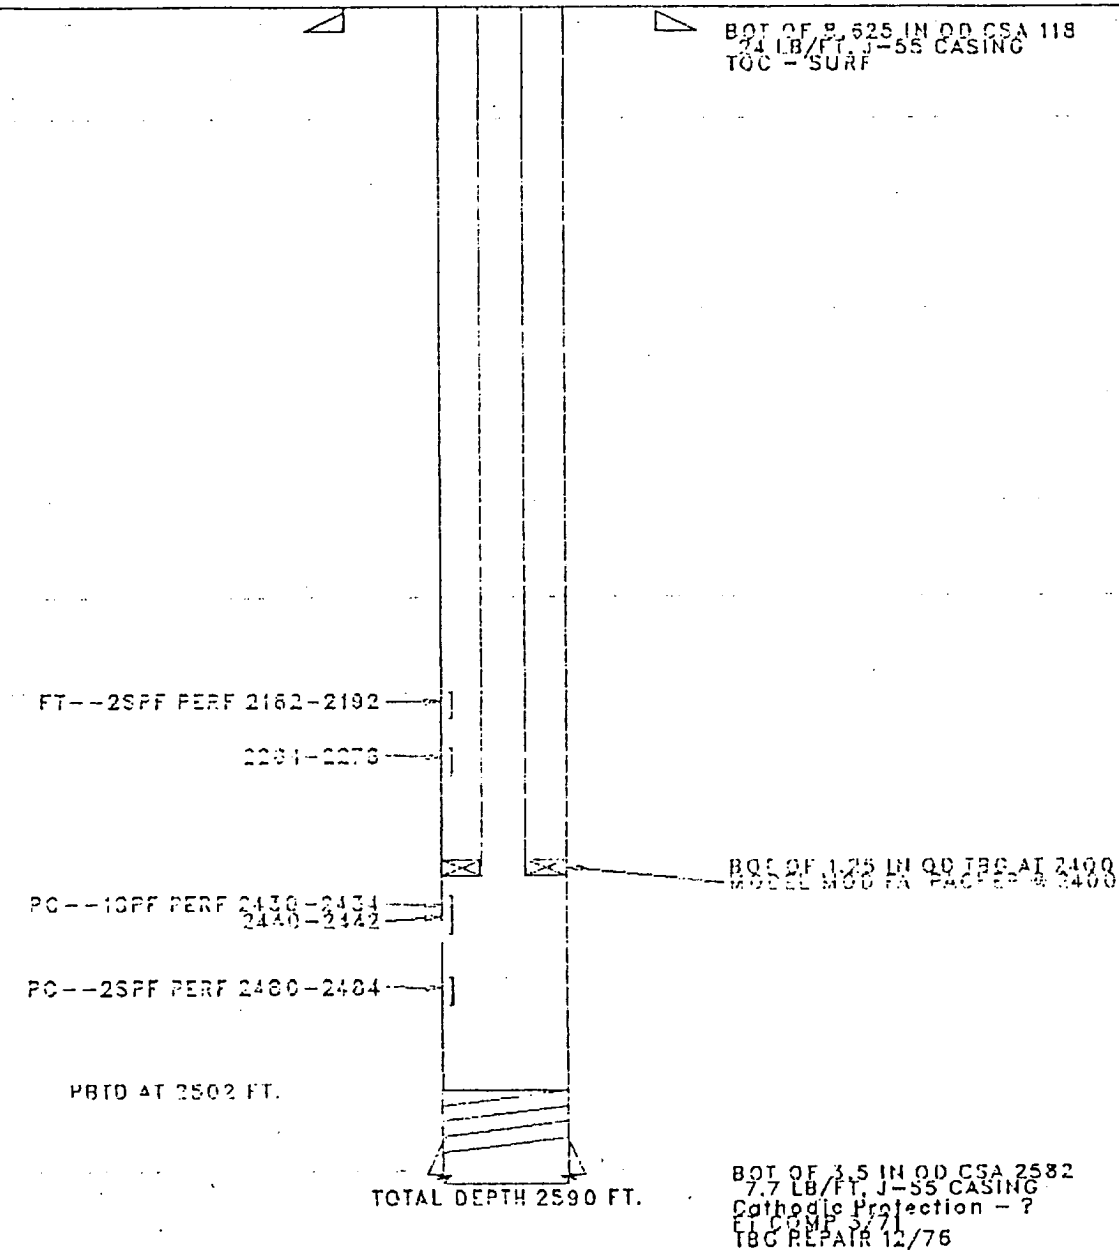

NO INFORMATION ON SECOND TUBING STRING

