Form 3150-5 December 1989:

## UNITED STATES DEPARTMENT OF THE INTERIOR

. . . . . .

FORM APPROVED			
Budget Bureau An			
Expires September	30 1990		

BUREAU OF	LAND MANAGEMENT	2 Lease Designation and Serial 79
		Sf-081098-4
Do not use this form for proposals to dr	AND REPORTS ON WELLS ill or to deepen or reentry to a di R PERMIT—" for such proposals	fferent reservoir.
	IN TRIPLICATE	7 If Unit or CA Agreement Designation
1. Type of Well		
Oul A Gas Other	•	8 Well Name and No.
2. Name of Operator		Florance 122
Amoco Production Company	Attn: John Hamp	ton 9 API Weil No.
3. Address and Telephone No		10 Field and Pool, or Exploratory Area
P.O. Box 800, Denver, Colorado 80201		Basin Dakota/Pictue
Location of Web (Footage, Sec., T., R., M., or Survey D		II County or Parish, State Cliff
1600 FNL, 970' FWL, Uni	t E. Sec. 10, T30N-R	San Juan, New Mexi
CHECK APPROPRIATE BOX	(s) TO INDICATE NATURE OF	NOTICE, REPORT, OR OTHER DATA
TYPE OF SUBMISSION	TYPE OF ACTION	
Notice of Intent	Abandonment	Change of Plans
(Active of Intern	Recompleuon	New Construction
Subsequent Report	Plugging Back	Non-Routine Fracturing
	Casing Repair	Water Shut-Off
Final Abandonment Notice	Alternag Casing	Conversion to Injection
	L Other	Note: Report results of multiple completion on Well Completion or
		Recompletion Report and Log form 1
Amoco Production Company See attached for procedur	intends to Plug and A	
If you have any questions	E & E ! VE IN	evedo at 303-830-6003.
n en		
	MAY1 4 1990	NSY 7 (23)
<b>C</b>	IL CON. DIV.	FARY SIGTON RESOURCE AREA
14. I hereby ceruly that the foregoing is true and correct		••••••••••••••••••••••••••••••••••••••
Signed Ochampton (1	Title Sr. Staff Ac	dmin. Supv. Due 5/2/90
(Thus space for Federal or State office use)		
Approved by	Title	FARMARO DIE

#### **GENERAL INSTRUCTIONS**

This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special in-

structions concerning the use of this form and the number of copie to be submitted, particularly with regard to local area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

#### SPECIFIC INSTRUCTIONS

Item 4—If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 13—Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or rubing pulled and the depth to top of any left in the hole; method of closing top of well, and date well site conditioned for final inspection looking to approval of the abandonment.

#### NOTICE

The Privacy Act of 1974 and the regulation in 43 CFR 2.48(d) provide that you be furnished the following information in connection with information required by this application.

AUTHORITY: 30 U.S.C. 181 et. seq., 351 et. seq., 25 U.S.C. et. seq.; 43 CFR 3160.

PRINCIPAL PURPOSE — The information is to be used to evaluate, when appropriate, approve applications, and report completion of secondary well operations, on a Federal or Indian lease. ROUTINE USES:

- (1) Evaluate the equipment and procedures used during the proposed or completed subsequent well operations.
- (2) Request and grant approval to perform those actions covered by 43 CFR 3162.3-2(2).
- (3) Analyze future applications to drill or modify operations in light of data obtained and methods used.
- (4)(5) Information from the record and/or the record will be transferred to appropriate Federal. State, local or foreign agencies, when relevant to civil, criminal or regulatory investigations or prosecutions.

EFFECT OF NOT PROVIDING INFORMATION — Filing of this notice and report and disclosure of the information is mandatory once an oil or gas well is drilled.

The Paperwork Reduction Act of 1980 (44 U.S.C. 3501, et. seq.) requires us to inform you that:

This information is being collected in order to evaluate proposed and/or completed subsequent well operations on Federal or Indian oil and gas leases.

This information will be used to report subsequent operations once work is completed and when requested, to obtain approval for subsequent operations not previously authorized.

Response to this request is mandatory for the specific types of activities specified in 43 CFR Part 3160.

Public reporting burden for this form is estimated to average 30 minutes per response, including the time for reviewing instructions, gathering and maintaining data, and completing and reviewing the form. Direct comments regarding the burden estimate or any other aspect of this form to U.S. Department of the Intenor, Bureau of Land Management, (Alternate) Bureau Clearance Officer, (WO-771), 18 and C Streets, N.W., Washington, D.C. 20240, and the Office of Management and Budget, Paperwork Reduction Project (1004-0135), Washington, D.C. 20503.


٠ . . .


1-2

#### Plug and Abandonment Procedure Florance 122 10E - T30N - R9W

- 1. MIRUSU. NDWH. NUBOPE. POOH w/ 1 1/4" tubing.
- 2. Test 2 3/8" tubing for integrity. If tubing is not intact, go to step 3. Squeeze perforations w/ 56 cu. ft. cement. Displace to packer. Pull out of packer. Spot cement (2 stages) from top of packer to a depth of 6450' (112 cu. ft.). Go to step 5.
- 3. Sting out of packer. POOH w/27/8" tubing. Send to yard. Order out workstring. RIH w/ workstring. Sting into packer and squeeze perforations w/56 cu. ft.
- 4. Pull out of packer/retainer and spot cement (2 stages) from top of packer/retainer to a depth of 6450' (112 cu. ft.).
- 5. Fill hole with 9 ppg mud.
- 6. POOH w/ tubing, spotting cement plugs f/ 5250' to 4650' (81 cu. ft.) and 3500' to 3400' (23 cu. ft.). POOH w/ workstring.
- 7. RIH w/ tubing and cement retainer. Set retainer at 2910'. Squeeze 37 cu. ft. cement into perforations. Pull out of retainer and spot cement plugs (5 stages) to a depth of 200' (900 cu. ft.). WOC.
- 8. Cut and recover 7" casing from a depth of 100'. Spot surface plug f/ 150' to surface (82 cu. ft.).
- 9. NDBOPE. Cut off casing and wellhead. Install PxA marker according to BLM and State requirements.
- 10. Turn well over to John Jenson for reclamation.
- 11. Rehabilitate surface according to BLM and State requirements.

Note: Use Class G neat cement.



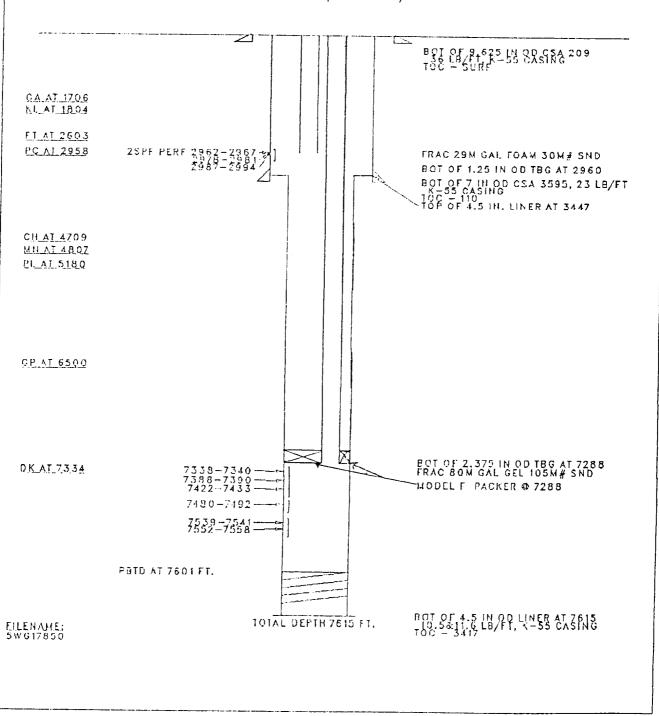

### UNITED STATES DEPARTMENT OF THE INTERIOR

#### BUREAU OF LAND MANAGEMENT FARMINGTON RESOURCE AREA 1235 LA PLATA HIGHWAY FARMINGTON, NEW MEXICO 87401

Attachment to Notice of

Re: Permanent Abandonment

Intention to Abandon

Well: 122 Florance

#### CONDITIONS OF APPROVAL

- 1. Plugging operations authorized are subject to the attached "General Requirements for Permanent Abandonment of Wells on Federal Leases."
- 2. Mark Kelly with the Farmington Office is to be notified at least 24 hours before the plugging operations commence (505) 326-6201.
- 3. Blowout prevention equipment is required.
- 4. The following modifications to your plugging program are to be made (when applicable):

Office Hours: 7:45 a.m. to 4:30 p.m.

# GENERAL REQUIREMENTS FOR PERMANENT ABANDONMENT OF WELLS ON FEDERAL AND INDIAN LEASES FARMINGTON RESOURCE AREA

- 1. Secure prior approval either on a Sundry Notice (Form 3160-5) or verbally from the Fluids Drilling & Production Section at this office before changing the approved plugging program.
- 2. Plugging equipment used shall have separate mixing and displacement pumps and a calibrated tank to assure proper displacement of plugs. The Operator is responsible for providing all measuring devices needed to assure proper measurement of materials being used.
- 3. A proper tank or pit will be used to contain all fluids pumped from the well during plugging operations. Unattended pits are to be fenced.
- 4. All cement plugs are to be placed through tubing (or drillpipe) and shall be a minimum of 100 feet in length with 50% excess inside casing or 100% excess when plug is set in open hole or squeezed into perforations. 15.6#/gal slurry weight is to be used when using class B neat cement or when CaClo is used. Use the recommended slurry weight of other type cements when they are used (Class C, Pozzolan etc.).
- 5. Any cement plugs placed when well is not full of fluid, or when well may be taking fluid, (i.e. across perfs-unless bridge plug or retainer is used, across bad esg., or fresh water formations) will be tagged (touched) after cement has set to verify proper location.
  - The first plug below the surface plug shall generally be tested by either tagging the plug with the working pipe string, or pressuring to a minimum pump (surface) pressure of 1000 psig, with no more than a 10 percent irop during a 15-minute period (cased hole only). If the integrity of any other plug is questioned, it must be tested in the same manner. Also, any cement plug which is the only isolating medium for a fresh water interval or a zone containing a valuable mineral deposit should be tested by tagging with the drill string.
- 6. Mud must be placed between plugs. Plugging mud is to be made up with a minimum of 15 lbs/bbl of sodium bentonite, and a nonfermenting polymer.

  Minimum consistency of plugging mud must be 9 lbs/gal and with a minimum viscosity of 50 sec/qt. Fresh water is to be utilized for mixing mud.
- 7. Following the placement of a cement plug, the withdrawl rate for at least the length of the cement plug shall not exceed 30 ft/min, in order to minimize the contamination of the plug.

- 8. Within 30 days after plugging work is completed, file a Sundry Notice (Subsequent Report of Abandonment, Form 3160-5), in quintuplicate with Area Manager, Bureau of Land Management, 1235 La Plata Highway, Farmington, NM 87401. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. Show date well was plugged.
- 9. All permanently abandoned wells are to be marked with a regulation marker (4" pipe extending 4' above the ground line) containing the information as specified in 43 CFR 3162.6(d). Unless otherwise approved.
- 10. After plugging work is completed the surface is to be rehabilitated in accord with instructions from the Fluids Surface Management Section of the Farmington Resource Area Office.

All above are minimum requirements. The period of liability under the bond of record will not be terminated until the lease is inspected and surface work approved.

Please advise this office when the well location is ready for final inspection.

Failure to comply with the above conditions of approval may result in an assessment for noncompliance and/or a Shut-in Order being issued pursuant to 43 CFR 3163.1.

You are further advised that any instructions, orders or decisions issued by the Bureau of Land Management are subject to administrative review pursuant to 43 CFR 3165.3 and appeal pursuant to 43 CFR 3165.4 and 43 CFR 4.700.