

State of New Mexico Energy, Minerals and Natural Resources Department

Form C-103

FILE IN TRIPLICATE HOBBS OCU OIL CONSEDVATION DIVISION	Revised 5-27-2004
OIL CONSERVATION DIVISION	WELL API NO.
DISTRICT I 1625 N. French Dr., Hobbs, NM 88240 17 2012 1220 South St. Francis Dr. Santa Fe, NM 87505	30-025-07370
DISTRICT II	5. Indicate Type of Lease
1301 W. Grand Ave, Artesia, NM 88210	STATE FEE X
DISTRICT III RECEIVED	6. State Oil & Gas Lease No.
1000 Rio Brazos Rd, Aztec, NM 87410	
SUNDRY NOTICES AND REPORTS ON WELLS	7. Lease Name or Unit Agreement Name
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A	North Hobbs (G/SA) Unit
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (Form C-101) for such proposals.) 1. Type of Well:	Section 19 8. Well No. 411
1. Type of Well: Oil Well Gas Well Other Temporarily Abandoned	6. Well 140. 411
2. Name of Operator	9. OGRID No. 157984
Occidental Permian Ltd.	/
3. Address of Operator	10. Pool name or Wildcat Hobbs (G/SA)
HCR I Box 90 Denver City, TX 79323	L
Unit Letter A : 1300 Feet From The North 1300 Fee	t From The East Line
Section 19 Township 18-S Range 38-E	NMPM Lea County
11. Elevation (Show whether DF, RKB, RT GR, etc.)	
3679' DF	
Pit or Below-grade Tank Application or Closure	
Pit Type Depth of Ground Water Distance from nearest fresh water well Distance from nearest surface water	
Pit Liner Thickness mil Below-Grade Tank: Volume bbls; Construction Ma	
THE MICH THICKNESS MIN BOOW GRAD TAIN. VOIGING ONLY CONDUCTION TAIL	
12. Check Appropriate Box to Indicate Nature of Notice, Report, or C	
NOTICE OF INTENTION TO: SUBS	SEQUENT REPORT OF:
PERFORM REMEDIAL WORK PLUG AND ABANDON REMEDIAL WORK	ALTERING CASING
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OPI	
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OPI PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN	NS. PLUG & ABANDONMENT
PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN	NS. PLUG & ABANDONMENT
PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: MIT Test Fail	NS. PLUG & ABANDONMENT IT JOB Ure Repair/TA status request
PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN	NS. PLUG & ABANDONMENT IT JOB ure Repair/TA status request , including estimated date of starting any
PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed or proposed of the completion of the comple	NS. PLUG & ABANDONMENT IT JOB ure Repair/TA status request , including estimated date of starting any
PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of RUPU & RU.	NS. PLUG & ABANDONMENT IT JOB ure Repair/TA status request , including estimated date of starting any
PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN OTHER: OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed or proposed of the completion of the comple	PLUG & ABANDONMENT T JOB ure Repair/TA status request , including estimated date of starting any completion or recompletion.
PULL OR ALTER CASING Multiple Completion OTHER: OTHER: OTHER: OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of RUPU & RU. 2. ND wellhead/NU BOP. 3. RIH w/packer set @3204'. Test CIBP @3914. Tested OK. Worked to isolate leak. No lead to the test casing to 580 PSI for 30 minutes and chart for the NMOCD.	PLUG & ABANDONMENT T JOB ure Repair/TA status request , including estimated date of starting any completion or recompletion.
PULL OR ALTER CASING Multiple Completion OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of RUPU & RU. 2. ND wellhead/NU BOP. 3. RIH w/packer set @3204'. Test CIBP @3914. Tested OK. Worked to isolate leak. No lead to the test casing to 580 PSI for 30 minutes and chart for the NMOCD. 5. ND BOP/NU wellhead.	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request x including estimated date of starting any completion or recompletion. ak found. POOH w/packer.
PULL OR ALTER CASING Multiple Completion OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of RUPU & RU. 2. ND wellhead/NU BOP. 3. RIH w/packer set @3204'. Test CIBP @3914. Tested OK. Worked to isolate leak. No lead to the test casing to 580 PSI for 30 minutes and chart for the NMOCD. 5. ND BOP/NU wellhead.	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request x including estimated date of starting any completion or recompletion. ak found. POOH w/packer.
PULL OR ALTER CASING Multiple Completion OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of the RUPU & RU. 2. ND wellhead/NU BOP. 3. RIH w/packer set @3204'. Test CIBP @3914. Tested OK. Worked to isolate leak. No lead to the NMOCD. 5. ND BOP/NU wellhead. 6. RDPU & RU. Clean location and leave well TA'd. This Approval of Tabandonment Expansion.	PLUG & ABANDONMENT T JOB ure Repair/TA status request , including estimated date of starting any completion or recompletion.
PULL OR ALTER CASING Multiple Completion OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of RUPU & RU. 2. ND wellhead/NU BOP. 3. RIH w/packer set @3204'. Test CIBP @3914. Tested OK. Worked to isolate leak. No lead to the test casing to 580 PSI for 30 minutes and chart for the NMOCD. 5. ND BOP/NU wellhead.	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request x including estimated date of starting any completion or recompletion. ak found. POOH w/packer.
PULL OR ALTER CASING Multiple Completion OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of the RUPU & RU. 2. ND wellhead/NU BOP. 3. RIH w/packer set @3204'. Test CIBP @3914. Tested OK. Worked to isolate leak. No lead to the NMOCD. 5. ND BOP/NU wellhead. 6. RDPU & RU. Clean location and leave well TA'd. This Approval of Tabandonment Expansion.	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request x including estimated date of starting any completion or recompletion. ak found. POOH w/packer.
PULL OR ALTER CASING Multiple Completion OTHER: MIT Test Fail 13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed of the complete of the	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. Ak found. POOH w/packer. The property of the
PULL OR ALTER CASING	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. Ak found. POOH w/packer. The property of the
PULL OR ALTER CASING	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. Ak found. POOH w/packer. The property of the
PULL OR ALTER CASING	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. Ak found. POOH w/packer. The property of the
PULL OR ALTER CASING	PLUG & ABANDONMENT IT JOB
PULL OR ALTER CASING	PLUG & ABANDONMENT IT JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. Ak found. POOH w/packer. Emporary oires 10-09-2013 that any pit or below-grade tank has been/will be
PULL OR ALTER CASING	PLUG & ABANDONMENT IT JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. As found. POOH w/packer. The property of the
PULL OR ALTER CASING	PLUG & ABANDONMENT Tr JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. Ak found. POOH w/packer. That any pit or below-grade tank has been/will be COCD-approved Associate DATE 12/14/2012 TELEPHONE NO. 806-592-6280
PULL OR ALTER CASING	PLUG & ABANDONMENT IT JOB ure Repair/TA status request including estimated date of starting any completion or recompletion. As found. POOH w/packer. The property of the

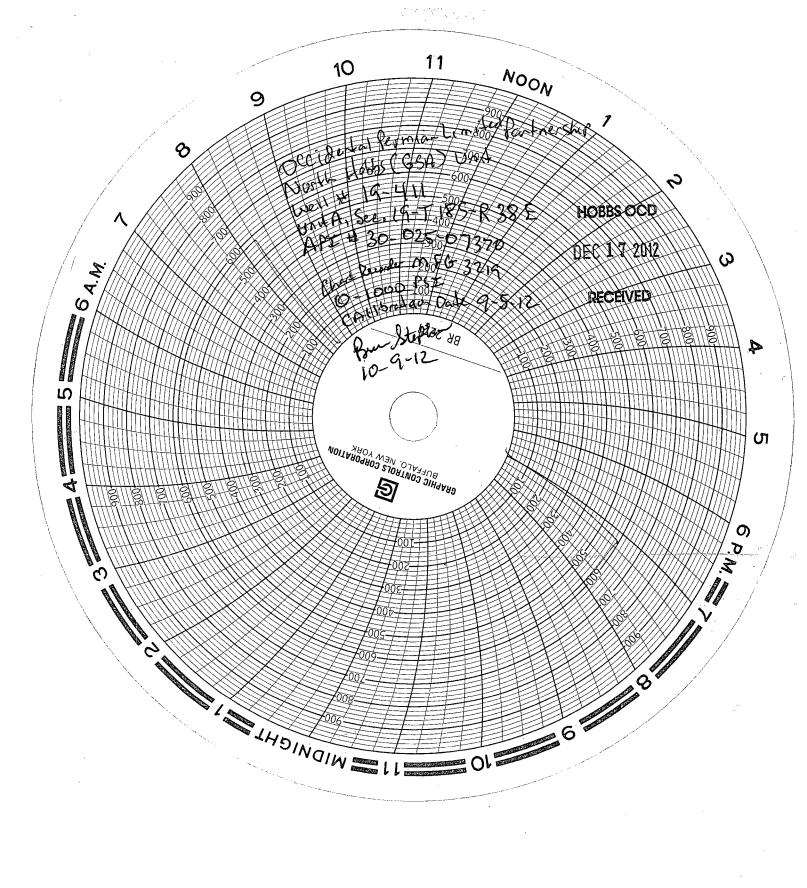

Work Plan Report for Well: NHSAU 411-19

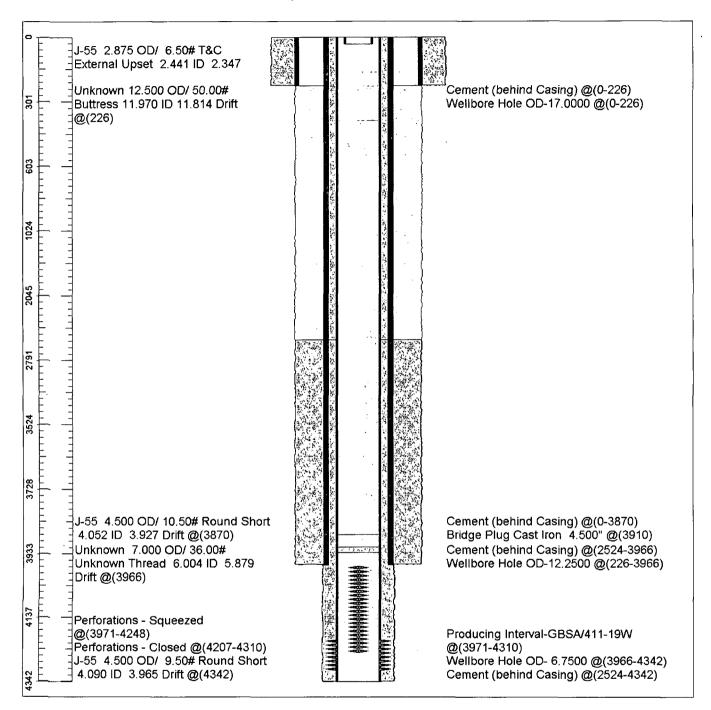

Survey Viewer