
## State of New Mexico Energy, Minerals and Natural Resources Department

Form C-103 Revised 5-27-2004

FILE IN TRIPLICATE  HOBBS OCD OIL CONSERVATION DIVISION	
DISTRICT I 1920 Court St. Engagin Dr.	WELL API NO.
1625 N. French Dr., Hobbs, NM 88240 DISTRICT II  1625 N. French Dr., Hobbs, NM 88240 APR 2 9 2013  Santa Fe, NM 87505	30-025-12491
	5. Indicate Type of Lease
1301 W. Grand Ave, Artesia, NM 88210	STATE FEE X  6. State Oil & Gas Lease No.
DISTRICT III 1000 Rio Brazos Rd, Aztec, NM 87410  RECEIVED	o. State Off & Gas Lease No.
SUNDRY NOTICES AND REPORTS ON WELLS	7. Lease Name or Unit Agreement Name
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A	North Hobbs (G/SA) Unit
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (Form C-101) for such proposals.)	Section 19
1. Type of Well: Oil Well X Gas Well Other	8. Well No. 341
2. Name of Operator	9. OGRID No. 157984
Occidental Permian Ltd.  3. Address of Operator	10. Pool name or Wildcat Hobbs (G/SA)
HCR 1 Box 90 Denver City, TX 79323	
4. Well Location	
Unit Letter O: 330 Feet From The South Line and 2310 Fe	et From The East Line
Section 19 Township 18-S Range 38-	E NMPM Lea County
3660.8 GL	
Pit or Below-grade Tank Application or Closure	
Pit Type Depth of Ground Water Distance from nearest fresh water well Distance from nearest surface water	
Pit Liner Thickness mil Below-Grade Tank: Volume bbls; Construction Ma	aterial
12. Check Appropriate Box to Indicate Nature of Notice, Report, or	
NOTICE OF INTENTION TO: SUB	SEQUENT REPORT OF:
PERFORM REMEDIAL WORK PLUG AND ABANDON REMEDIAL WORK	X ALTERING CASING
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP	NS. PLUG & ABANDONMENT
	NS. PLUG & ABANDONMENT
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OF PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEROTHER:	NS. PLUG & ABANDONMENT
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEN	PLUG & ABANDONMENT  NT JOB  s, including estimated date of starting any completion or recompletion.  w formation at 4272'. Drill down to new TD @ ars.
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OF PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEROTHER:  13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. 2. ND wellhead/NU BOP. 3. RU wire line & perforate tubing @3990'. RD wire line. 4. POOH and lay down ESP and equipment. 5. RIH w/bit and drill collars. Tag @4272'. NU stripper head and power swivel. Drill on ne 4337'. Circulate well clean. ND stripper head and power swivel. POOH w/bit & drill coll 6. RIH w/packer set at 4021'. RU pump truck & pump 500 gal of Xylene, 100 gal of 6496 ch bbl of 10# brine. RD pump truck. POOH w/packer. 7. RIH w/ESP equipment set on 130 jts of 2-7/8" tubing. Intake set @4031'. 8. ND BOP/NU wellhead. 9. RDPU & RU. Clean location and return well to production. RUPU 01/28/2013 RDPU 02/09/2013  I hereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify	NS. PLUG & ABANDONMENT  NT JOB  s, including estimated date of starting any completion or recompletion.  w formation at 4272'. Drill down to new TD @ ars. emical & 25 gal of 6495 chemical. Flush w/26
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OF PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEROTHER:  13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. 2. ND wellhead/NU BOP. 3. RU wire line & perforate tubing @3990'. RD wire line. 4. POOH and lay down ESP and equipment. 5. RIH w/bit and drill collars. Tag @4272'. NU stripper head and power swivel. Drill on ne 4337'. Circulate well clean. ND stripper head and power swivel. POOH w/bit & drill coll 6. RIH w/packer set at 4021'. RU pump truck & pump 500 gal of Xylene, 100 gal of 6496 ch bbl of 10# brine. RD pump truck. POOH w/packer. 7. RIH w/ESP equipment set on 130 jts of 2-7/8" tubing. Intake set @4031'. 8. ND BOP/NU wellhead. 9. RDPU & RU. Clean location and return well to production. RUPU 01/28/2013 RDPU 02/09/2013  I hereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative	NS. PLUG & ABANDONMENT  NT JOB  s, including estimated date of starting any completion or recompletion.  w formation at 4272'. Drill down to new TD @ ars. emical & 25 gal of 6495 chemical. Flush w/26  that any pit or below-grade tank has been/will be
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMEROTHER:  13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. 2. ND wellhead/NU BOP. 3. RU wire line & perforate tubing @3990'. RD wire line. 4. POOH and lay down ESP and equipment. 5. RIH w/bit and drill collars. Tag @4272'. NU stripper head and power swivel. Drill on ne 4337'. Circulate well clean. ND stripper head and power swivel. POOH w/bit & drill coll 6. RIH w/packer set at 4021'. RU pump truck & pump 500 gal of Xylene, 100 gal of 6496 ch bbl of 10# brine. RD pump truck. POOH w/packer. 7. RIH w/ESP equipment set on 130 jts of 2-7/8" tubing. Intake set @4031'. 8. ND BOP/NU wellhead. 9. RDPU & RU. Clean location and return well to production. RUPU 01/28/2013 RDPU 02/09/2013  Thereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or	NS. PLUG & ABANDONMENT  NT JOB  s, including estimated date of starting any completion or recompletion.  w formation at 4272'. Drill down to new TD @ ars. emical & 25 gal of 6495 chemical. Flush w/26  that any pit or below-grade tank has been/will be e OCD-approved
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OF PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMENT OTHER:  13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU.  2. ND wellhead/NU BOP.  3. RU wire line & perforate tubing @3990'. RD wire line.  4. POOH and lay down ESP and equipment.  5. RIH w/bit and drill collars. Tag @4272'. NU stripper head and power swivel. Drill on ne 4337'. Circulate well clean. ND stripper head and power swivel. POOH w/bit & drill coll 6. RIH w/packer set at 4021'. RU pump truck & pump 500 gal of Xylene, 100 gal of 6496 chebl of 10# brine. RD pump truck. POOH w/packer.  7. RIH w/ESP equipment set on 130 jts of 2-7/8" tubing. Intake set @4031'.  8. ND BOP/NU wellhead.  9. RDPU & RU. Clean location and return well to production.  RUPU 01/28/2013 RDPU 02/09/2013  1 hereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative plan.	NS. PLUG & ABANDONMENT  NT JOB  s, including estimated date of starting any completion or recompletion.  w formation at 4272'. Drill down to new TD @ ars. emical & 25 gal of 6495 chemical. Flush w/26  that any pit or below-grade tank has been/will be e OCD-approved  Associate  DATE 04/25/2013
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMENT OTHER:  13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed  1. RUPU & RU. 2. ND wellhead/NU BOP. 3. RU wire line & perforate tubing @3990'. RD wire line. 4. POOH and lay down ESP and equipment. 5. RIH wbit and drill collars. Tag @4272'. NU stripper head and power swivel. Drill on ne 4337'. Circulate well clean. ND stripper head and power swivel. POOH wbit & drill coll of. RIH w/packer set at 4021'. RU pump truck & pump 500 gal of Xylene, 100 gal of 6496 che bbl of 10# brine. RD pump truck. POOH w/packer. 7. RIH w/ESP equipment set on 130 jts of 2-7/8" tubing. Intake set @4031'. 8. ND BOP/NU wellhead. 9. RDPU & RU. Clean location and return well to production. RUPU 01/28/2013 RDPU 02/09/2013  I hereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative plan  SIGNATURE TITLE Administrative  TYPE OR PRINT NAME Mendy A. Johnson E-mail address: mendy johnson@oxy.com	PLUG & ABANDONMENT  or, including estimated date of starting any completion or recompletion.  w formation at 4272'. Drill down to new TD @ ars. emical & 25 gal of 6495 chemical. Flush w/26  that any pit or below-grade tank has been/will be e OCD-approved  Associate DATE 04/25/2013  ASSOCIATE DATE 04/25/2013  A Engineer MAY 0 2 201
TEMPORARILY ABANDON CHANGE PLANS COMMENCE DRILLING OP PULL OR ALTER CASING Multiple Completion CASING TEST AND CEMENT OTHER:  13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed 1. RUPU & RU. 2. ND wellhead/NU BOP. 3. RU wire line & perforate tubing @3990'. RD wire line. 4. POOH and lay down ESP and equipment. 5. RIH w/bit and drill collars. Tag @4272'. NU stripper head and power swivel. Drill on ne 4337'. Circulate well clean. ND stripper head and power swivel. POOH w/bit & drill coll of 10# brine. RD pump truck & pump 500 gal of Xylene, 100 gal of 6496 che bbl of 10# brine. RD pump truck. POOH w/packer. 7. RIH w/ESP equipment set on 130 jts of 2-7/8" tubing. Intake set @4031'. 8. ND BOP/NU wellhead. 9. RDPU & RU. Clean location and return well to production. RUPU 01/28/2013 RDPU 02/09/2013  1 hereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify constructed or closed according to NMOCD guidelines , a general permit or an (attached) alternative plan  SIGNATURE TITLE Administrative TYPE OR PRINT NAME Mendy A. Johnson E-mail address: mendy johnson@oxy.com	PLUG & ABANDONMENT  NT JOB  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion.  In including estimated date of starting any completion or recompletion or recompletion.  In including estimated date of starting any completion or recompletion or recompletion.  In including es

## Work Plan Report for Well: NHSAU 341-19

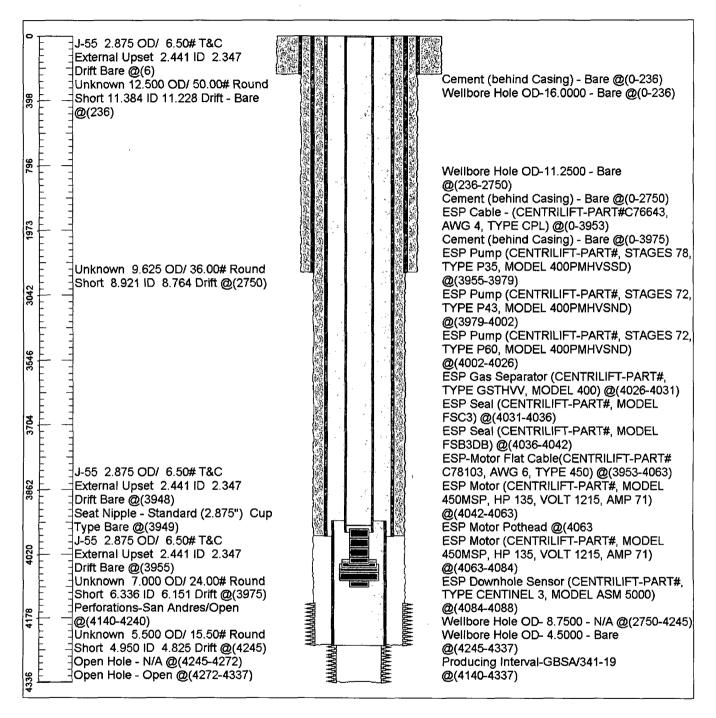

## **Survey Viewer**