Fogm 3160-5 (August 1999)

UNITED STATES DEPARTMENT OF THE INTERIOR BUREAU OF LAND MANAGEMENT

Title 18 U.S.C. Section 1001, and Title 43 U.S.C. Section 1212, makes it a crime for any person knowing

States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction

OFFICERAED

FORM APPROVED OMB NO. 1004-0135

Expires: November 30, 2000

5. Lease Serial No.

NMLC064118

SUNDRY NOTICES AND REPORTS ON WELLS DEC 16 2010

Do not use this form for proposals to drill or to re-enter BOBBSOCD

6. If Indian, Allottee or Tribe Name

well-partment or agency of the

abandoned well. Use For	m 3160-3 (APD) for such proposats.	
SUBMIT IN TRIPLICATE - Other instructions on reverse side		7. If Unit or CA/Agreement, Name and/or No.
1. Type of Well X Oil Well Gas Well Other 2. Name of Operator OXY USA Inc. 16696 3a. Address 3b. Phone No. (include area code)		8. Well Name and No. E.C. Hill B #12 Federal 9. API Well No.
P.O. Box 50250 Midland, TX 7971 4. Location of Well (Footage, Sec., T., R., M., or Survey is 985 FSL 550 FEL SESE(P) Sec 34 T2	0 432-685-5717 Description)	30-025-32719 10. Field and Pool, or Exploratory Area Teague Simpson 11. County or Parish, State Lea NM
12. CHECK APPROPRIATE	BOX(ES) TO INDICATE NATURE OF NOTICE, RE	PORT, OR OTHER DATA
TYPE OF SUBMISSION	TYPE OF ACTION	N
X Notice of Intent Subsequent Report	Alter Casing Fracture Treat Reclama Casing Repair New Construction Recomp	
Final Abandonment Notice	Convert to Injection Plug Back Water D	
Attach the Bond under which the work will be perfollowing completion of the involved operations. It testing has been completed. Final Abandonment I determined that the final site is ready for final insport TD-9960' PBTD-9430' Perfs-947 13-3/8" 48# csg @ 362' w/ 37 8-5/8" 24-32# csg @ 2996' w/	'9-9536' CIBP-9430' '5sx, 17-1/2" hole TOC-Surf-Circ '675sx, 11" hole, TOC-Surf-Circ DVT @ 3987' w/ 1390sx, 7-7/8" hole, TOC-27' Ssx cmt to 9235' SEE ATTACHE CONDITIONS (-55' WOC-Tag 35' WOC-Tag	subsequent reports shall be filed within 30 days a new interval, a Form 3160-4 shall be filed once tion, have been completed, and the operator has 16'-Calc
14. I hereby certify that the foregoing is true and correct Name (Printed/Typed)	Title	no luch
David Stewart	Sr. Regulatory A	
THIS	SPACE FOR FEDERAL OR STATE OFFICE USE	DVED
Approved by Conditions of approval, if any are attached. Approval of certify that the applicant holds legal or equitable title to which would entitle the applicant to conduct operations the second conduct operations to conduct operations the second conduct operations the second conduct operations to conduct operations the second cond	f this notice does not warrant or those of the subject lease	Date Date Vinkler

OXY USA Inc. - Proposed E.C. Hill B Federal #12 API No. 30-025-32719

160sx @ 412'-Surface

45sx @ 1250-1135' WOC-Tag

45sx @ 2580-2455' WOC-Tag

25sx @ 3050-2920' WOC-Tag

25sx @ 4040-3900'


30sx @ 5300-5145'

30sx @ 5920-5760'

30sx @ 6400-6235'

30sx @ 7280-7105'

30sx @ 9430-9235' CIBP @ 9430'

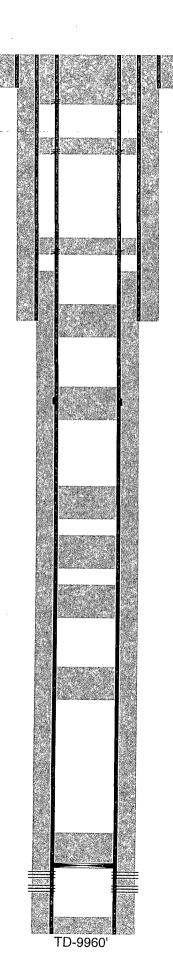

17-1/2" hole @ 362' 13-3/8" csg @ 362' w/ 375sx-TOC-Surf-Circ

Perf @ 1250'

Perf @ 412'

Perf @ 2580'


11" hole @ 2996' 8-5/8" csg @ 2996' w/ 675sx-TOC-Surf-Circ

7-7/8" hole @ 9960' 5-1/2" csg @ 9960' DVT @ 3987' 1st w/ 1170sx-TOC-3982'-Circ 2nd w/ 220sx-TOC-2716-Calc

Perfs @ 9479-9536'

PB-9935'

• OXY USA Inc. - Current E.C. Hill B Federal #12 API No. 30-025-32719

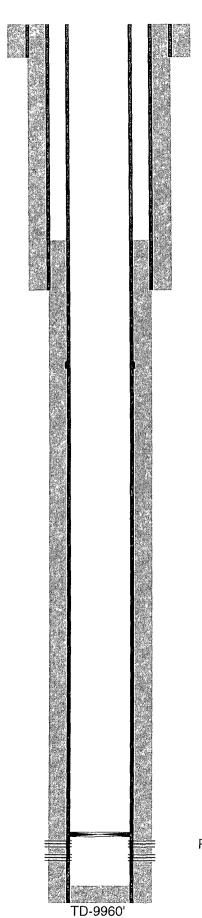

17-1/2" hole @ 362' 13-3/8" csg @ 362' w/ 375sx-TOC-Surf-Circ

11" hole @ 2996' 8-5/8" csg @ 2996' w/ 675sx-TOC-Surf-Circ

7-7/8" hole @ 9960' 5-1/2" csg @ 9960' DVT @ 3987' 1st w/ 1170sx-TOC-3982'-Circ 2nd w/ 220sx-TOC-2716-Calc

Perfs @ 9479-9536'

CIBP @ 9430'

PB-9935'

Oxy USA Inc.

NMLC-064118: E.C. Hill B Federal #12

API: 30-025-32719

Lea County, New Mexico

RE: Plugging and Abandonment Requirements, Conditions of Approval

- 1. OK Perfs)
- 1a. Spot a plug (minimum 25sx) from 8400'-8220' (Fusselman)
- 2. Move: Spot from 7330'-7160' Otherwise OK (Devonian)
- 3. Move: Spot from 6445'-6280' Otherwise OK (Abo)
- 4. OK (Spacer)
- 5. Move: Spot from 4965'-4815' Otherwise OK (Glorietta)
- 6. WOC and tag at 3900' or shallower Otherwise OK (DV Tool)
- 7. Change: Perf and attempt to squeeze plug from 3050'-2920'. WOC and tag at 2920' or shallower. If injection rate cannot be established, spot cement 50' below perfs. (Casing shoe)
- 8. Move: Perf and squeeze plug from 2400'-2280'. Tag at 2280' or shallower Otherwise OK (Yates BOS)
- 9. Move: Perf and squeeze plug from 1200'-1090'. Tag at 1090' or shallower Otherwise OK (TOS)
- 10. OK (Casing shoe Surface)
- 11. Verify that all annuluses have cement to surface and fill in as required.
- 12. Submit a subsequent report to the BLM.

H₂S monitoring equipment shall be on location.

See attached standard COAs.

DHW 121310

BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 575-234-5972

Permanent Abandonment of Federal Wells Conditions of Approval

Failure to comply with the following Conditions of Approval may result in a Notice of Incidents of Noncompliance (INC) in accordance with 43 CFR 3163.1.

1. Plugging operations shall commence within <u>ninety (90)</u> days from the approval date of this Notice of Intent to Abandon.

If you are unable to plug the well by the 90th day provide this office, prior to the 90th day, with the reason for not meeting the deadline and a date when we can expect the well to be plugged. Failure to do so will result in enforcement action.

The rig used for the plugging procedure cannot be released and moved off without the prior approval of the authorized officer. Failure to do so may result in enforcement action.

- 2. <u>Notification:</u> Contact the appropriate BLM office at least 24 hours prior to the commencing of any plugging operations. For wells in Chaves and Roosevelt County, call 575-627-0272; Eddy County, call 575-361-2822; Lea County, call 575-393-3612.
- 3. <u>Blowout Preventers</u>: A blowout preventer (BOP), as appropriate, shall be installed before commencing any plugging operation. The BOP must be installed and maintained as per API and manufacturer recommendations. The minimum BOP requirement is a 2M system for a well not deeper than 9,090 feet; a 3M system for a well not deeper than 13,636 feet; and a 5M system for a well not deeper than 22,727 feet.
- 4. <u>Mud Requirement:</u> Mud shall be placed between all plugs. Minimum consistency of plugging mud shall be obtained by mixing at the rate of 25 sacks (50 pounds each) of gel per 100 barrels of **brine** water. Minimum nine (9) pounds per gallon.
- 5. <u>Cement Requirement</u>: Sufficient cement shall be used to bring any required plug to the specified depth and length. Any given cement volumes on the proposed plugging procedure are merely estimates and are not final. Unless specific approval is received, no plug except the surface plug shall be less than 25 sacks of cement. In lieu of a cement plug in a cased hole, a bridge plug set within 50 feet to 100 feet above the perforations shall be capped with 25 sacks of cement. If a bailer is used to cap this plug, 35 feet of cement shall be sufficient. Any plug that requires a tag will have a minimum WOC time of 4 hours.

Unless otherwise specified in the approved procedure, the cement plug shall consist of either Neat Class "C", for up to 7,500 feet of depth or Neat Class "H", for deeper than 7,500 feet plugs.

- 6. <u>Dry Hole Marker</u>: All casing shall be cut-off at the base of the cellar or 3 feet below final restored ground level (whichever is deeper). **The BLM is to be notified when the wellhead is cut off to verify that cement is to surface in the casing and all annuluses.** The well bore shall then be capped with a 4-inch pipe, 10-feet in length, 4 feet above ground and embedded in cement. The following information shall be permanently inscribed on the dry hole marker: well name and number, name of the operator, lease serial number, surveyed location (quarter-quarter section, section, township and range or other authorized survey designation acceptable to the authorized officer such as metes and bounds).
- 7. <u>Subsequent Plugging Reporting:</u> Within 30 days after plugging work is completed, file one original and five copies of the Subsequent Report of Abandonment, Form 3160-5 to BLM. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. **Show date well was plugged.**
- 8. <u>Trash</u>: All trash, junk and other waste material shall be contained in trash cages or bins to prevent scattering and will be removed and deposited in an approved sanitary landfill. Burial on site is not permitted.

Following the submission and approval of the Subsequent Report of Abandonment, surface restoration will be required. See attached reclamation procedure.

DHW 112309



United States Department of the Interior

BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 E. Greene St. Carlsbad, New Mexico 88220-6292 www.blm.gov/nm



In Reply Refer To: 1310

Reclamation Objectives and Procedures

Reclamation Objective: Oil and gas development is one of many uses of the public lands and resources. While development may have a short- or long-term effect on the land, successful reclamation can ensure the effect is not permanent. During the life of the development, all disturbed areas not needed for active support of production operations should undergo "interim" reclamation in order to minimize the environmental impacts of development on other resources and uses. At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its pre-disturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, re-distribute the native soils, provide erosion control as needed, rip and seed as specified in the original APD COA. This will apply to well pads, facilities, and access roads. Barricade access road at the starting point. If reserve pits have not reclaimed due to salts or other contaminants, submit a plan for approval, as to how you propose to provide adequate restoration of the pit area.

1. The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of Operations must include adequate measures for stabilization and reclamation of disturbed lands. Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD process as per Onshore Oil and Gas Order No. 1.

- 2. For wells and/or access roads not having an approved plan, or an inadequate plan for surface reclamation (either interim or final reclamation), the operator must submit a proposal describing the procedures for reclamation. For interim reclamation, the appropriate time for submittal would be when filing the Well Completion or Recompletion Report and Log (Form 3160-4). For final reclamation, the appropriate time for submittal would be when filing the Notice of Intent, or the Subsequent Report of Abandonment, Sundry Notices and Reports on Wells (Form 3160-5). Interim reclamation is to be completed within 6 months of well completion, and final reclamation is to be completed within 6 months of well abandonment.
- 3. The operator must file a Subsequent Report Plug and Abandonment (Form 3160-5) following the plugging of a well.
- 4. Previous instruction had you waiting for a BLM specialist to inspect the location and provide you with reclamation requirements. If you have an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It would be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation equipment to ensure that it meets BLM objectives. Upon conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a specialist to inspect the location to verify work was completed as per approved plans.
- 5. The approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been reestablished. If the BLM objectives have not been met the operator will be notified and corrective actions may be required.
- 6. It is the responsibility of the operator to monitor these locations and/or access roads until such time as the operator feels that the BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the BLM objectives have been met submit a Final Abandonment Notice (FAN), Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
- 7. At this time the BLM specialist will inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability of the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

Jim Amos Supervisory Environmental Protection Specialist 575-234-5909, 575-361-2648 (Cell)

Terry Gregston Environmental Protection Specialist 575-234-5958

Bobby Ballard Environmental Protection Specialist 575-234-2230

Randy Rust Natural Resource Specialist 575-234-5943

Linda Denniston Environmental Protection Specialist 575-234-5974

Jennifer Van Curen Environmental Protection Specialist 575-234-5905

Justin Frye Environmental Protection Specialist 575-234-5922 Cody Layton Natural Resource Specialist 575-234-5959

Trishia Bad Bear Natural Resource Specialist 575-393-3612

Todd Suter Surface Protection Specialist 575-234-5987

Doug Hoag Civil Engineering Technician 575-234-5979

Tanner Nygren Natural Resource Specialist 575-234-5975

John Fast Natural Resource Specialist 575-2345996