

UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use Form 9-331-C for such proposals.)

1. oil well gas well other **Water Inj. well**

2. NAME OF OPERATOR
Koch Exploration Co. Div. of Koch Ind., Inc.

3. ADDRESS OF OPERATOR
P.O. Box 2256, Wichita, Kansas 67201

4. LOCATION OF WELL (REPORT LOCATION CLEARLY. See space 17 below.)
AT SURFACE: **1135' FSL & 20' FWL**
AT TOP PROD. INTERVAL:
AT TOTAL DEPTH:

5. LEASE
LC-050107(a)

6. IF INDIAN, ALLOTTEE OR TRIBE NAME
N/A

7. UNIT AGREEMENT NAME
N/A

8. FARM OR LEASE NAME
Mary E. Wills "A"

9. WELL NO.
9

10. FIELD OR WILDCAT NAME
Rhodes

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA
Sec. 35-26S-37E

12. COUNTY OR PARISH | 13. STATE
N/A Lea | New Mexico

14. API NO.
N/A

15. ELEVATIONS (SHOW DF, KDB, AND WD)
GR 2979.28

16. CHECK APPROPRIATE BOX TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA


REQUEST FOR APPROVAL TO:		SUBSEQUENT REPORT OF:	
TEST WATER SHUT-OFF	<input type="checkbox"/>		<input type="checkbox"/>
FRACTURE TREAT	<input type="checkbox"/>		<input type="checkbox"/>
SHOOT OR ACIDIZE	<input type="checkbox"/>		<input type="checkbox"/>
REPAIR WELL	<input type="checkbox"/>		<input type="checkbox"/>
PULL OR ALTER CASING	<input type="checkbox"/>		<input type="checkbox"/>
MULTIPLE COMPLETE	<input type="checkbox"/>		<input type="checkbox"/>
CHANGE ZONES	<input type="checkbox"/>		<input type="checkbox"/>
ABANDON (other)	<input checked="" type="checkbox"/> Plug and abandon		<input checked="" type="checkbox"/>

(NOTE: Report results of multiple completion or zone change on Form 9-330.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

8-24-81 Set 20 sxs @3290' tagged @3050'
 8-25-81 Set 35 sxs @1730'
 8-25-81 Set 50 sxs @1200' tagged @1088'
 8-25-81 Set 50 sxs @650' tagged @510'
 8-27-81 Set 5 sxs and dry hole marker

Plugs set thru tubing
 Hole loaded with 10# mud laden fluid

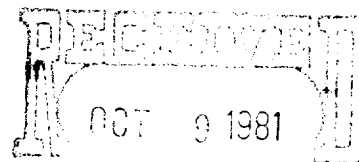

OIL & GAS
U.S. GEOLOGICAL SURVEY
ROSWELL, NEW MEXICO

Subsurface Safety Valve: Manu. and Type _____ Set @ _____ Ft.

18. I hereby certify that the foregoing is true and correct

SIGNED [Signature] TITLE Mayo Marrs, Casing Pulling Inc. DATE 9-6-81

APPROVED _____ (This space for Federal or State office use)

(Orig. Sign.) ELMER W. CHESTER APPROVED BY _____ TITLE _____ DATE _____

CONDITIONS OF APPROVAL, IF ANY:

MAR 8 1983
 FOR
JAMES A. GILHAM
 DISTRICT SUPERVISOR *See Instructions on Reverse Side

Instructions

General: This form is designed for submitting proposals to perform certain well operations, and reports of such operations when completed, as indicated, on Federal and Indian lands pursuant to applicable Federal law and regulations, and, if approved or accepted by any State, on all lands in such State, pursuant to applicable State law and regulations. Any necessary special instructions concerning the use of this form and the number of copies to be submitted, particularly with regard to local, area, or regional procedures and practices, either are shown below or will be issued by, or may be obtained from, the local Federal and/or State office.

Item 4: If there are no applicable State requirements, locations on Federal or Indian land should be described in accordance with Federal requirements. Consult local State or Federal office for specific instructions.

Item 17: Proposals to abandon a well and subsequent reports of abandonment should include such special information as is required by local Federal and/or State offices. In addition, such proposals and reports should include reasons for the abandonment; data on any former or present productive zones, or other zones with present significant fluid contents not sealed off by cement or otherwise; depths (top and bottom) and method of placement of cement plugs; mud or other material placed below, between and above plugs; amount, size, method of parting of any casing, liner or tubing pulled and the depth to top of any left in the hole; method of closing top of well; and date well site conditioned for final inspection looking to approval of the abandonment.

RECEIVED

MAR 9 1983

O.C.D.
HOBBS OFFICE