
Received by OCP: 1/19/2021 10:58:27 AM State of New Mexico Energy, Minerals and Natural Resources District I - (575) 393-6161 WELL API NO. 1625 N. French Dr., Hobbs, NM 88240 District II - (575) 748-1283 30-025-22639 OIL CONSERVATION DIVISION 811 S. First St., Artesia, NM 88210 District III - (505) 334-6178 1220 South St. Francis Dr. 5. Indicate Type of Lease 1000 Rio Brazos Rd., Aztec, NM 87410 Santa Fe, NM 87505 STATE X FEE District IV - (505) 476-3460 1220 S. St. Francis Dr., Santa Fe, NM 6. State Oil & Gas Lease No. 87505 EO-4958 SUNDRY NOTICES AND REPORTS ON WELLS 7. Lease Name or Unit Agreement Name (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH Elk State PROPOSALS.) 8. Well Number 3 1. Type of Well: Oil Well X Gas Well Other 9. OGRID Number 62759 2. Name of Operator Mark L. Shidler, Inc. 10. Pool name or Wildcat Teague Paddock 3. Address of Operator 1313 Campbell Road, Bldg. D, Houston, Texas 77055 Blinebry 4. Well Location \_\_ line and \_\_\_\_\_990\_\_\_\_feet from the west line. Unit Letter \_:\_\_ 1650\_\_\_\_\_\_feet from the \_\_south\_ Section 16 Township 23S Range 37E **NMPM** County Lea 11. Elevation (Show whether DR, RKB, RT, GR, etc.) 12' GR 12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data SUBSEQUENT REPORT OF: NOTICE OF INTENTION TO: PERFORM REMEDIAL WORK PLUG AND ABANDON REMEDIAL WORK ALTERING CASING □  $\Box$ CHANGE PLANS П COMMENCE DRILLING OPNS.□ P AND A TEMPORARILY ABANDON П PULL OR ALTER CASING MULTIPLE COMPL CASING/CEMENT JOB DOWNHOLE COMMINGLE CLOSED-LOOP SYSTEM OTHER: OTHER: 13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion. Please see accompanying documents/attachments. 4" diameter 4' tall Above Ground Marker **SEE ATTACHED CONDITIONS** OF APPROVAL Spud Date: Rig Release Date: I hereby certify that the information above is true and complete to the best of my knowledge and belief. SIGNATURE Gregory B. Gregson TITLE Operations Manager DATE January 19, 2021 Type or print name Gregory B. Gregson E-mail address: ggregson@marklshidlerinc.com PHONE: (713) 481-6487 For State Use Only TITLE Compliance Officer A DATE 2/4/21 Conditions of Approval (if any):

Mark L. Shidler Inc Elk State #3 30-025-22697 UL – L, Sec 16, T23S, R37E 1650' FSL & 990' FWL

10 3/4" 40# csg @ 800' w/ 550 sx 7 5/8" 29.7# csg @ 6092' w/ 680 sx Perfs 5029-99' sqz'd w/ 150 sx Active perfs 5438' – 5994' TD 6092'


- 1. Set CIBP at 4929'.
- 2. Circulate mud laden fluid. Pressure test casing.
- 3. Spot 25 sx cmt on CIBP.
- 4. POOH to 3900'. Spot 25 sx cmt. (Top SA)
- 5. Perf at 2474'. Sqz w/ 50 sx cmt. WOC & Tag. (B Salt)
- 6. Perf at 1100'. Sqz w/50 sx cmt. WOC & Tag. (T Salt)
- 7. Perf at 850'. Sqz w/ 50 sx cmt. WOC & Tag. (Shoe)
- 8. Perf at 150'. Pump sufficient cmt to circulate to surface. (Fill 10 3/4" x 7 5/8" annulus and 7 5/8" csg to surface.)
- 9. Cut off wellhead. Verify cement to surface all strings. Install dry hole marker.

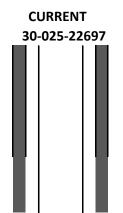

10 3/4" 40# csg @ 800'

T Salt 1153' B Salt 2424' T SA 3863'

(Sqz'd Perfs 5029' - 5099' w/ 150 sx) Perfs 5438' - 5994' 7" 5/8 29.7# csg @ 6092'

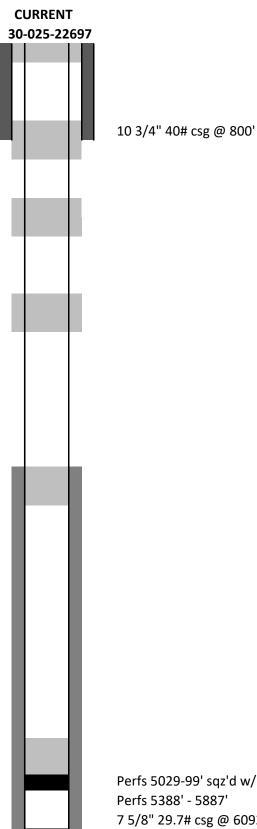

**INSTALL DRY HOLE MARKER CUT OFF WELLHEAD & VERIFY CMT CIRC CMT TO SURF PERF AT 150' WOC & TAG** SQZ W/ 50 SX CMT **PERF AT 850'** 

**WOC & TAG** SQZ W/ 50 SX CMT **PERF AT 1100'** 

**WOC & TAG** SQZ W/ 50 SX CMT **PERF AT 2474'** 

**SPOT 25 SX CMT POOH TO 3900'** 

**SPOT 25 SX CMT** CIRC HOLE W/ MLF & PRESSURE TEST CSG **SET CIBP AT 4929'** 

Perfs 5029-99' sqz'd w/ 150 sx 7 5/8" 29.7# csg @ 6092'

# CONDITIONS OF APPROVAL FOR PLUGGING AND ABANDONMENT OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office I (Hobbs) at (575)-263-6633 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down.

## Company representative will be on location during plugging procedures.

- **1.** A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- **2.** Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- **3.** Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private- shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- **5.** A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can +be released.
- **6.** If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- **8.** Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- **10.** All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- **13.** A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- **14.** All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.
- **16.** When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- **18.** A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).

- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
- A) Fusselman
- B) Devonian
- C) Morrow
- D) Wolfcamp
- E) Bone Springs
- F) Delaware
- G) Any salt sections
- H) Abo
- I) Glorieta
- J) Yates.
- K) Potash---(In the R-111-P Area (Potash Mine Area),

A solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, woe 4 hours and tag, this plug will be SO' below the bottom and 50' above the top of the Formation.

**21.** If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, woe and tagged. These plugs will be set SO' below formation bottom to 50' above formation top inside the casing.

## DRY HOLE MARKER REQ.UIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

- 1. Operator name
- 2. Lease and Well Number
- 3. API Number
- 4. Unit letter
- 5. Quarter Section (feet from the North, South, East or West)
- 6. Section, Township and Range
- 7. Plugging Date
- 8. County

#### SPECIAL CASES ----AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS


In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

#### SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

Mark L. Shidler Inc Elk State #3 30-025-22697 UL – L, Sec 16, T23S, R37E 1650' FSL & 990' FWL

10 3/4" 40# csg @ 800' w/ 550 sx 7 5/8" 29.7# csg @ 6092' w/ 680 sx Perfs 5029-99' sqz'd w/ 150 sx Active perfs 5438' – 5994' TD 6092'


- 1. Set CIBP at 4929'.
- 2. Circulate mud laden fluid. Pressure test casing.
- 3. Spot 25 sx cmt on CIBP.
- 4. POOH to 3900'. Spot 25 sx cmt. (Top SA)
- 5. Perf at 2474'. Sqz w/ 50 sx cmt. WOC & Tag. (B Salt)
- 6. Perf at 1100'. Sqz w/50 sx cmt. WOC & Tag. (T Salt)
- 7. Perf at 850'. Sqz w/ 50 sx cmt. WOC & Tag. (Shoe)
- 8. Perf at 150'. Pump sufficient cmt to circulate to surface. (Fill 10 3/4" x 7 5/8" annulus and 7 5/8" csg to surface.)
- 9. Cut off wellhead. Verify cement to surface all strings. Install dry hole marker.

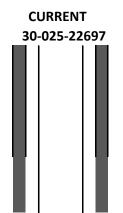

10 3/4" 40# csg @ 800'

T Salt 1153' B Salt 2424' T SA 3863'

(Sqz'd Perfs 5029' - 5099' w/ 150 sx) Perfs 5438' - 5994' 7" 5/8 29.7# csg @ 6092'

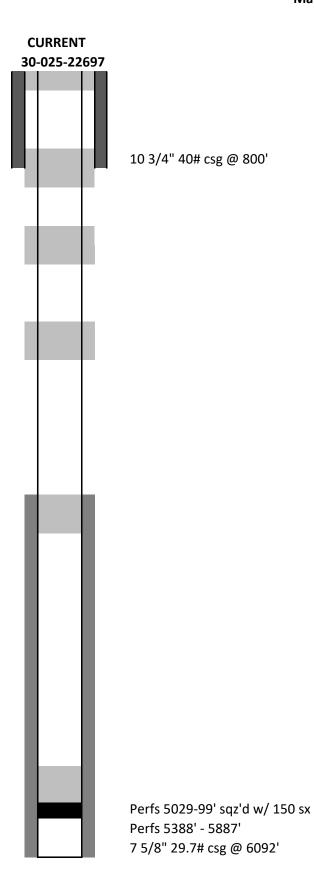

INSTALL DRY HOLE MARKER
CUT OFF WELLHEAD & VERIFY CMT
CIRC CMT TO SURF
PERF AT 150'
WOC & TAG
SQZ W/ 50 SX CMT
PERF AT 850'

WOC & TAG SQZ W/ 50 SX CMT PERF AT 1100'

WOC & TAG SQZ W/ 50 SX CMT PERF AT 2474'

SPOT 25 SX CMT POOH TO 3900'

SPOT 25 SX CMT
CIRC HOLE W/ MLF & PRESSURE TEST CSG
SET CIBP AT 4929'

<u>District I</u> 1625 N. French Dr., Hobbs, NM 88240 Phone:(575) 393-6161 Fax:(575) 393-0720

811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III
1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 14974

#### **CONDITIONS OF APPROVAL**

Operator:		OGRID:	Action Number:	Action Type:
MARK L SHIDLER INC	1313 Campbell Road	14096	14974	C-103F
Building D Houston, TX7705	5			

OCD Reviewer	Condition
kfortner	See attached conditions of approval