

Received by Opp Po 264/20122 Sister 31 P	State of New Mexic	20		Form C-103	
Office <u>District I</u> – (575) 393-6161	Energy, Minerals and Natural Resources		WELL ADINO	Revised August 1, 2011	
1625 N. French Dr., Hobbs, NM 88240 District II – (575) 748-1283			WELL API NO. 30-025-07411		
811 S. First St., Artesia, NM 88210	OIL CONSERVATION DI		5. Indicate Type of	Lease	
<u>District III</u> – (505) 334-6178 1000 Rio Brazos Rd., Aztec, NM 87410	1220 South St. Francis		STATE FEE		
<u>District IV</u> – (505) 476-3460	Santa Fe, NM 8750	5	6. State Oil & Gas Lease No.		
1220 S. St. Francis Dr., Santa Fe, NM 87505			19520		
SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A			Init Agreement Name os (G/SA) Unit		
DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)  1. Type of Well: Oil Well Gas Well Other: Injector		8. Well Number: 441			
Name of Operator     Occidental Permian Ltd.	<u> </u>		9. OGRID Number 157984	:	
3. Address of Operator	_		10. Pool name or W	Vildcat Vildcat	
P.O. Box 4294, Houston, TX, 77210	0		Hobbs; Grayburg-Sa	an Andres	
4. Well Location					
Unit Letter P: 330	<u>feet from the S line and</u>	660	<u>fe</u> et from the	<u>E</u> line	
Section 28	Township 18S Rang	ge 38E	NMPM	Lea County	
	11. Elevation (Show whether DR, RK	B, RT, GR, etc.			
	3642' (GL)				
NOTICE OF IN PERFORM REMEDIAL WORK TEMPORARILY ABANDON PULL OR ALTER CASING DOWNHOLE COMMINGLE	PLUG AND ABANDON ⊠ RI CHANGE PLANS □ CO	EMEDIAL WOR	LLING OPNS. P	ORT OF: LTERING CASING ☐ AND A ☐	
OTHER:	0.	THER:			
	eted operations. (Clearly state all pertire). SEE RULE 19.15.7.14 NMAC. Fompletion.				
1. MIRU PU x RU WL x Set 1.5" blanking		Dur	ing this procedure	we plan to use	
	MIRU PU x RU WL x Set 1.5" blanking plug in F Profile Nipple @ 3894' Unlatch from on-off tool x kill well x ND WH x NU BOP Latch onto on-off tool x Unset packer x POOH w/ inj eqpt  BU WS and PU with 4 02 CIPP x Set CIPP @ 3890'; w Dynam 50 or ent on too CIPP.		m with a steel		
	CIBP @ 3890' x Dump 50 sx cmt on top CIBP	tan	nk and haul contents to the required		
<ul><li>5. <u>WOC. Tag @ 3750' or higher</u></li><li>6. Circulate 12# Plug mud</li></ul>		dier	sposal per ODC Rule 19.15.17		
7. Spot 25 sx of cmt at 2700'	or (Votes Plug)	disp	osai pei obe ita		
WWW and Tag @ 2600) or highs	r (Yates riug)				
<ul> <li>8. WOC and Tag @ 2600' or highe</li> <li>9. Perf @ 1684' and sqz 80 sx of cmt und</li> <li>10. WOC and Tag @ 1500' or highe</li> <li>11. Perf @ 293' and attempt to circulate 1</li> </ul>	ler pkr er (Rustler / Csg Shoe plug)		4" diameter 4' tal Marker	Above Ground	
<ul> <li>9. Perf @ 1684' and sqz 80 sx of cmt und</li> <li>10. WOC and Tag @ 1500' or highe</li> <li>11. Perf @ 293' and attempt to circulate 1</li> <li>12. Top-off as necessary (Surface / O</li> </ul>	ler pkr e <u>r (Rustler / Csg Shoe plug)</u> 20 sx of cmt to surface Csg Shoe plug)	elle e		Above Ground	
<ul> <li>9. Perf @ 1684' and sqz 80 sx of cmt und</li> <li>10. WOC and Tag @ 1500' or highe</li> <li>11. Perf @ 293' and attempt to circulate 1</li> <li>12. Top-off as necessary (Surface / C</li> </ul>	ler pkr e <u>r (Rustler / Csg Shoe plug)</u> 20 sx of cmt to surface				
<ul> <li>9. Perf @ 1684' and sqz 80 sx of cmt und</li> <li>10. WOC and Tag @ 1500' or highe</li> <li>11. Perf @ 293' and attempt to circulate 1</li> <li>12. Top-off as necessary (Surface / C</li> <li>13. Cut off wellhead and install dry hole man</li> </ul>	ler pkr e <u>r (Rustler / Csg Shoe plug)</u> 20 sx of cmt to surface Csg Shoe plug)		Marker SEE ATTACHED C		
<ul> <li>9. Perf @ 1684' and sqz 80 sx of cmt und</li> <li>10. WOC and Tag @ 1500' or highe</li> <li>11. Perf @ 293' and attempt to circulate 1</li> <li>12. Top-off as necessary (Surface / C</li> <li>13. Cut off wellhead and install dry hole man</li> <li>14. Clean up location, remove anchors</li> </ul>	ler pkr  or (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab		Marker SEE ATTACHED C		
9. Perf @ 1684' and sqz 80 sx of cmt und 10. WOC and Tag @ 1500' or highe 11. Perf @ 293' and attempt to circulate 1 12. Top-off as necessary (Surface / C 13. Cut off wellhead and install dry hole man 14. Clean up location, remove anchors  Spud Date:	ler pkr er (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab  Rig Release Date:		Marker SEE ATTACHED COP APPROVAL		
9. Perf @ 1684' and sqz 80 sx of cmt und 10. WOC and Tag @ 1500' or highe 11. Perf @ 293' and attempt to circulate 1 12. Top-off as necessary (Surface / C 13. Cut off wellhead and install dry hole man 14. Clean up location, remove anchors  Spud Date:	ler pkr  or (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab		Marker SEE ATTACHED COP APPROVAL		
9. Perf @ 1684' and sqz 80 sx of cmt und 10. WOC and Tag @ 1500' or highe 11. Perf @ 293' and attempt to circulate 1 12. Top-off as necessary (Surface / C 13. Cut off wellhead and install dry hole man 14. Clean up location, remove anchors  Spud Date:	ler pkr er (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab  Rig Release Date:	of my knowledg	Marker  SEE ATTACHED COF APPROVAL  e and belief.		
9. Perf @ 1684' and sqz 80 sx of cmt und 10. WOC and Tag @ 1500' or highe 11. Perf @ 293' and attempt to circulate 1 12. Top-off as necessary (Surface / C 13. Cut off wellhead and install dry hole man 14. Clean up location, remove anchors  Spud Date:	ler pkr er (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab  Rig Release Date:	of my knowledg	Marker  SEE ATTACHED COF APPROVAL  e and belief.		
9. Perf @ 1684' and sqz 80 sx of cmt und 10. WOC and Tag @ 1500' or highe 11. Perf @ 293' and attempt to circulate 1 12. Top-off as necessary (Surface / C 13. Cut off wellhead and install dry hole man 14. Clean up location, remove anchors  Spud Date:	ler pkr  or (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab  Rig Release Date:  above is true and complete to the best of the best of the lease	of my knowledg	Marker  SEE ATTACHED COF APPROVAL  e and belief.  DATE: 2/4	CONDITIONS	
9. Perf @ 1684' and sqz 80 sx of cmt und 10. WOC and Tag @ 1500' or highe 11. Perf @ 293' and attempt to circulate 1 12. Top-off as necessary (Surface / C 13. Cut off wellhead and install dry hole man 14. Clean up location, remove anchors  Spud Date:  I hereby certify that the information a  SIGNATURE Romi Mathe  Type or print name Roni Mathew  For State Use Only	ler pkr  or (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab  Rig Release Date:  above is true and complete to the best of  betw TITLE Regulatory Analyst, Si  E-mail address ron	of my knowledg	Marker  SEE ATTACHED COF APPROVAL  e and belief.  DATE: 2/4  .com PHONE:	CONDITIONS  //2022	
9. Perf @ 1684' and sqz 80 sx of cmt und 10. WOC and Tag @ 1500' or highe 11. Perf @ 293' and attempt to circulate 1 12. Top-off as necessary (Surface / C 13. Cut off wellhead and install dry hole man 14. Clean up location, remove anchors  Spud Date:  I hereby certify that the information a  SIGNATURE Romi Mathe  Type or print name Roni Mathew  For State Use Only	ler pkr  or (Rustler / Csg Shoe plug) 20 sx of cmt to surface Csg Shoe plug) rker (verify cement to surface all string) with lab  Rig Release Date:  above is true and complete to the best of the best of the lab  Right Release Date:	of my knowledg	Marker  SEE ATTACHED COF APPROVAL  e and belief.  DATE: 2/4  .com PHONE:	CONDITIONS  //2022	

## **Current WBD**

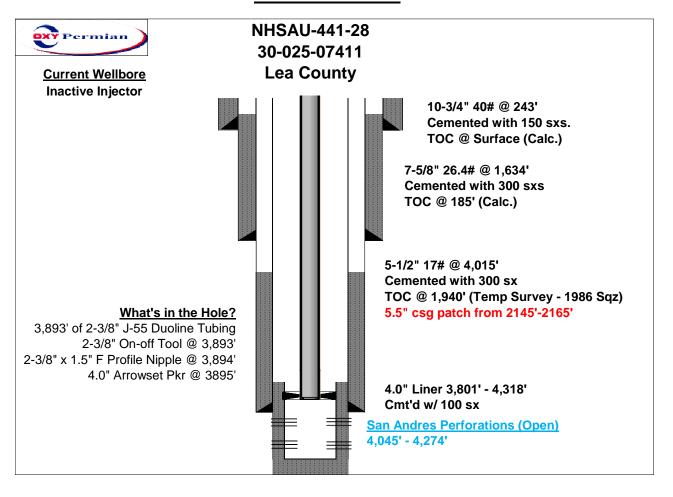

## **Proposed WBD**

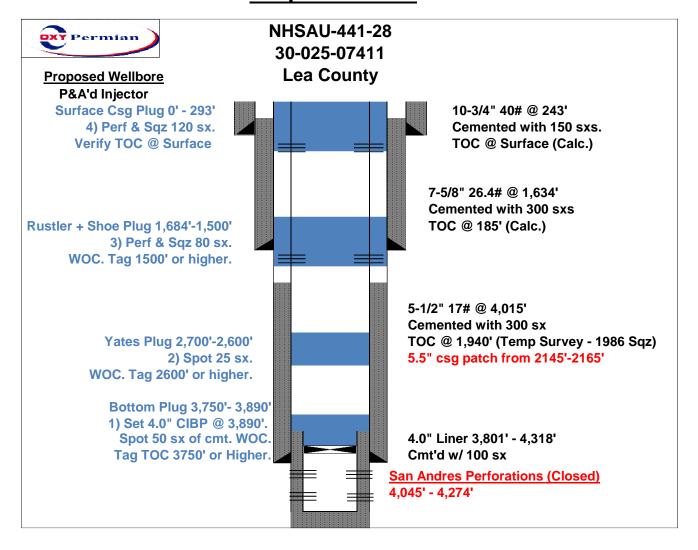

# CONDITIONS OF APPROVAL FOR PLUGGING AND ABANDONMENT OCD - Southern District

The following is a guide or checklist in preparation of a plugging program, this is not all inclusive and care must be exercised in establishing special plugging programs in unique and unusual cases, Notify NMOCD District Office I (Hobbs) at (575)-263-6633 at least 24 hours before beginning work. After MIRU rig will remain on well until it is plugged to surface. OCD is to be notified before rig down.

### Company representative will be on location during plugging procedures.

- **1.** A notice of intent to plug and abandon a wellbore is required to be approved before plugging operations are conducted. A cement evaluation tool is required in order to ensure isolation of producing formations, protection of water and correlative rights. A cement bond log or other accepted cement evaluation tool is to be provided to the division for evaluation if one has not been previously run or if the well did not have cement circulated to surface during the original casing cementing job or subsequent cementing jobs. Insure all bradenheads have been exposed, identified and valves are operational prior to rig up.
- **2.** Closed loop system is to be used for entire plugging operation. Upon completion, contents of steel pits are to be hauled to a permitted disposal location.
- **3.** Trucking companies being used to haul oilfield waste fluids to a disposal commercial or private- shall have an approved NMOCD C-133 permit. A copy of this permit shall be available in each truck used to haul waste products. It is the responsibility of the operator as well as the contractor, to verify that this permit is in place prior to performing work. Drivers shall be able to produce a copy upon request of an NMOCD Field inspector.
- 4. Filing a subsequent C-103 will serve as notification that the well has been plugged.
- **5.** A final C-103 shall be filed (and a site inspection by NMOCD Inspector to determine if the location is satisfactorily cleaned, all equipment, electric poles and trash has been removed to Meet NMOCD standards) before bonding can +be released.
- **6.** If work has not begun within 1 Year of the approval of this procedure, an extension request must be file stating the reason the well has not been plugged.
- 7. Squeeze pressures are not to exceed 500 psi, unless approval is given by NMOCD.
- **8.** Produced water will not be used during any part of the plugging operation.
- 9. Mud laden fluids must be placed between all cement plugs mixed at 25 sacks per 100 bbls of water.
- **10.** All cement plugs will be a minimum of 100' in length or a minimum of 25 sacks of cement, whichever is greater. 50' of calculated cement excess required for inside casing plugs and 100% calculated cement excess required on outside casing plugs.
- 11. Class 'C' cement will be used above 7500 feet.
- 12. Class 'H' cement will be used below 7500 feet.
- **13.** A cement plug is required to be set 50' above and 50' below, casing stubs, DV tools, attempted casing cut offs, cement tops outside casing, salt sections and anywhere the casing is perforated, these plugs require a 4 hour WOC and then will be tagged
- **14.** All Casing Shoes Will Be Perforated 50' below shoe depth and Attempted to be Squeezed, cement needs to be 50' above and 50' Below Casing Shoe inside the Production Casing.
- **16.** When setting the top out cement plug in production, intermediate and surface casing, wellbores should remain full at least 30 minutes after plugs are set
- 17. A CIBP is to be set within 100' of production perforations, capped with 100' of cement, WOC 4 hours and tag.
- **18.** A CIBP with 35' of cement may be used in lieu of the 100' plug if set with a bailer. This plug will be placed within 100' of the top perforation, (WOC 4 hrs and tag).

- 19. No more than 3000' is allowed between cement plugs in cased hole and 2000' in open hole.
- 20. Some of the Formations to be isolated with cement plugs are: These plugs to be set to isolate formation tops
- A) Fusselman
- B) Devonian
- C) Morrow
- D) Wolfcamp
- E) Bone Springs
- F) Delaware
- G) Any salt sections
- H) Abo
- I) Glorieta
- J) Yates.
- K) Potash---(In the R-111-P Area (Potash Mine Area),

A solid cement plug must be set across the salt section. Fluid used to mix the cement shall be saturated with the salts that are common to the section penetrated and in suitable proportions, not more than 3% calcium chloride (by weight of cement) will be considered the desired mixture whenever possible, WOC 4 hours and tag, this plug will be 50' below the bottom and 50' above the top of the Formation.

**21.** If cement does not exist behind casing strings at recommended formation depths, the casing can be cut and pulled with plugs set at recommended depths. If casing is not pulled, perforations will be shot and cement squeezed behind casing, WOC and tagged. These plugs will be set 50' below formation bottom to 50' above formation top inside the casing.

### DRY HOLE MARKER REQ.UIRMENTS

The operator shall mark the exact location of the plugged and abandoned well with a steel marker not less than four inches in diameter, 3' below ground level with a plate of at least ¼" welded to the top of the casing and the dry hole marker welded on the plate with the following information welded on the dry hole marker:

- 1. Operator name
- 2. Lease and Well Number
- 3. API Number
- 4. Unit letter
- 5. Quarter Section (feet from the North, South, East or West)
- 6. Section, Township and Range
- 7. Plugging Date
- 8. County

#### SPECIAL CASES ----AGRICULTURE OR PRARIE CHICKEN BREEDING AREAS

In these areas, a below ground marker is required with all pertinent information mentioned above on a plate, set 3' below ground level, a picture of the plate will be supplied to NMOCD for record, the exact location of the marker (longitude and latitude by GPS) will be provided to NMOCD (We typically require a current survey to verify the GPS)

#### SITE REMEDIATION DUE WITHIN ONE YEAR OF WELL PLUGGING COMPLETION

District I
1625 N. French Dr., Hobbs, NM 88240
Phone: (575) 393-6161 Fax: (575) 393-0720

District II 811 S. First St., Artesia, NM 88210 Phone:(575) 748-1283 Fax:(575) 748-9720

District III 1000 Rio Brazos Rd., Aztec, NM 87410 Phone:(505) 334-6178 Fax:(505) 334-6170

1220 S. St Francis Dr., Santa Fe, NM 87505 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico Energy, Minerals and Natural Resources Oil Conservation Division** 1220 S. St Francis Dr. **Santa Fe, NM 87505** 

CONDITIONS

Action 78716

#### **CONDITIONS**

Operator:	OGRID:
OCCIDENTAL PERMIAN LTD	157984
P.O. Box 4294	Action Number:
Houston, TX 772104294	78716
	Action Type:
	[C-103] NOI Plug & Abandon (C-103F)

#### CONDITIONS

Created By	Condition	Condition Date
kfortner	See attached conditions of approval	2/28/2022