

U.S. Department of the Interior  
BUREAU OF LAND MANAGEMENT

<b>Well Name:</b> MF	<b>Well Location:</b> T24N / R10W / SEC 13 / SESE / 36.308807 / -107.841324	<b>County or Parish/State:</b> SAN JUAN / NM
<b>Well Number:</b> 2	<b>Type of Well:</b> CONVENTIONAL GAS WELL	<b>Allottee or Tribe Name:</b>
<b>Lease Number:</b> NMNM16760	<b>Unit or CA Name:</b>	<b>Unit or CA Number:</b>
<b>US Well Number:</b> 300452499500S1	<b>Well Status:</b> Producing Gas Well	<b>Operator:</b> DUGAN PRODUCTION CORPORATION

**Notice of Intent**

**Sundry ID:** 2713750

**Type of Submission:** Notice of Intent

**Type of Action:** Plug and Abandonment

**Date Sundry Submitted:** 02/02/2023

**Time Sundry Submitted:** 09:27

**Date proposed operation will begin:** 02/27/2023

**Procedure Description:** Dugan Production requests permission to plug and abandon the well as per the following procedure: 1) Pull and LD rods. TOOH w/2-3/8" production tubing. Run 4½" casing scraper to 6320'. RIH w/4½" cement retainer and set @ 6302'. Load hole. Pressure test work string. Pressure test casing to 600 psi for 30 minutes. Run CBL from 6302' to surface to determine TOC behind casing. All plugs are planned as inside plugs. Will make any changes after verifying the cement tops from CBL. 2) Spot Plug I above CR from 6302' to 6125' to cover the perforations and Dakota top w/18 sks (20.7 cu ft) Class G cement (1.15 cu ft/sk, 15.8#/gal, 5 gal/sk mix water) w/50' excess included. Plug I, Dakota, inside 4½" casing, 18 sks, 20.7 cu ft, 6125'-6302'. 3) Spot Plug II inside 4½" casing from 5075' to 4975' to cover Gallup top w/12 sks (13.8 cu ft) Class G cement w/50' excess added. Plug II, Gallup, inside 4½" casing, 12 sks, 13.8 cu ft, 4975'-5075'. 4) Spot Plug III inside 4½" casing from 4395' to 4295' to cover the Mancos top w/12 sks (13.8 cu ft) Class G cement w/50' excess added. Plug III, Mancos, inside 4½" casing, 12 sks, 13.8 cu ft, 4295'-4395'. 5) Spot Plug IV inside 4½" casing from 3250' to 3150' to cover the Mesaverde top w/12 sks (13.8 cu ft) Class G cement w/50' excess added. Plug IV, Mesaverde, inside 4½" casing, 12 sks, 13.8 cu ft, 3150'-3250'. 6) Spot Plug V inside 4½" casing from 2145' to 1626' to cover the Chacra & Pictured Cliffs tops w/45 sks (52 cu ft) Class G cement w/50' excess added. Plug V, Chacra-Pictured Cliffs, inside 4½" casing, 45 sks, 52 cu ft, 1626'-2145'. 7) Spot Plug VI inside 4½" casing from 1237' to 690' to cover the Fruitland-Kirtland-Ojo Alamo tops w/48 sks (55.2 cu ft) Class G cement w/50' excess added. Plug VI, Fruitland-Kirtland-Ojo Alamo, inside 4½" casing, 48 sks, 55.2 cu ft, 690'-1237'. 8) Spot Plug VII inside 4½" casing from 267' to cover the surface casing shoe w/25 sks (28.8 cu ft) Class G cement w/50' excess added. Plug VII, surface, inside 4½" casing, 25 sks, 28.8 cu ft, 0'-267'. 9) WOC 4 hrs. Cut wellhead. Tag TOC at surface. Fill cement in case needed. 10) Install dry hole marker. Clean location.

Well Name: MF

Well Location: T24N / R10W / SEC 13 / SESE / 36.308807 / -107.841324

County or Parish/State: SAN JUAN / NM

Well Number: 2

Type of Well: CONVENTIONAL GAS WELL

Allottee or Tribe Name:

Lease Number: NMNM16760

Unit or CA Name:

Unit or CA Number:

US Well Number: 300452499500S1

Well Status: Producing Gas Well

Operator: DUGAN PRODUCTION CORPORATION

### Surface Disturbance

Is any additional surface disturbance proposed?: No

### NOI Attachments

#### Procedure Description

MF\_2\_PA\_Reclamation\_Plan\_20230202092021.pdf

MF\_2\_PA\_formation\_tops\_20230202092009.pdf

MF\_2\_PA\_planned\_wellbore\_schematic\_20230202091958.pdf

MF\_2\_PA\_current\_wellbore\_schematic\_20230202091945.pdf

### Conditions of Approval

#### Additional

24N10W13PKd\_MF\_002\_20230203155214.pdf

#### Authorized

General\_Requirement\_PxA\_20230206081423.pdf

2713750\_NOIA\_2\_3004320481\_KR\_02062023\_20230206081410.pdf

Well Name: MF

Well Location: T24N / R10W / SEC 13 / SESE / 36.308807 / -107.841324

County or Parish/State: SAN JUAN / NM

Well Number: 2

Type of Well: CONVENTIONAL GAS WELL

Allottee or Tribe Name:

Lease Number: NMNM16760

Unit or CA Name:

Unit or CA Number:

US Well Number: 300452499500S1

Well Status: Producing Gas Well

Operator: DUGAN PRODUCTION CORPORATION

### Operator

I certify that the foregoing is true and correct. Title 18 U.S.C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction. Electronic submission of Sundry Notices through this system satisfies regulations requiring a

Operator Electronic Signature: TYRA FEIL

Signed on: FEB 02, 2023 09:19 AM

Name: DUGAN PRODUCTION CORPORATION

Title: Authorized Representative

Street Address: PO Box 420

City: Farmington

State: NM

Phone: (505) 325-1821

Email address: tyrafeil@duganproduction.com

### Field

Representative Name: ALIPH REENA

Street Address: PO BOX 420

City: FARMINGTON

State: NM

Zip: 87499-0420

Phone: (505)325-1821

Email address: Aliph.Reena@duganproduction.com

### BLM Point of Contact

BLM POC Name: KENNETH G RENNICK

BLM POC Title: Petroleum Engineer

BLM POC Phone: 5055647742

BLM POC Email Address: krennick@blm.gov

Disposition: Approved

Disposition Date: 02/06/2023

Signature: Kenneth Rennick

**Current Wellbore Schematic**

MF # 2

Dugan Production Corp

API; 30-045-24995


Sec 13 T24N R10W

NM 16760

790' FSL & 790' FEL

Basin Dakota

Lat:36.3089561 Long:-107.8419266

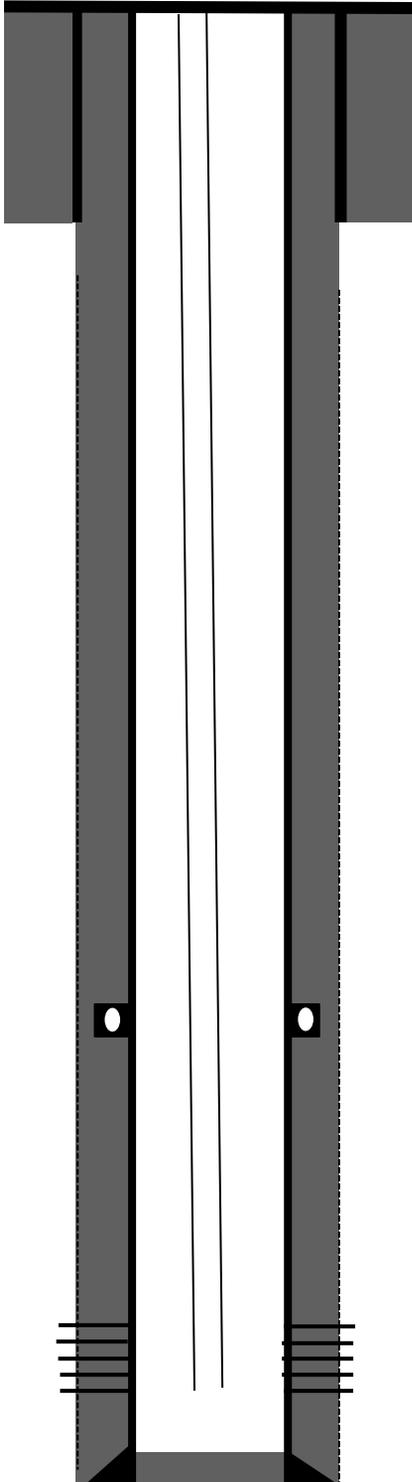

8-5/8" 24# casing @ 217'. Cemented with 150 sks, Class B cement w/ 2% CaCl<sub>2</sub> (172.5 Cu.ft). Circulated cement to surface. Hole size: 12-1/4"

Cemented Stage I w / 250 sks Class B cement. Cemented stage II w/ 400 sks 65-35-12 followed by 100 sks CLass. Total cement for the job, 1757 Cu.ft. DV Tool @ 4442'. Hole size: 7-7/8"

**2-3/8", 4.7# tubing @ 6360**

**4 1/2" 10.5 # J-55 casing @ 6456'. PBTD @ 6395'**

Dakota Perforated @ 6352'-6370'



MF # 2  
Dugan Production Corp  
API; 30-045-24995  
Sec 13 T24N R10W  
NM 16760  
790' FSL & 790' FEL  
Basin Dakota  
Lat:36.3089561 Long:-107.8419266

**Formation Tops**

- Nacimiento: Surface
- Ojo Alamo: 740
- Kirtland: 963
- Fruitland: 1187
- Pictured Cliffs: 1676
- Chacra: 2095
- Cliff House: 3150
- Mancos: 4345
- Gallup: 5025
- Greenhorn: 6080
- Graneros: 6145
- Dakota: 6175

## P&A Reclamation Plan

### PURPOSE AND SCOPE

The purpose of this Reclamation Plan is to ensure final reclamation of the **MF #2** and associated access road based on the BLM/Operator on-site conducted in accordance with Onshore Order #1 and the FFO Bare Soil Reclamation Procedures.

### PROPOSED RECLAMATION PLAN

Operator will comply with the requirements in accordance with the approved Sundry Notice associated with this submittal.

- Contact BLM 48 hours prior to commencing earthwork.
- Reclamation to be completed within 1 year of plugging date.
- Remove all underground production piping.
- Remove all rig anchors on the location.
- Strip available topsoil from areas that will be disturbed during the reclamation of this well site
- Remove all gravel on well pad surface. Gravel may be used as fill material at the base of the cut slope to re-establish the natural topography.
- Use fill material on the location to reconstruct natural topography. If enough fill material is available, excess material will be used to build up the access road AFTER ripping the road base to eliminate surface compaction hard pan.
- **NOTE: NO disturbance will occur outside the areas currently disturbed by the well location access road boundaries.**
- After location has been re-contoured, rip, disk and seed the location and access road with a disk type seed drill.
- Install a woven wire fence at and across the access road leading to the well site at the intersection of the main road and take off point(s) to discourage access on rehabilitated access road.
- Install a sign on fence, i.e., Seeded Area—Do Not Disturb.

### Waste Material Handling and Disposal

All surface equipment and trash, if any, will be removed from the location and disposed of at an approved waste disposal facility.

### Surface Reconstruction and Stabilization

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration including the restoration of natural vegetation. Operator will avoid disturbance to the mature vegetation that has become well established on the pad perimeter to the extent practicable, and will focus reclamation efforts toward de-compaction, removing sharp, angular features to more closely approximate the natural contours, re-establishing natural drainage patterns, and re-vegetating the abandoned well pad and access road.

## Well Pad Reclamation

(Note: some steps may occur in different sequence than listed below or may occur simultaneously as the case may be):

1. The following activities would take place before commencing with any dirt work to restore the pad surface:

- The BLM Authorized officers will be notified at least 48 hours prior to construction.
- Pre-construction conditions will be documented, and pictures taken from the four cardinal directions for future reference;
- The P&A marker will remain as is. All pertinent well information is permanently imprinted onto the marker for future reference.
- Temporary and/or permanent stormwater and erosion control BMPs will be employed at appropriate locations around the pad as dictated by local drainage patterns and expected areas of disturbance and slopes AND across the access road. BMP selection will be determined by local factors and will be a combination of sediment and erosions controls that are deemed effective and low maintenance. Straw wattles, diversion ditches, mulch, soil blankets, and/or other suitable BMPs may be used in various combinations, as appropriate, during and after construction activities;
- Remove all gravel on well pad surface. Gravel may be used at the base of the cut slope underneath the fill material to re-establish the natural topography.
- Use fill material to reconstruct natural topography.
- If enough fill material is available, excess material will be used to build up the access road (which is lower in depth than the natural grade due to compaction and erosion) AFTER ripping the road base to eliminate surface compaction hard pan;
- Those areas where healthy, mature, and weed-free vegetation has established along the pad perimeter will remain undisturbed to the extent possible;
- Natural drainage patterns will be restored, as practical, as near as possible to pre-disturbance conditions;
- The pad surface will be ripped by Bulldozer or Grader to reduce compaction and to establish a suitable root zone in preparation for topsoil replacement;
- Topsoil will be redistributed across the pad surface and disked to prepare the soil for seeding;
- After location has been re-contoured, rip, disk and seed the location and access road with a disk type seed drill;
- All disturbed areas will be seeded in accordance with the FFO Bare Soil Reclamation Procedures.

### **Access Road Reclamation**

Upon completion of all well pad reclamation activities, the associated access road will be reclaimed using much the same methods as described above. The road will be ripped and scarified to reduce compaction, and any sharp or angular cuts or fills would be restored as near as possible to pre-disturbance conditions. **NO disturbance will occur outsider the areas currently disturbed by the access road boundaries.**

Establish vegetation along the roadsides will remain undisturbed where possible to encourage native plant growth onto the new disturbance and to maintain erosion and sediment control. Straw wattles and/or diversion ditches will be placed at appropriate locations along the road as needed to prevent sediment transport to local drainages. Other suitable BMPs may be used in various combinations, as appropriate, during and after construction activities.

All disturbed areas will be re-seeded in accordance with BLM FFO Bare Soil Reclamation Procedures.

To discourage future use of the road, a temporary fence consisting of woven wire fence at and across the access road leading to the well site at the intersection of the main road and rake off point(s) to discourage access on rehabilitated access road and will serve as a barricade to discourage access to the newly reclaimed road and will be left in place until the road & well pad have been stabilized.

A sign will be installed on the fence, i.e., "Seeded Area – Do Not Disturb" or equivalent

### **Re-establishing Surface Hydrology**

Natural drainage patterns will be restored as near as possible to pre-construction conditions, except where restoring the natural drainage will cause excessive disturbance and disrupt the natural rehabilitation process that have already established. In those areas, additional means for ensuring proper drainage, such as water bars or diversion ditches, may be employed.

Eroded areas will be filled in using material from the well location and Best Management Practices (BMPs) for Storm water pollution prevention such as silt traps, excelsior mats, wattles/sediment control logs and straw distributed on the surface and crimped or harrowed into the soil after drill seeding.

Given that the well pad will effectively be inaccessible following road reclamation and because the only potential pollution source will be runoff sediment; the temporary stormwater BMPs will be removed upon completion of construction activities. Drainage, sediment, and erosion controls will be managed through vegetative practices and/or biodegradable materials (i.e., soil blankets, straw wattles, crimped straw, mulch, brush and woody debris, pocking, etc.).

All drainage, sediment, and erosion controls will be implemented in accordance with Operator standard Stormwater Management Plan.

### **Site Preparation, Soil Management and Handling**

Fill material will be pushed into cuts and over the back slope as necessary and any sharp, angular cuts and fills will be smoothed to conform as nearly as practical to the adjacent landform. The pad and road surfaces will then be ripped, sacrificed, and/or disked to a depth adequate for establishing a suitable root zone.

All salvaged topsoil material will be reused and spread evenly over the disturbed areas. Prior to seeding, all disturbed areas will be left with a rough surface to facilitate moisture and seed retention, and vegetative slash/brush will be placed at expected discharge areas to minimize sediment transport. The topsoil in the area is generally deep and no soil amendments are expected or proposed.

### **Revegetation**

Following soil preparations, a range drill (disk type seed drill) will be used to apply the approved seed mix over the disturbed areas. The drill will be equipped with a depth regulator to ensure even planting depths appropriate to the plant and species and soil types. Should broadcast seeding be deemed more appropriate in some areas, the seed application rates will be doubled, and a rake or harrow used to incorporate the seed into the soil. Any steep slopes, greater than 2:1, will be blanketed for soil stabilization and seed retention.

The seed mixture and application rates for the reclamation site shall be an approved BLM mixture that represents the vegetative community.

Seed mix is available locally or from Southwest Seed in Dolores, CO, or an approved vendor of native seed mixes.

Seed mixture will be certified weed-free and the seeding records (bag labels) or other official documentation will be available to the Authorized Officer prior to seeding.

Seeding will be accomplished as soon as reasonably possible following completion of earthwork activities. The Authorized Officer will be notified forty-eight (48) hours prior to commencing with seed application.

### **Weed Management**

Operator's objective is to implement an integrated weed management program to control weed populations and establish desirable vegetation utilizing the following strategies:

- Control the introduction and spread of weeds through early detection.
- Establish desirable native vegetation on disturbed areas through successful re-vegetation efforts.
- Treat and control known weed populations

Among the measures that will be implemented to prevent the introduction or establishment of weeds in areas not already infested include:

- Identification and eradication of new infestations as quickly as practical.
- Implement successful re-seeding efforts as quickly as practical in areas that have been disturbed.

Local factors, such as soil type and stability; grade; associated vegetation; existing and proposed land use; proximity to water; weed type and stage of growth; and severity of infestation; will be considered in selecting the appropriate weed management method(s). The management method(s) selected will be the least environmentally damaging, yet practical and reasonable in achieving the desired results.

Operator will utilize chemical treatment as the preferred method of weed management and control. The proper use of herbicides at the optimum time can be an effective method for controlling persistent weeds. A Pesticide Use Proposal (PUP) will be pre-approved by the BLM prior to any chemical treatment. The use and handling of herbicides will be in accordance with all application rates, restrictions, and warnings listed on the label and MSDS. Preparation and application of all herbicides will be licensed by the State of Colorado Department of Agriculture, and a Daily Weed Pesticide Application Record will be completed and retained for all spraying activities.

Other methods to be used for weed control will include the following:

- Remove soil, seeds, and vegetative matter prior to entering or leaving the project site on all construction equipment and transport vehicles, trucks, pickups, and other vehicles;
- Ensure that all seed mixes, straw, and/or mulch used in reclamation are certified weed-free;
- Promptly revegetating disturbed areas;
- Treating and/or removing weeds prior to ground-disturbing activities to limit seed production and dispersal;
- Treating noxious weeds that have escaped the project area onto adjacent areas to prevent further expansion into un-infested areas and re-infestation of the treated areas;

## **Monitoring**

After the earthwork and seeding is completed and seeding is completed, Operator will submit Sundry Notice informing the BLM that reclamation has been completed and which includes a request for an inspection of the earthwork and seeding.


A joint inspection will be conducted by Operator and BLM. During the inspection, the BLM and Operator will establish a line point intercept transect.

After establishment of adequate vegetation, Operator will read the line point intercept transect and take photos of the site. Operator will submit a Sundry Notice (FAN) requesting approval of the remediated well location and access road. Data results from the line point intercept transect and photos of the location and access road will be submitted as supporting documentation for the FAN Sundry Notice.

## **Summary**

Dugan Production will perform the following actions as deemed necessary from pre-P&A inspection

1. Remove all well site equipment
2. Contour and restore area to match surrounding topography prior to pad construction
3. Rip, disc and reseed the well pas and access road
4. Close and sample the BGT on location

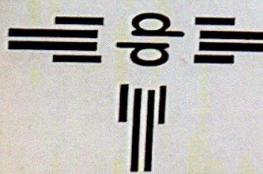  
**DUGAN PRODUCTION CORP.**


**MF #2**


**NM16760**

**API # 30-045-24995  
790' FSL, 790' FEL**

**SESE SEC. 13, T24N, R10W  
LAT. 36.30922 LONG. 107.84106**


**SAN JUAN COUNTY, NM  
FOR EMERGENCY CALL (505) 325-1823**

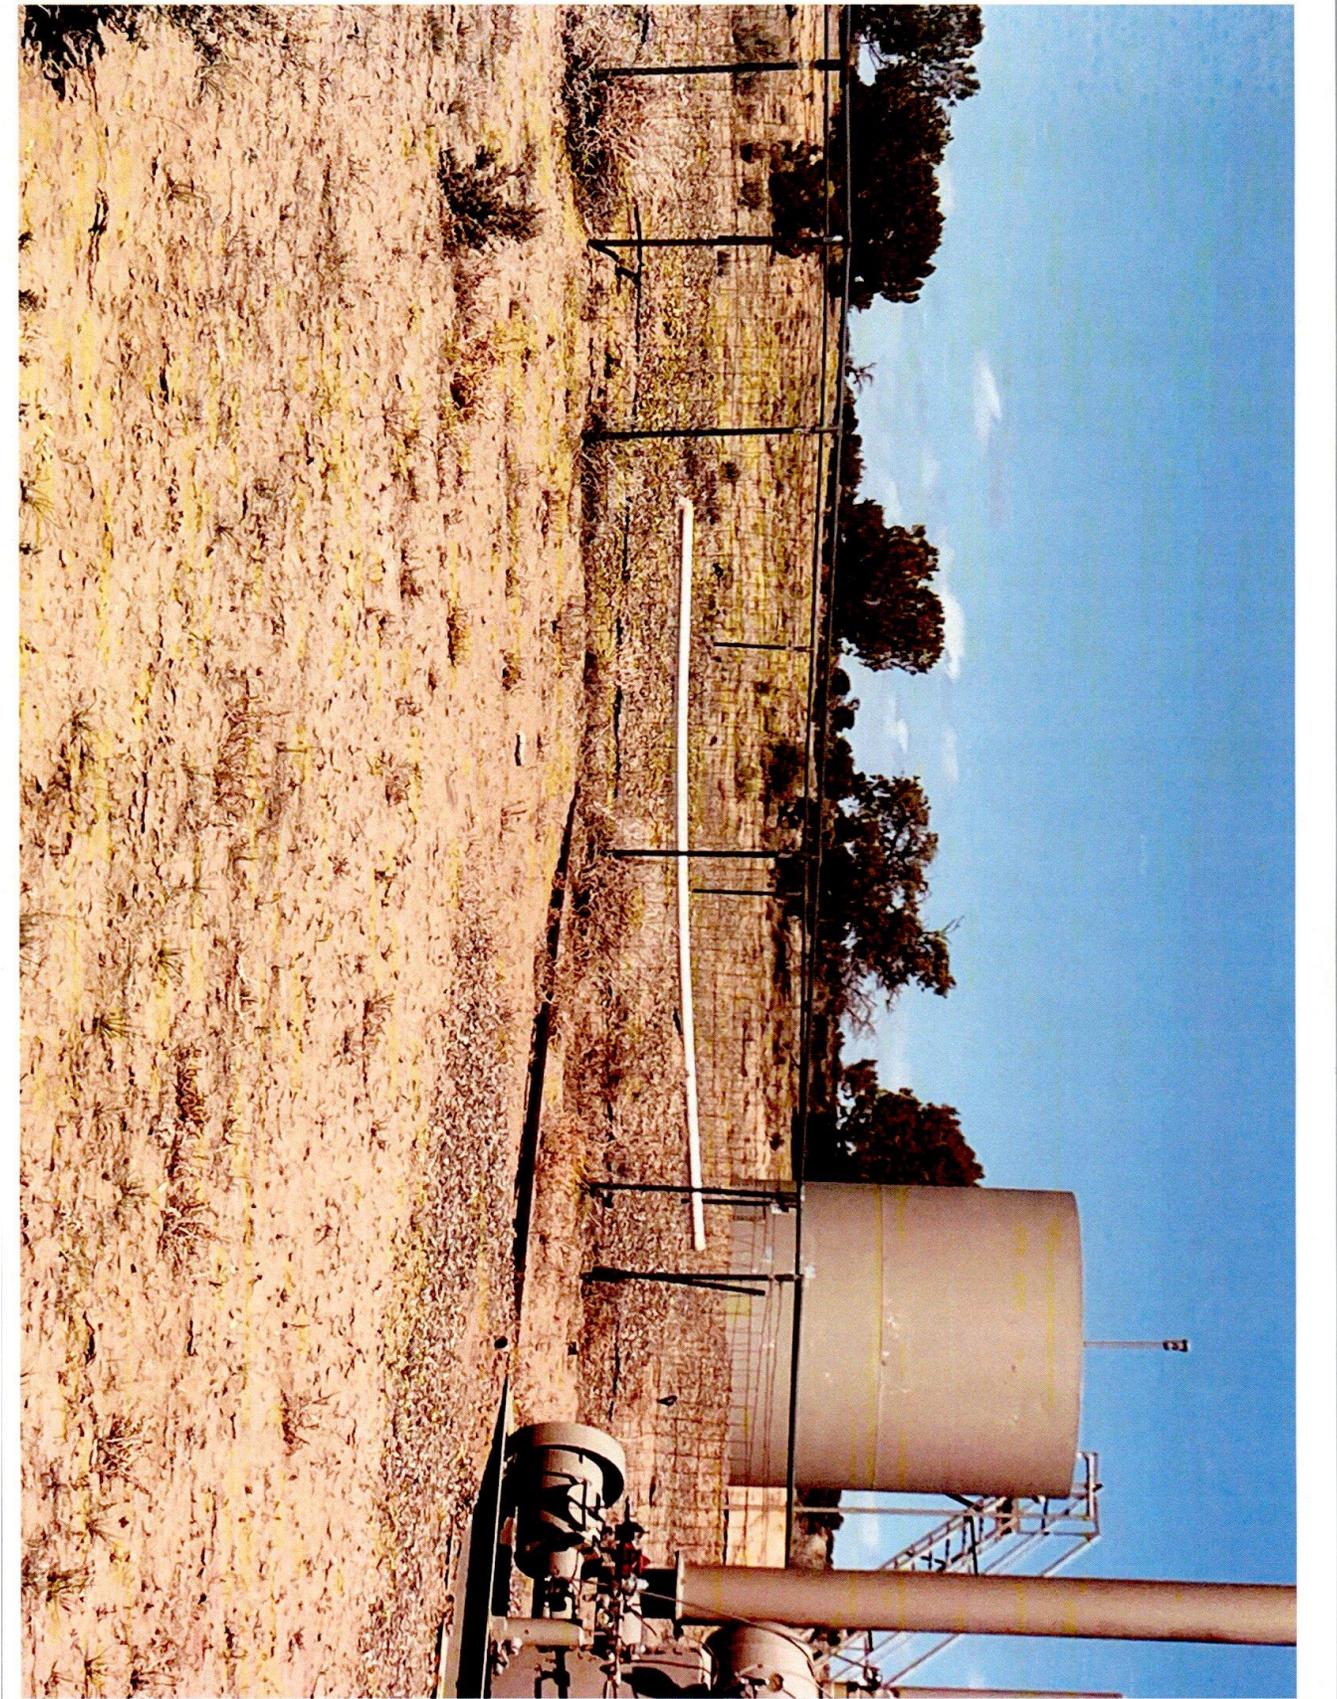

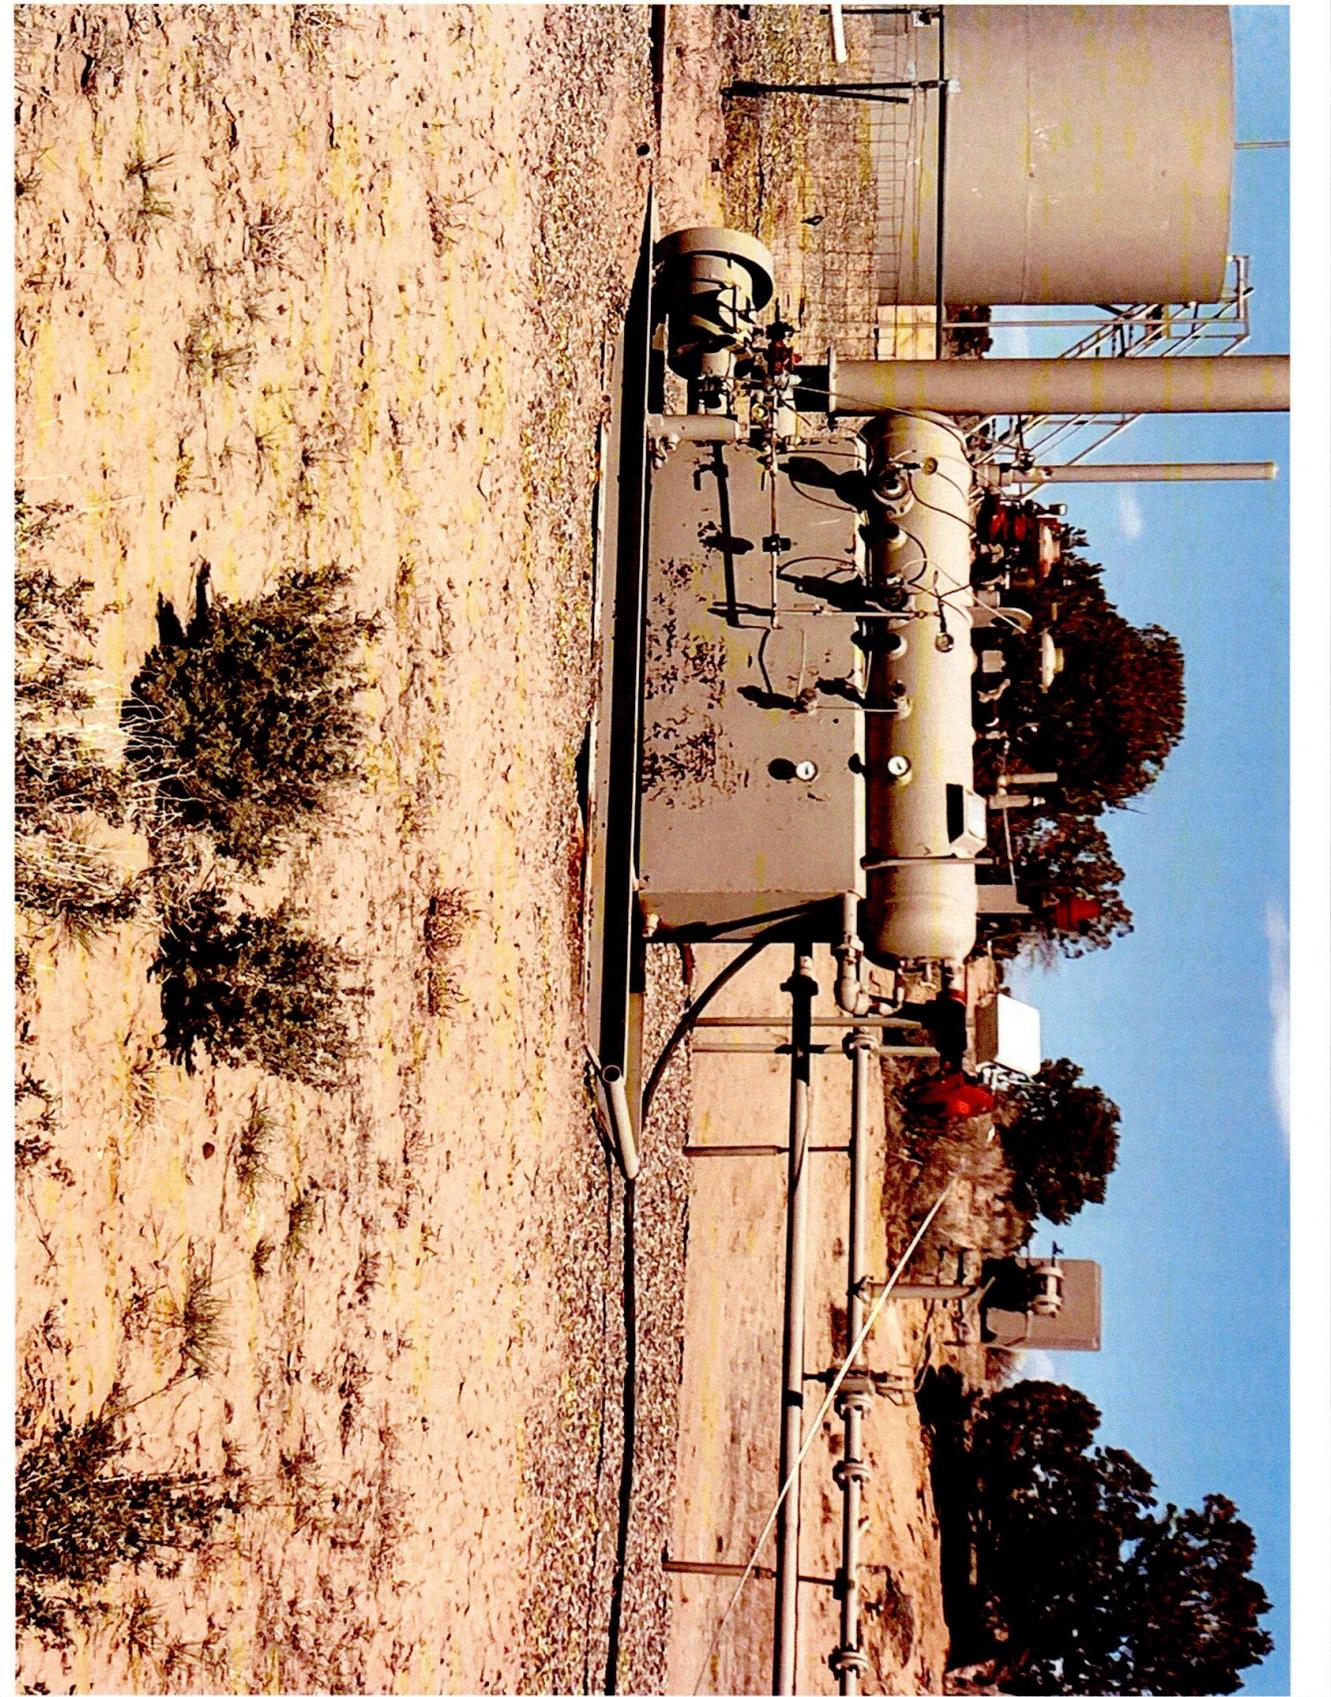





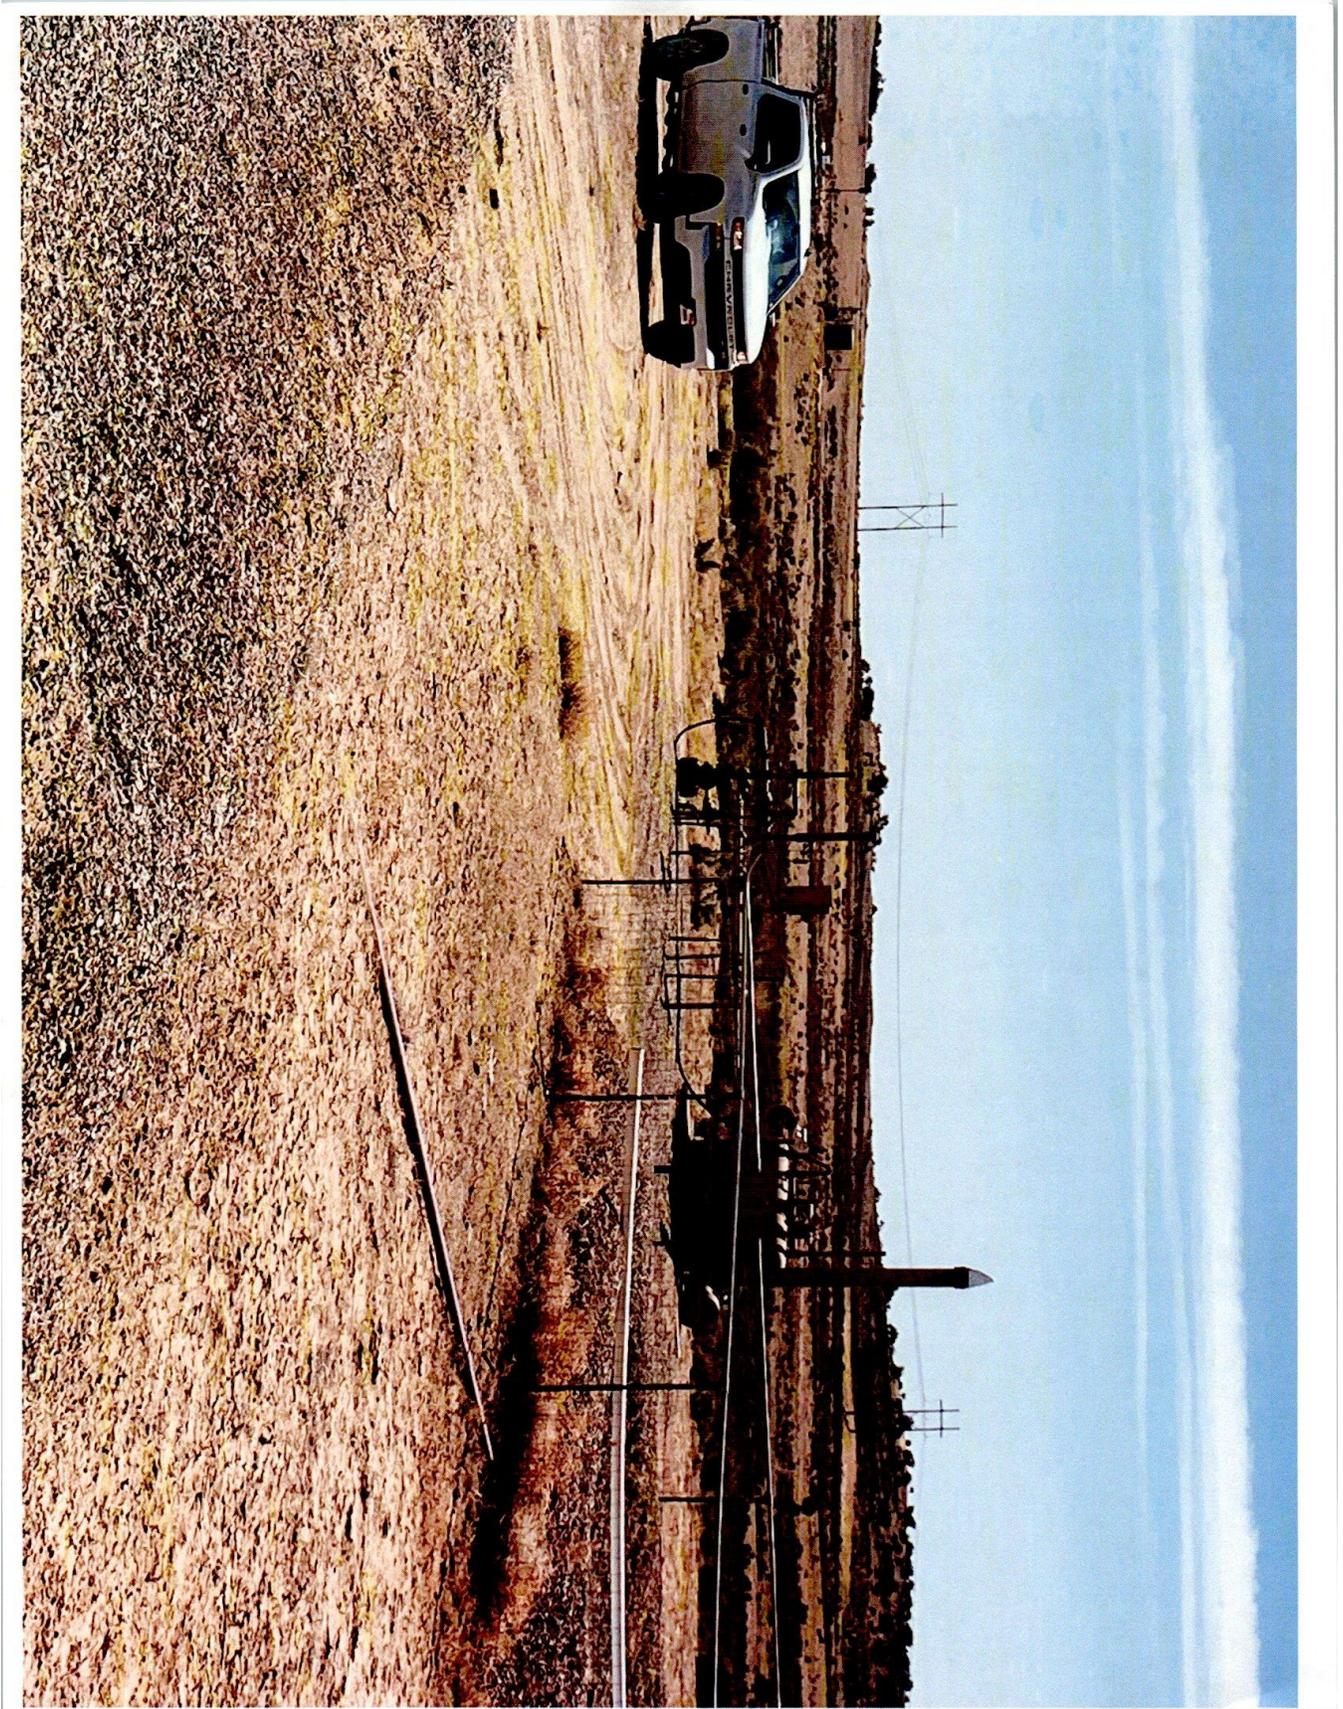



**UNITED STATES DEPARTMENT OF THE INTERIOR  
BUREAU OF LAND MANAGEMENT  
FARMINGTON DISTRICT OFFICE  
6251 COLLEGE BLVD.  
FARMINGTON, NEW MEXICO 87402**

AFMSS 2 Sundry ID 2713750

Attachment to notice of Intention to Abandon

Well: MF 2

**CONDITIONS OF APPROVAL**

1. Plugging operations authorized are subject to the attached "General Requirements for Permanent Abandonment of Wells on Federal and Indian Lease."
2. The following modifications to your plugging program are to be made:
  - a. Adjust Plug #4 (Mesaverde) to cover the interval from 3100' – 3200'
3. Farmington Office is to be notified at least 24 hours before the plugging operations commence at (505) 564-7750.

You are also required to place cement excesses per 4.2 and 4.4 of the attached General Requirements.

Office Hours: 7:45 a.m. to 4:30 p.m.

K. Rennick 02/06/2023

**GENERAL REQUIREMENTS FOR  
PERMANENT ABANDONMENT OF WELLS ON FEDERAL AND INDIAN LEASES  
FARMINGTON FIELD OFFICE**

- 1.0 The approved plugging plans may contain variances from the following minimum general requirements.
- 1.1 Modification of the approved plugging procedure is allowed only with the prior approval of the Authorized Officer, Farmington Field Office.
  - 1.2 Requirements may be added to address specific well conditions.
- 2.0 Materials used must be accurately measured. (densometer/scales)
- 3.0 A tank or lined pit must be used for containment of any fluids from the wellbore during plugging operations and all pits are to be fenced with woven wire. These pits will be fenced on three sides and once the rig leaves location, the fourth side will be fenced.
- 3.1 Pits are not to be used for disposal of any hydrocarbons. If hydrocarbons are present in the pit, the fluids must be removed prior to filling in.
- 4.0 All cement plugs are to be placed through a work string. Cement may be bull-headed down the casing with prior approval. Cement caps on top of bridge plugs or cement retainers may be placed by dump bailer.
- 4.1 The cement shall be as specified in the approved plugging plan.
  - 4.2 All cement plugs placed inside casing shall have sufficient volume to fill a minimum of 100' of the casing, or annular void(s) between casings, plus an excess volume sufficient to provide for 50 linear feet of fill above the plug.
  - 4.3 Surface plugs may be no less than 50' in length.
  - 4.4 All cement plugs placed to fill annular void(s) between casing and the formation shall be of sufficient volume to fill a minimum of 100' of the annular space plus 100% excess, calculated using the bit size, or 100' of annular capacity, determined from a caliper log, plus an excess volume sufficient to provide for 50 linear feet of fill above the plug.
  - 4.5 All cement plugs placed to fill an open hole shall be of sufficient volume to fill a minimum of 100' of hole, as calculated from a caliper log, plus an excess volume sufficient to provide for 50 linear feet of fill above the plug. In the absence of a caliper log, an excess of 100% shall be required.
  - 4.6 **A cement bond log or other accepted cement evaluation tool is required to be run if one had not been previously ran or cement did not circulate to surface during the original casing cementing job or subsequent cementing jobs.**

5.0 All cement plugs spotted across, or above, any exposed zone(s), when; the wellbore is not full of fluid or the fluid level will not remain static, and in the case of lost circulation or partial returns during cement placement, shall be tested by tagging with the work string.

- 5.1 The top of any cement plug verified by tagging must be at or above the depth specified in the approved plan, without regard to any excess.
- 5.2 Testing will not be required for any cement plug that is mechanically contained by use of a bridge plug and/or cement retainer, if casing integrity has been established.
- 5.3 Any cement plug which is the only isolating medium, for a fresh water interval or a zone containing a prospectively valuable deposit of minerals, shall be tested by tagging.
- 5.4 If perforations are required below the surface casing shoe, a 30 minute minimum wait time will be required to determine if gas and/or water flows are present. If flow is present, the well will be shut-in for a minimum of one hour and the pressure recorded. Short or long term venting may be necessary to evacuate trapped gas. If only a water flow occurs with no associated gas, shut well in and record the pressures. Contact the Engineer as it may be necessary to change the cement weight and additives.

6.0 Before setting any cement plugs the hole needs to be rolled. All wells are to be controlled by means of a fluid that is to be of a weight and consistency necessary to stabilize the wellbore. This fluid shall be left in place as filler between all plugs.

- 6.1 Drilling mud may be used as the wellbore fluid in open hole plugging operations.
- 6.2 The wellbore fluid used in cased holes shall be of sufficient weight to balance known pore pressures in all exposed formations.

7.0 A blowout preventer and related equipment (BOPE) shall be installed and tested prior to working in a wellbore with any exposed zone(s); (1) that are over pressured, (2) where the pressures are unknown, or (3) known to contain H<sub>2</sub>S.

8.0 Within 30 days after plugging work is completed, file a Sundry Notice, Subsequent Report of Abandonment (Form 3160-5), five copies, with the Field Manager, Bureau of Land Management, 6251 College Blvd., Suite A, Farmington, NM 87402. The report should show the manner in which the plugging work was carried out, the extent, by depth(s), of cement plugs placed, and the size and location, by depth(s), of casing left in the well. Show date well was plugged.

9.0 All permanently abandoned wells are to be marked with a permanent monument as specified in 43 CFR 3162.6(d). Unless otherwise approved.

10.0 If this well is located in a Specially Designated Area (SDA), compliance with the appropriate seasonal closure requirements will be necessary.

All of the above are minimum requirements. Failure to comply with the above conditions of approval may result in an assessment for noncompliance and/or a Shut-in Order being issued pursuant to 43 CFR 3163.1. You are further advised that any instructions, orders or decisions issued by the Bureau of Land Management are subject to administrative review pursuant to 43 CFR 3165.3 and appeal pursuant to 43 CFR 3165.4 and 43 CFR 4.700.

**BLM FLUID MINERALS  
P&A Geologic Report**

**Date Completed: 2/3/2023**

Well No. MF #002 (API# 30-045-24995)	Location	790	FSL	&	790	FEL
Lease No. NMNM16760	Sec. 13	T24N			R10W	
Operator Dugan Production Corporation	County	San Juan		State	New Mexico	
Total Depth 6456'	PBTD 6395'	Formation Dakota				
Elevation (GL)		Elevation (KB) 6954'				

Geologic Formations	Est. Top	Est. Bottom	Log Top	Log Bottom	Remarks
San Jose					
Nacimiento			Surface	740	Surface/possible freshwater sands
Ojo Alamo Ss			740	963	Aquifer (possible freshwater)
Kirtland Shale			963	1187	Possible gas
Fruitland			1187	1676	Coal/Gas/Water
Pictured Cliffs Ss			1676	1786	Probable Gas
Lewis Shale			1786	2065	
Chacra			2065	3150	Possible Gas
Cliff House Ss			3150	3270	Water/possible gas
Menefee			3270	4136	Coal/Ss/Water/possible gas
Point Lookout Ss			4136	4345	
Mancos Shale			4345	5025	Probable O&G
Gallup			5025	6080	O&G
Greenhorn			6080	6145	
Graneros Shale			6145	6175	Probable O&G
Dakota Ss			6175	PBTD	O&G/water
Morrison					

Remarks:  
P & A

- Sundry ID: 2713750
- BLM pick for the Chacra formation top varies from Operator. No plug change required.
- Adjust Plug #4 (Mesaverde) to cover the interval from 3100' – 3200'.
- Dakota perms 6352' – 6370'.

Reference Well:  
1) **Formation Tops**  
Same

Prepared by: Chris Wenman

**District I**  
 1625 N. French Dr., Hobbs, NM 88240  
 Phone:(575) 393-6161 Fax:(575) 393-0720  
**District II**  
 811 S. First St., Artesia, NM 88210  
 Phone:(575) 748-1283 Fax:(575) 748-9720  
**District III**  
 1000 Rio Brazos Rd., Aztec, NM 87410  
 Phone:(505) 334-6178 Fax:(505) 334-6170  
**District IV**  
 1220 S. St Francis Dr., Santa Fe, NM 87505  
 Phone:(505) 476-3470 Fax:(505) 476-3462

**State of New Mexico**  
**Energy, Minerals and Natural Resources**  
**Oil Conservation Division**  
**1220 S. St Francis Dr.**  
**Santa Fe, NM 87505**

CONDITIONS

Action 183594

**CONDITIONS**

Operator: DUGAN PRODUCTION CORP PO Box 420 Farmington, NM 87499	OGRID: 6515
	Action Number: 183594
	Action Type: [C-103] NOI Plug & Abandon (C-103F)

**CONDITIONS**

Created By	Condition	Condition Date
kpickford	Notify NMOCD 24 Hours Prior to beginning operations	2/7/2023
kpickford	Adhere to BLM approved COAs and plugs. See BLM COAs and GEO report.	2/7/2023