

Submit 1 Copy To Appropriate District
Office
District I - (575) 393-6161
1625 N. French Dr., Hobbs, NM 88240
District II - (575) 748-1283
811 S. First St., Artesia, NM 88210
District III - (505) 334-6178
1000 Rio Brazos Rd., Aztec, NM 87410
District IV - (505) 476-3460
1220 S. St. Francis Dr., Santa Fe, NM
87505

State of New Mexico
Energy, Minerals and Natural Resources

Form C-103
Revised July 18, 2013

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

WELL API NO.
30-025-00382

5. Indicate Type of Lease
STATE ☒ FEE ☐

6. State Oil & Gas Lease No.

7. Lease Name or Unit Agreement Name
Mobil State 7 Com

8. Well Number #1

9. OGRID Number
370080

10. Pool name or Wildcat
Mesa Queen Assoc

SUNDRY NOTICES AND REPORTS ON WELLS

(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well: Oil Well ☐ Gas Well ☐ Other ☐

2. Name of Operator
Remuda Operating Company

3. Address of Operator
P.O. Box 60335, Midland, TX 79711

4. Well Location

Unit Letter E : 1980 feet from the N line and 660 feet from the W line
Section 7 Township 16S Range 32E NMPM County Lea

11. Elevation (Show whether DR, RKB, RT, GR, etc.)
4376' GR

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☒
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐
PULL OR ALTER CASING ☐ MULTIPLE COMPL ☐
DOWNHOLE COMMINGLE ☐
CLOSED-LOOP SYSTEM ☐
OTHER: ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐
COMMENCE DRILLING OPNS. ☐ P AND A ☐
CASING/CEMENT JOB ☐
OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.


1. Tag 4 1/2" CIBP @ 3400'. Dump bail 35' cmt on top or spot 25 sx cmt.
2. Set 4 1/2" CIBP @ 3260'. Circ hole w/ MLF. Pressure test csg. Spot 25 sx cmt @ 3260-2960'. (Queen)
3. Perf & Sqz 30 sx cmt @ 1380-1180'. WOC & Tag (T/Salt)
4. Perf & Sqz 80 sx cmt @ 565' to surface.
5. Cut off well head, verify cmt to surface, weld on Dry Hole Marker.

Spud Date:

Rig Release Date:

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE

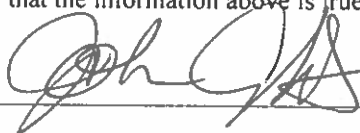

TITLE Production Manager DATE 07/09/2021

Type or print name John Aylesworth E-mail address: john@remudaoperating.com PHONE: 432-634-5073
For State Use Only

APPROVED BY:

TITLE

DATE

Conditions of Approval (if any):