Submit 3 Copies To Appropriate District Office	State of New Mexico	Form C-103
District I	Energy, Minerals and Natural Resources	June 19, 2008 WELL API NO.
1625 N. French Dr., Hobbs, NM 88240 District II		30-015-23816
1301 W. Grand Ave., Artesia, NM 88210	OIL CONSERVATION DIVISION	5. Indicate Type of Lease
<u>District III</u> 1000 Rio Brazos Rd , Aztec, NM 87410	1220 South St. Francis Dr.	STATE S FEE
District IV	Santa Fe, NM 87505	6. State Oil & Gas Lease No.
1220 S. St. Francis Dr., Santa Fe, NM 87505		
	CES AND REPORTS ON WELLS	7. Lease Name or Unit Agreement Name
	SALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A	SWEARINGEN /
PROPOSALS.)	CATION FOR PERMIT" (FORM C-101) FOR SUCH	
1. Type of Well: Oil Well	Gas Well Other SWD	8. Well Number 1
2. Name of Operator		9. OGRID Number
RKI EXPLORATION & PRODUCTION, LLC  3. Address of Operator		246289  10. Pool name or Wildcat
3. Address of Operator 3817 NW EXPRESSWAY, OKC, OK 73112 SWD-1280		BONE SPRING; SWD
4. Well Location	3WD-1200	
	1650 foot from the COUTH line and	4000 feet from the EA'ST line
Unit Letter :	1650feet from theSOUTH line and	
Section 4	Township 23S Range 28 11. Elevation (Show whether DR, RKB, RT, GR,	
	11. Elevation (Show whether DR, RRD, RT, OR,	etc.)
12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data		
NOTICE OF IN		JBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK	PLUG AND ABANDON  REMEDIAL W	
TEMPORARILY ABANDON		DRILLING OPNS. P AND A
PULL OR ALTER CASING	MULTIPLE COMPL CASING/CEM	ENT JOB L
DOWNHOLE COMMINGLE		
OTHER: CONFIGURE	E FOR SWD-1280 🔯 OTHER:	
13. Describe proposed or comp	leted operations. (Clearly state all pertinent details	, and give pertinent dates, including estimated date
	ork). SEE RULE 1103. For Multiple Completions:	Attach wellbore diagram of proposed completion
or recompletion.		·
NOTE: THIS SI	JNDRY SUPERCEDES THE PREVIOUSLY SUBM	TTTD ONE DATED 0/00/00/4
NOTE. THIS SE	SINDICT SUPERCEDES THE PREVIOUSET SUBIN	
	1 Par Pluna	
1. Run bond log on 9 5/8" casing	and evaluate. 35/ Per Pluggi	ing Guidelines RECEIVED
1. Run bond log on 9 5/8" casing	and evaluate. 35/ Per Pluggi	ing Guidelines RECEIVED
<ol> <li>Run bond log on 9 5/8" casing 2.</li> <li>RIH and set 9 5/8" CIBP at appr</li> <li>RIH and set 9 5/8" composite b</li> <li>Run 7" 29# N-80 casing to 7050</li> </ol>	and evaluate. 35/ Per Pluggi	sed SEP 06 2011
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage	and evaluate.  'oximately 9340'. Dump 5-to 10' of cement on topology in the state of the state o	ssed SEP 06 2011
<ol> <li>Run bond log on 9 5/8" casing 2.</li> <li>RIH and set 9 5/8" CIBP at appr</li> <li>RIH and set 9 5/8" composite b</li> <li>Run 7" 29# N-80 casing to 7050</li> </ol>	and evaluate. 35/ Per Pluggi	ssed SEP 06 2011
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250'	and evaluate.  'oximately 9340'. Dump 5-to 10' of cement on topology in the state of the state o	ssed SEP 06 2011
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on topological plug at approximately 7400'  The Pluggian of the Plugg	ssed SEP 06 2011 NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on topology in the plug at approximately 7400'  The plug at approximately 7400'  The plug at 2400'  The plug	ssed SEP 06 2011 NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on topological plug at approximately 7400'  The Pluggian of the Plugg	ssed SEP 06 2011 NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol	and evaluate.  roximately 9340'. Dump 5 to 10' of cement on topolic plug at approximately 7400'  i'. Place DV tool at 2400'  es.  MIT Require  to tubing, set packer at 7000', place on injection  as may vary): 450 sx Extended with 5% D44, 28 plus by 625 sx Conventional with .3% D201 mills  SEE ATTACHED	ssed SEP 06 2011 NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume	and evaluate.  roximately 9340'. Dump 5 to 10' of cement on topolic ridge plug at approximately 7400'  1'. Place DV tool at 2400'  1'. Place D	ssed SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at 14.8 ppg (1.33 cf/sk).
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol	and evaluate.  roximately 9340'. Dump 5 to 10' of cement on top ridge plug at approximately 7400'  b'. Place DV tool at 2400'  es.  # MIT Require tubing, set packer at 7000', place on injection as may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF	ssed SEP 06 2011 NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol	and evaluate.  roximately 9340'. Dump 5-to-10' of cement on to ridge plug at approximately 7400'  b'. Place DV tool at 2400'  s.  # MIT Require  to tubing, set packer at 7000', place on injection  s may vary): 450 sx Extended with 5% D44, 28 placed by 625 sx Conventional with .3% D201 millions of CONDITIONS OF  APPROVAL	ssed SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at 14.8 ppg (1.33 cf/sk).
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol	and evaluate.  roximately 9340'. Dump 5-to-10' of cement on to ridge plug at approximately 7400'  b'. Place DV tool at 2400'  s.  # MIT Require  to tubing, set packer at 7000', place on injection  s may vary): 450 sx Extended with 5% D44, 28 placed by 625 sx Conventional with .3% D201 millions of CONDITIONS OF  APPROVAL	Seed SEP 06 2011  NMOCD ARTESIA  Pos D132, 6% D20, .2% D46, 2 pps D42 mixed at ted at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:	and evaluate.  roximately 9340'. Dump 5-to-10' of cement on to ridge plug at approximately 7400'  D'. Place DV tool at 2400'  S.  MIT Require tubing, set packer at 7000', place on injection is may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL	RECEIVED  SEP 06 2011  NMOCD ARTESIA  Pos D132, 6% D20, .2% D46, 2 pps D42 mixed at ted at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol	and evaluate.  roximately 9340'. Dump 5-to-10' of cement on to ridge plug at approximately 7400'  b'. Place DV tool at 2400'  s.  # MIT Require  to tubing, set packer at 7000', place on injection  s may vary): 450 sx Extended with 5% D44, 28 placed by 625 sx Conventional with .3% D201 millions of CONDITIONS OF  APPROVAL	RECEIVED  SEP 06 2011  NMOCD ARTESIA  Pos D132, 6% D20, .2% D46, 2 pps D42 mixed at ted at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:	and evaluate.  roximately 9340'. Dump 5 to 10' of cement on top ridge plug at approximately 7400'  1'. Place DV tool at 2400'  1s.  MIT Require tubing, set packer at 7000', place on injection as may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL  TITLE Agent for RK	SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at red at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.  DATE 9/01/2011
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:  I hereby certify that the informa	and evaluate.  roximately 9340'. Dump 5 to 10' of cement on top ridge plug at approximately 7400'  1'. Place DV tool at 2400'  1s.  MIT Require tubing, set packer at 7000', place on injection as may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL  TITLE Agent for RK	RECEIVED  SEP 06 2011  NMOCD ARTESIA  Pos D132, 6% D20, .2% D46, 2 pps D42 mixed at ted at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:  I hereby certify that the informa	and evaluate.  roximately 9340'. Dump 5 to 10' of cement on top ridge plug at approximately 7400' by Place DV tool at 2400' by MIT Require tubing, set packer at 7000', place on injection as may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL  TITLE Agent for RK  E-mail address:ben@soscon	SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at red at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.  DATE 9/01/2011  sulting.us PHONE: _(903) 488-9850_
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:  I hereby certify that the informa	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on toy ridge plug at approximately 7400'  Toy: Place DV tool at 2400'  Toy:  The tubing, set packer at 7000', place on injection is may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL  TITLE Agent for RK  E-mail address: ben@soscon	SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at red at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.  DATE 9/01/2011  sulting.us PHONE: (903) 488-9850  DATE 9-7-1
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:  I hereby certify that the informa	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on toy ridge plug at approximately 7400'  Toy: Place DV tool at 2400'  Toy:  The tubing, set packer at 7000', place on injection is may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL  TITLE Agent for RK  E-mail address: ben@soscon	SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at red at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.  DATE 9/01/2011  sulting.us PHONE: (903) 488-9850  DATE 9-7-1
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:  I hereby certify that the informa	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on toy ridge plug at approximately 7400'  Toy: Place DV tool at 2400'  Toy:  The tubing, set packer at 7000', place on injection is may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL  TITLE Agent for RK  E-mail address: ben@soscon	SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at red at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.  DATE9/01/2011  sulting.us PHONE:(903) 488-9850  SISOO DATE
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:  I hereby certify that the informa	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on toy ridge plug at approximately 7400'  Toy: Place DV tool at 2400'  Toy:  The tubing, set packer at 7000', place on injection is may vary): 450 sx Extended with 5% D44, 28 plowed by 625 sx Conventional with .3% D201 min SEE ATTACHED  CONDITIONS OF  APPROVAL  TITLE Agent for RK  E-mail address: ben@soscon	SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at red at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.  DATE9/01/2011  sulting.us PHONE:(903) 488-9850  SISOO DATE
1. Run bond log on 9 5/8" casing 2. RIH and set 9 5/8" CIBP at appr 3. RIH and set 9 5/8" composite b 4. Run 7" 29# N-80 casing to 7050 5. Cement to surface in two stage 6. Drill out composite plug 7. Perforate 7070 - 9250' 8. Run 7" packer on 3 1/2" chrome Cement (Estimate - actual volume 12.6 ppg (2.06 cf/sk) fol Spud Date:  I hereby certify that the informa	and evaluate.  Toximately 9340'. Dump 5-to-10' of cement on toy ridge plug at approximately 7400'  The Place DV tool at 2400'  The End of the top of cement on toy of the top of cement on toy of the top of the	SEP 06 2011  NMOCD ARTESIA  PS D132, 6% D20, .2% D46, 2 pps D42 mixed at red at 14.8 ppg (1.33 cf/sk).  Notify OCD 24 hrs. prior to any work done  ledge and belief.  DATE 9/01/2011  sulting.us PHONE: (903) 488-9850  DATE 9-7-1


## NEW MEXICO OIL CONSERVATION DIVISION DISTRICT 2 OFFICE 811 SOUTH FIRST STREET ARTESIA, NM 88210 (575)748-1283

## CONDITIONS OF APPROVAL

RKI Exploration & Production, LLC Swearingen #1 30-015-23816

- 1. Trucking companies being used to haul oilfield waste to disposal facilities commercial or private- shall have an approved NMOCD C-133 Permit. A copy of this permit shall be available in each truck used to transport waste products. It is the responsibility of the operator as well as the contractor to verify that this permit is in place. Drivers shall make permit available upon request of an OCD inspector. It is the responsibility of the operator to see to it that waste from their wells is being disposed of in a proper manner.
- 2. Closed Loop system to be used during this recompletion operation. File a form C-144 with NMOCD.
- 3. Provide this office with 24 hr. notice that work will begin on this well.
- 4. 35' of cement to be placed on top of CIBP @ 9340'. (per plugging guidelines)
- 5. Call OCD at least 48 hrs ahead to schedule a MIT. Test must be charted & witnessed by NMOCD representative before injection operations can commence.
- 6. Include updated well bore diagram with subsequent report of conversion.

DG 9/7/2011

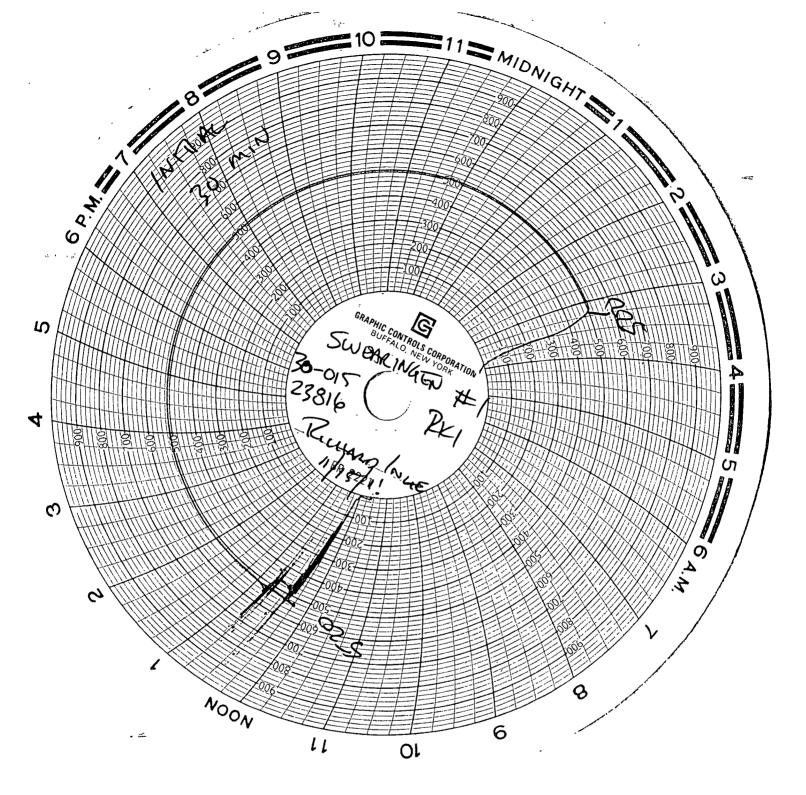

## Bratcher, Mike, EMNRD

From: Phillips, Dorothy, EMNRD

Sent: Thursday, December 08, 2011 8:14 AM

To: Bratcher, Mike, EMNRD

Subject: FW: RKI Exploration & Production, LLC - OGRID 246289

Is this well a re-entry – 30-015-23816? It shows it needs additional bonding. They are submitting a bond for the Geronimo well but they said they had worked this out with Randy and they said it is a re-entry. I told them if it is, then no bonding is required as it falls under their blanket. A Mr. Cody Reid with RKI had e-mailed me last week. Here is comment:

FYI – I'm working on a LC for the Geronimo 34 State Com 1Y (30-015-31293) which should be sent to you in the next week. I believe the Swearingen #1(30-015-23816) issue has been worked out with Randy Dade in Artesia or is at least close to being worked out; please let me know if you haven't heard from him to release this one from our non-compliance list, too.

From: Phillips, Dorothy, EMNRD

Sent: Thursday, December 08, 2011 8:02 AM

To: Dade, Randy, EMNRD

Subject: RKI Exploration & Production, LLC - OGRID 246289

This well is showing up on financial assurance report but the gentleman just called and said it is a re-entry. If this is correct, then no bonding is required as it falls under their blanket. They will need to get a bond for the Geronimo well that is showing up on their financial assurance report and I made them aware of that. They are sending it to me overnight so that you will approve whatever you are holding. Is the Swearingen #1 a re-entry?

SWEARINGEN #001 P J-4-23S-28E J 30-015-23816 S 04/1999 05/01/2001 12750 17750 Y 0