Form 3160-5 (August 2007)

# UNITED STATES DEPARTMENT OF THE INTERIOR

FORM APPROVED
OMB NO. 1004-0135
Expires: July 31, 2010

	OMD I			
	Expires:	July	31,	2
Lease Seri	al No.			

BI	_		July 31, 2010					
SUNDRY	٥.	5. Lease Serial No. NMNM78213						
Do not use the abandoned we	6.	6. If Indian, Allottee or Tribe Name						
SUBMIT IN TRI	PLICATE - Other instruction	ons on reverse side.	7.	If Unit or CA/Agree	ement, Name and/or No.			
Type of Well     Oil Well	ner		8.	Well Name and No. WALT CANYON	AMA FEDERAL 9			
2. Name of Operator	Contact: TI	NA HUERTA	9.	API Well No.	<del></del>			
YATES PETROLEUM CORPO				30-015-32468				
3a. Address 105 SOUTH FOURTH STREE ARTESIA, NM 88210	b. Phone No. (include area code Ph: 575-748-4168 x: 575-748-4585	e) 10	10. Field and Pool, or Exploratory INDIAN BASIN; UP ASSOC					
4. Location of Well (Footage, Sec., T	., R., M., or Survey Description)		11	. County or Parish,	and State			
Sec 3 T22S R24E NWSW 137	70FSL 915FW <b>L</b>			EDDY COUNTY	Y, NM			
12. CHECK APPI	ROPRIATE BOX(ES) TO I	NDICATE NATURE OF	NOTICE, REPO	ORT, OR OTHE	R DATA			
TYPE OF SUBMISSION		ТҮРЕ С	OF ACTION					
- Nedica of Internal	☐ Acidize	☐ Deepen	☐ Production	(Start/Resume)	☐ Water Shut-Off			
■ Notice of Intent	☐ Alter Casing	☐ Fracture Treat	■ Reclamatio	n	■ Well Integrity			
☐ Subsequent Report	□ Casing Repair	■ New Construction	□ Recomplete	:	☐ Other			
☐ Final Abandonment Notice	□ Change Plans	Plug and Abandon •	□ Temporaril	y Abandon	¥			
	□ Convert to Injection	Plug Back	■ Water Disp	osal				
Attach the Bond under which the work will be performed or provide the Bond No. on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompletion in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection.)  Yates Petroleum Corporation plans to Plug and Abandon this well as follows:  1. MI RU WSU. Rig up all H2S safety equipment. No casing recovery will be attempted. POOH with tubing and tools.  2. MI RU WL. RIH with WL set CIBP at 7,994 ft. TIH with tubing and load the hole with plugging mud. Spot a 25 sx class H cement plug on top of the CIBP from 7,859 ft to 7,994 ft. POOH.  3. MI RU WL to perforate 4 squeeze holes at 7,498 ft, then TIH with packer at tubing and establish an injection rate, with the packer set at safe distance up the casing and open all valves on the bradenhead and establish circulation. Squeeze with 65 sacks of class H cement with 2 percent CaCl2. Displace the cement down to 7,323 ft. This will leave a plug inside and outside of the casing across the Wolfcamp top. POOH. WOC and tag the plug.  4. MI RU WL to perforate 4 squeeze holes at 5,388 ft, then TIH with packer at tubing and establish CONDITIONS OF APPROVAL an injection rate, with the packer set at safe distance up the casing and open all valves on the								
14. I hereby certify that the foregoing is  Name(Printed/Typed) TINA HUE	Electronic Submission #216 For YATES PETROLE Committed to AFMSS for pro	EUM CORPORÂTION, sent cessing by JOHNNY DICKE	to the Carlsbad <sup>*</sup>	2013 ()	AUG <b>21</b> 2013			
Name (Frimewrypea) TINA HUE	NIA	Title REGI	REPORTING SUI	PERVISOR	NMOCD ARTES			
Signature (Electronic S	ubmission)	Date 08/06/2	2013		MMOCO ATTE			
	THIS SPACE FOR	FEDERAL OR STATE	OFFICE USE					
Approved By James	R. Omo	Title 54	SPS		Date 8-201			
Conditions of approval, if any, are attached certify that the applicant holds legal or equ which would entitle the applicant to condu	warrant or oject lease Office	10						
Title 18 U.S.C. Section 1001 and Title 43 States any false, fictitious or fraudulent s	U.S.C. Section 1212, make it a crin tatements or representations as to a	ne for any person knowingly and any matter within its jurisdiction	d willfully to make t	o any department or	agency of the United			

\*\* OPERATOR-SUBMITTED \*\* OPERATOR-SUBMITTED \*\* OPERATOR-SUBMITTED \*\*

#### Additional data for EC transaction #216180 that would not fit on the form

#### 32. Additional remarks, continued

bradenhead and establish circulation. Squeeze with 50 sacks of class C cement with 2 percent CaCl2. Displace the cement down to 5,238 ft. This will leave a plug inside and outside of the casing. POOH. WOC and tag the plug.

5. MIRU WL to perforate 4 squeeze holes at 3,277 ft, then TIH with packer at tubing and establish 5. MI HU WL to perforate 4 squeeze holes at 3,2/7 ft, then TIH with packer at tubing and establish an injection rate, with the packer set at safe distance up the casing and open all valves on the bradenhead and establish circulation. Squeeze with 50 sacks of class C cement with 2 percent CaCl2. Displace the cement down to 3,127 ft. This will leave a plug inside and outside of the casing across the Bones Springs top. POOH. WOC and tag the plug.


6. MI RU WL to perforate 4 squeeze holes at 1,740 ft, then TIH with packer at tubing and establish an injection rate, with the packer set at safe distance up the casing and open all valves on the bradenhead and establish circulation. Squeeze with 50 sacks of class C cement with 2 percent CaCl2. Displace the cement down to 1,590 ft. This will leave a plug inside and outside of the casing across the surface casing shoe. POOH. WOC and tag the plug.


7. MI RI WI to perforate 4 squeeze holes at 150 ft, then tie on to the casing and establish an X

7. MI RU WL to perforate 4 squeeze holes at 150 ft, then tie on to the casing and establish an injection rate. Squeeze with 50 sacks of class C cement with 2 percent CaCl2. Do not displac3e the cement. WOC and tag reset if necessary. This will establish a surface plug from 0 ft - 150

8. Remove all surface equipment and weld dry hole marker per regulations.

Add Alug (Glorieta) Perf 2890 SQZ Cm To Z770, WOC Tag

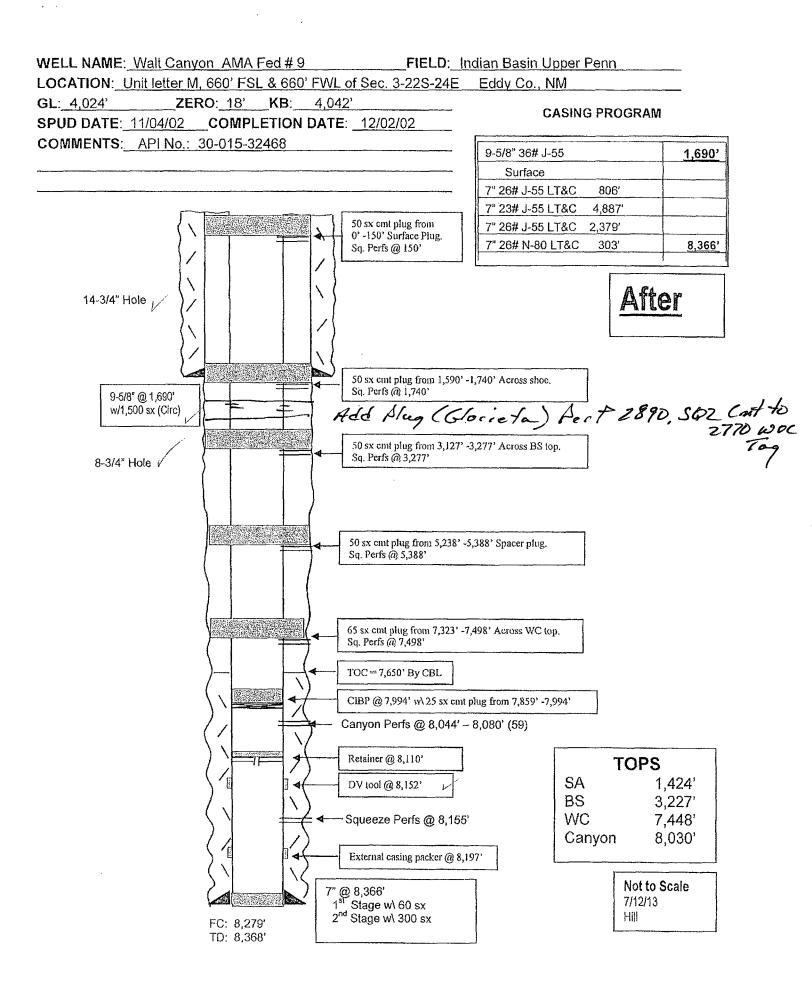

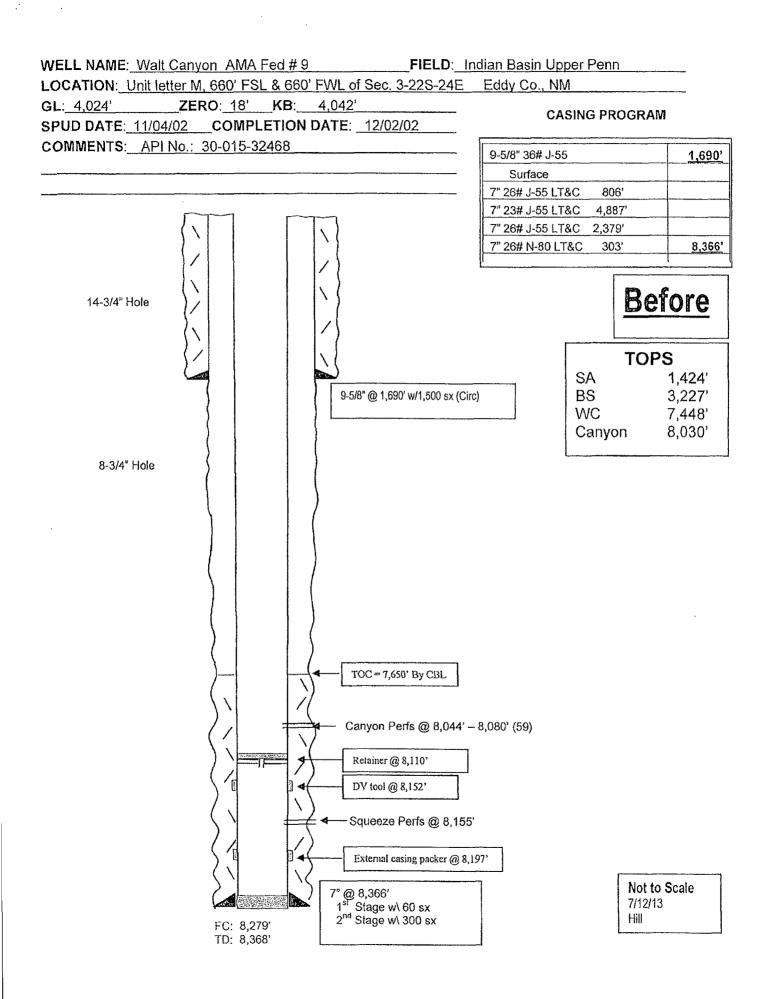

### BUREAU OF LAND MANAGEMENT Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 575-234-5972

## Permanent Abandonment of Federal Wells Conditions of Approval

Failure to comply with the following Conditions of Approval may result in a Notice of Incidents of Noncompliance (INC) in accordance with 43 CFR 3163.1.

1. Plugging operations shall commence within <u>ninety (90)</u> days from the approval date of this Notice of Intent to Abandon.

If you are unable to plug the well by the 90<sup>th</sup> day provide this office, prior to the 90<sup>th</sup> day, with the reason for not meeting the deadline and a date when we can expect the well to be plugged. Failure to do so will result in enforcement action.

The rig used for the plugging procedure cannot be released and moved off without the prior approval of the authorized officer. Failure to do so may result in enforcement action.

- 2. <u>Notification</u>: Contact the appropriate BLM office at least 24 hours prior to the commencing of any plugging operations. For wells in Chaves and Roosevelt County, call 575-627-0272; Eddy County, call 575-361-2822; Lea County, call 575-393-3612.
- 3. <u>Blowout Preventers</u>: A blowout preventer (BOP), as appropriate, shall be installed before commencing any plugging operation. The BOP must be installed and maintained as per API and manufacturer recommendations. The minimum BOP requirement is a 2M system for a well not deeper than 9,090 feet; a 3M system for a well not deeper than 13,636 feet; and a 5M system for a well not deeper than 22,727 feet.
- 4. <u>Mud Requirement:</u> Mud shall be placed between all plugs. Minimum consistency of plugging mud shall be obtained by mixing at the rate of 25 sacks (50 pounds each) of gel per 100 barrels of **brine** water. Minimum nine (9) pounds per gallon.
- 5. <u>Cement Requirement</u>: Sufficient cement shall be used to bring any required plug to the specified depth and length. Any given cement volumes on the proposed plugging procedure are merely estimates and are not final. Unless specific approval is received, no plug except the surface plug shall be less than 25 sacks of cement. Any plug that requires a tag will have a minimum WOC time of 4 hours.

In lieu of a cement plug across perforations in a cased hole (not for any other plugs), a bridge plug set within 50 feet to 100 feet above the perforations shall be capped with 25 sacks of cement. If a bailer is used to cap this plug, 35 feet of cement shall be sufficient. Before pumping or bailing cement on top of CIBP, tag will be required to verify depth. Based on depth, a tag of the cement may be deemed necessary.

Unless otherwise specified in the approved procedure, the cement plug shall consist of either Neat Class "C", for up to 7,500 feet of depth or Neat Class "H", for deeper than 7,500 feet plugs.

6. <u>Dry Hole Marker</u>: All casing shall be cut-off at the base of the cellar or 3 feet below final restored ground level (whichever is deeper). The BLM is to be notified a minimum of 4 hours prior to the wellhead being cut off to verify that cement is to surface in the casing and all annuluses. Wellhead cut off shall commence within ten (10) calendar days of the well being plugged. If the cut off cannot be done by the 10<sup>th</sup> day, the BLM is to be contacted with justification to receive an extension for completing the cut off.

The well bore shall then be capped with a 4-inch pipe, 10-feet in length, 4 feet above ground and embedded in cement, unless otherwise noted in COA (requirements will be attached). The following information shall be permanently inscribed on the dry hole marker: well name and number, name of the operator, lease serial number, surveyed location (quarter-quarter section, section, township and range or other authorized survey designation acceptable to the authorized officer such as metes and bounds).

- 7. <u>Subsequent Plugging Reporting:</u> Within 30 days after plugging work is completed, file one original and three copies of the Subsequent Report of Abandonment, Form 3160-5 to BLM. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. **Show date well was plugged.**
- 8. <u>Trash</u>: All trash, junk and other waste material shall be contained in trash cages or bins to prevent scattering and will be removed and deposited in an approved sanitary landfill. Burial on site is not permitted.

Following the submission and approval of the Subsequent Report of Abandonment, surface restoration will be required. See attached reclamation procedure.

J. Amos 3/6/11



### United States Department of the Interior

#### BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 E. Greene St. Carlsbad, New Mexico 88220-6292 www.blm.gov/nm



In Reply Refer To: 1310

#### Reclamation Objectives and Procedures

Reclamation Objective: Oil and gas development is one of many uses of the public lands and resources. While development may have a short- or long-term effect on the land, successful reclamation can ensure the effect is not permanent. During the life of the development, all disturbed areas not needed for active support of production operations should undergo "interim" reclamation in order to minimize the environmental impacts of development on other resources and uses. At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its predisturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, redistribute the native soils, provide erosion control as needed, rip and seed as specified in the original APD COA. This will apply to well pads, facilities, and access roads. Barricade access road at the starting point. If reserve pits have not reclaimed due to salts or other contaminants, submit a plan for approval, as to how you propose to provide adequate restoration of the pit area.

- 1. The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of Operations must include adequate measures for stabilization and reclamation of disturbed lands. Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD process as per Onshore Oil and Gas Order No. 1.
- 2. For wells and/or access roads not having an approved plan, or an inadequate plan for surface reclamation (either interim or final reclamation), the operator must submit a proposal describing the procedures for reclamation. For interim reclamation, the appropriate time for submittal would be when filing the Well Completion or Recompletion Report and Log (Form 3160-4). For final reclamation, the appropriate time for submittal would be when filing the Notice of Intent, or the Subsequent Report of Abandonment, Sundry Notices and Reports on Wells (Form 3160-5). Interim reclamation is to be completed within 6 months of well completion, and final reclamation is to be completed within 6 months of well abandonment.
- 3. The operator must file a Subsequent Report Plug and Abandonment (Form 3160-5) following the plugging of a well.
- 4. Previous instruction had you waiting for a BLM specialist to inspect the location and provide you with reclamation requirements. If you have an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It would be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation

equipment to ensure that it meets BLM objectives. Upon conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a specialist to inspect the location to verify work was completed as per approved plans.

- 5. The approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been reestablished. If the BLM objectives have not been met the operator will be notified and corrective actions may be required.
- 6. It is the responsibility of the operator to monitor these locations and/or access roads until such time as the operator feels that the BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the BLM objectives have been met submit a Final Abandonment Notice (FAN), Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
- 7. At this time the BLM specialist will inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability of the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

#### **Inspection & Enforcement**

Jim Amos Supervisory Environmental Protection Specialist 575-234-5909, 575-361-2648 (Cell)

Mike Burton Environmental Protection Specialist 575-234-2226

Jeffery Robertson Natural Resource Specialist 575-234-2230

Jennifer Van Curen Environmental Protection Specialist 575-234-5905

Doug Hoag Civil Engineering Technician 575-234-5979

Linda Denniston Environmental Protection Specialist 575-234-5974

Solomon Hughes Natural Resource Specialist 575-234-5951

#### Permitting

Cody Layton Natural Resource Specialist 575-234-5959

Trishia Bad Bear Natural Resource Specialist 575-393-3612

Todd Suter Surface Protection Specialist 575-234-5987

Tanner Nygren Natural Resource Specialist 575-234-5975

Amanda Lynch Natural Resource Specialist 575-234-5922

Legion Brumley Environmental Protection Specialist 575-234-5957

#### Realty, Compliance

Randy Pair Environmental Protection Specialist 575-234-6240