

N.M. Oil Cons. DIV-Dist. 2
1301 W. Grand Avenue
UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT
Artesia, NM 88210

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

RECEIVED

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2. Name of Operator

Mack Energy Corporation

3. Address and Telephone No.

P.O. Box 960, Artesia, NM 88211-0960

(505)748-1288

4. Location of Well (Footage, Sec., T. R., M. or Survey Description)

330 FSL & 1775 FEL, Sec. 25 T17S R27E

5. Lease Designation and Serial No.

NMLC-058181

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

Beech Federal #3

9. API Well No.

30-015-32036

10. Field and Pool, or Exploratory Area

Abo

11. County or Parish, State

Eddy, NM

12. CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION

- ☒ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☐ Other _____
- ☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13 Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work)*

1. Notify BLM 24 hours prior to starting plugging operations.
2. Set 45 sx cement plug from 4000-3900' and circ hole with mud.
3. Set 45 sx cement plug from 2000-1900' and circ hole with mud
4. Set 100' cement plug 50' above and below 8 5/8" csg from 450' - 350'. TAG
5. Set cement plug from 60' to surface.
6. Install dry hole marker.

Accepted for record - NMOC

APPROVAL SUBJECT TO
GENERAL REQUIREMENTS AND
SPECIAL STIPULATIONS ATTACHED

14. I hereby certify that the foregoing is true and correct

Signed Jerry W. Sherrell

Title Production Clerk

Date 10/21/2005

(This space for Federal or State office use)


Approved by (ORIG. SGD.) ALEXIS C. SWOBODA

Title PETROLEUM ENGINEER

Date OCT 26 2005

Conditions of approval, if any:

MACK ENERGY CORPORATION
BEECH FEDERAL #3
Sec 25 T17S R27E 330 FSL 1775 FEL

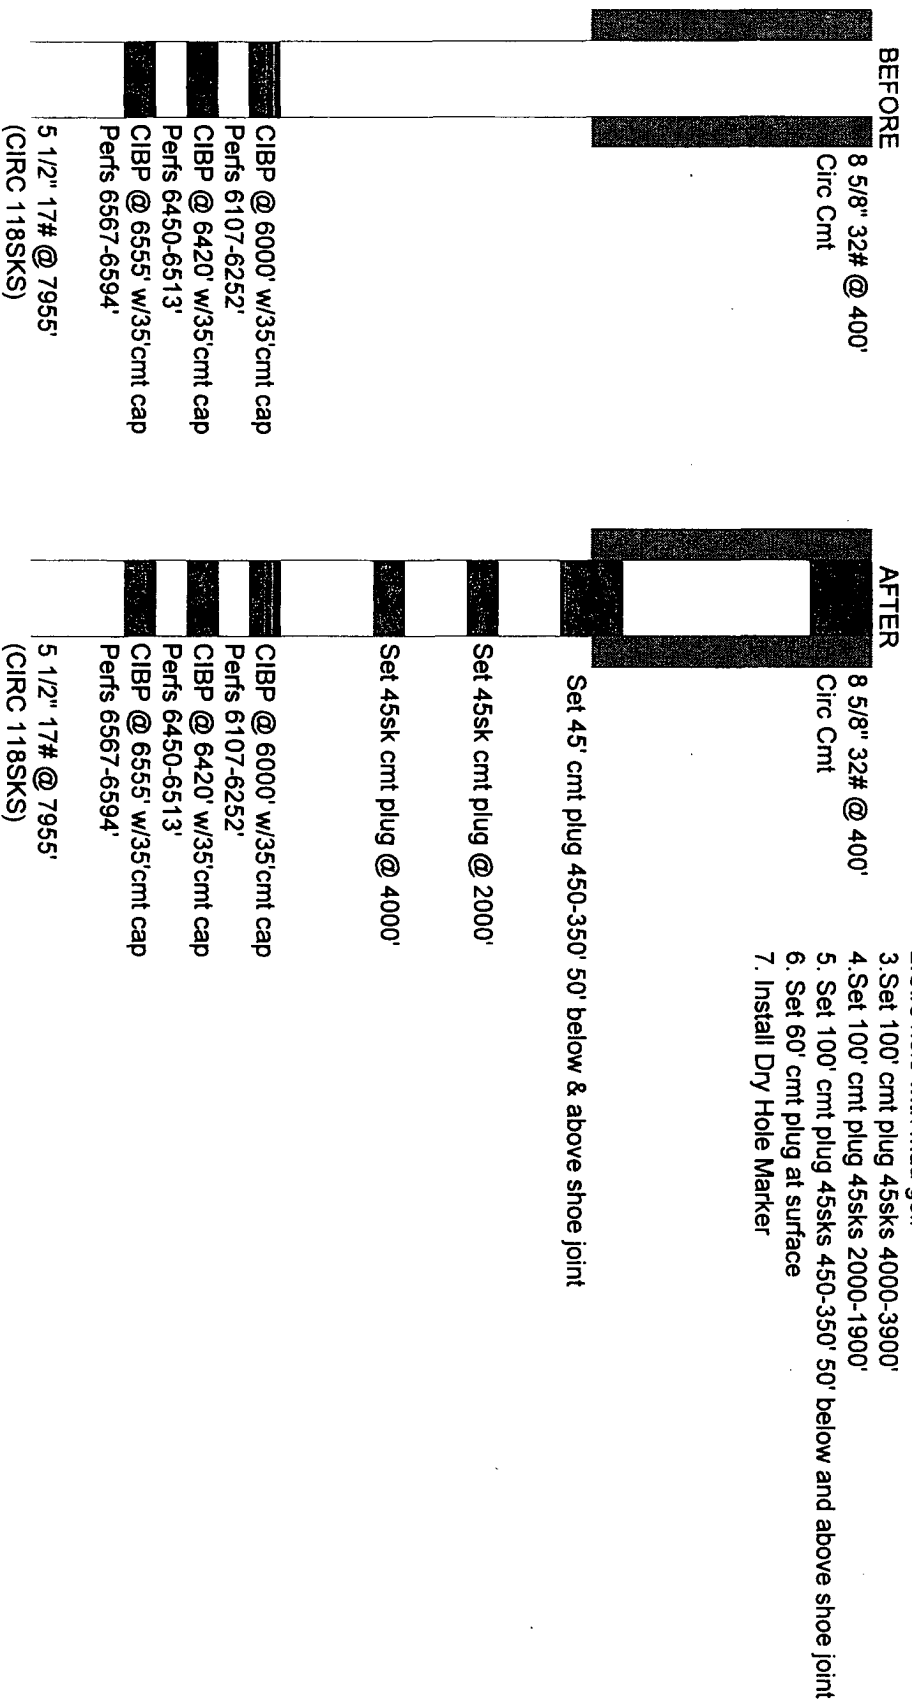

1. Notify BLM 24 hrs. prior to any work done.
2. Circ hole with mud gel.
3. Set 100' cmt plug 45sk 4000-3900'
4. Set 100' cmt plug 45sk 2000-1900'
5. Set 100' cmt plug 45sk 450-350' 50' below and above shoe joint
6. Set 60' cmt plug at surface
7. Install Dry Hole Marker