
		- All	3.00		
Form 3160-5	ITE.	D STATES	OCD Artesia	1	APPROVED
(August 2007)	DEPARTMENT	OF THE INTERIOR		i -	o. 1004-0137 July 31, 2010
i i	BUREAU OF LA	5. Lease Serial No.			
SUND	NMN	M 114969			
Do not us abandone	6. If Indian, Allottee or	Tribe Name			
SUBMIT II	7. If Unit or CA/Agreen	nent, Name and/or No.			
I. Type of Well					
Oil Well Gas Well	8. Well Name and No.				
2. Name of Operator	Owl, 20:	504 JV-P #5			
COG Operating			•	9. API Well No.	
3a. Address		3b. Phone No. (include area code)		30-0	15-35435
600 W. Illinois, Midland	X 79701	432-865-4340		10. Field and Pool, or Exploratory Area	
4. Location of Well (Foolage, Sec., T.,	R., M., or Survey Descrip	tion)		Wildcat (Delaware)	
2310' FSL, 2130' FWL		•	,	11. County or Parish, St	
UL -J-, Sec. 18, T26S-R27	Eddy, N	lew Mexico			
, 12. CHECK A	PPROPRIATE BO	X(ES) TO INDICATE N	ATURE OF NOTICE, RE	PORT, OR OTHER	DATA
TYPE OF SUBMISSION		··· ; ·· ; ··	TYPE OF ACTION		
	Acidize	Deepen Deepen	Production (Start/Resum	e) Water Shut-Off	
Notice of Intent	Alter Casing	Fracture Treat	Reclamantion	Well Integrity	
	i =				
Subsequent Report	Casing Repair	New Construction	Recomplete	Other	
Final Abandonment Notice	Change Plans	Plug and Abandon	Temporarily Abandon		
_	Convert to Injection	on Plug Back	Water Disposal		
13. Describe Proposed or Complete. If the proposal is to deepen dir Attach the Bond under which t following completion of the inv testing has been completed. Fir determined that the site is ready fo 1. Tag plug @ 3300'. Circ 2. Set CIBP @ 2900' & sp 3. Spot 30 sx cement @ 20 4. Perf & sqz 45 sx cemen 5. Perf & sqz 45 sx cemen 6. Cut off wellhead and w	ectionally or recomplete the work will be perfort olived operations. If the hal Abandonment Notice or final inspection.) ulate hole with m of 25 sx cement of 100-1820'. (Tag), it @ 450-270'. W(t @ 100-surface.	horizontally, give subsurface need or provide the Bond No. operation results in a multiple s shall be filed only after all ud laden fluid. In top 2900-2780'. Add place OC & Tag.	ocations and measured and true on file with BLM/BIA. Requi- completion or recompletion in	e vertical depths of all pred subsequent reports sha a new interval, a Form nantion, have been comp	ertinent markers and zones. all be filed within 30 days 3160-4 shall be filed once
		•		NM	OIL CONSERVATION
P.D 9/30	15			44141	ARTESIA DISTRICT
accepted for it		SEP 3 0 2015			
NMOCD))			
•		•		i.	RECEIVED

RECLAMATION PROCEDURE ATTACHED

SEEE ATTACHED FOR CONDITIONS OF APPROVAL

Title Agent	
Date 09/08/15	
EDERAL OR STATE OFFICE USE	
Title SAET Date	9-17-15
rant or certify that h would entitle the Office CFO	
	Date 09/08/15 FEDERAL OR STATE OFFICE USE Title SAGT Date

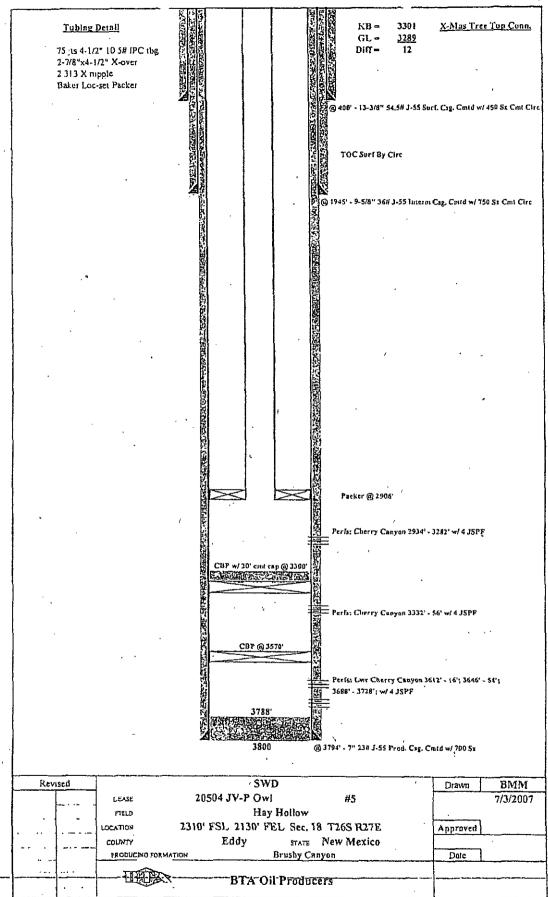

Lut 32.0414886

Long -104. 2282181

Too .), P. G. (), P. H. ;	35		1
540	\$1 50 C 160- Sulace \$	3008CX網網	·	1
P-1:592	Tubine Detail	60 0000 KB - 3301	X-Mas Tree Top Conn.	
	75 113 4-1/2" 10 5# IPC tbg	Dir = 12		
	2-7/8"x4-1/2" X-over			∮ ·
A	Bakur Loc-set Packer	10000CV		
L(2 =>=	Baker Loc-set Packer SHE 450-370 TA, F	1000000 8 8 8 8 8 9 9 9 9 9 9 9 9 9 9 9 9	Surl. Cag. Cmtd w/ 450 Sz Cmt Circ	- 6 (0)
	1 Action			Rest 640 The 17 12 63 Carrier 2002
5 0. 1	1000	TOC Suri By Circ		76 11 1212
20 21.	30 a e 2000 - 1820'	00000		115017 1243
	TAS			/ 200 3
		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	ern Cag, Cortd w/ 750 Sz Cont Cler	lars of
				ĺ
	-			
			•	
•				
·			•	
		į.		
Set C	BP@ 2900' W/ 25 54	0 80 90 0 00 Parker @ 2906'		
cemién	an tob 9600-3180.	V / V V		
		Perls: Cherry Canyon 293-	' - 3282' w/ 4 JSPF	
		CBP w/ 20' cmt cap @ 3300'		
	ŕ			
		Perfa: Cherry Canyon 3337	' - 56' w/ 4 JSPP	`
•				
	,	CBP @ 3570		
		Perfs: Lwr Cherry Conyon	3612' - 16'+ 1646' - 54'+	
		3688' - 3728'; w/ 4 JSPF		
		3788' ""		
•	·	3800 @ 3794' - 7" 23# J-55 Prod. Csg.	; ,	
	Revised	SWD	C /CL,	
		9504 JV-P Owl #5	Drawn BMM 7/3/2007	
	FIELD LOCATION Z310	Hay Hollow FSL 2130' FEL Sec. 18 T26S R27E		
	COUNTY	Eddy STATE New Mexico	Approved	
	PRODUCINO FORMATION	Brushy Canyon	Date	
		BTA Oil Producers		
(1	1

Long -104. 2282181

BUREAU OF LAND MANAGEMENT Carlsbad Field Office 620 East Greene Street Carlsbad, New Mexico 88220 575-234-5972

Permanent Abandonment of Federal Wells Conditions of Approval

Failure to comply with the following Conditions of Approval may result in a Notice of Incidents of Noncompliance (INC) in accordance with 43 CFR 3163.1.

1. Plugging operations shall commence within <u>ninety (90)</u> days from the approval date of this Notice of Intent to Abandon.

If you are unable to plug the well by the 90th day provide this office, prior to the 90th day, with the reason for not meeting the deadline and a date when we can expect the well to be plugged. Failure to do so will result in enforcement action.

The rig used for the plugging procedure cannot be released and moved off without the prior approval of the authorized officer. Failure to do so may result in enforcement action.

- 2. <u>Notification:</u> Contact the appropriate BLM office at least 24 hours prior to the commencing of any plugging operations. For wells in Chaves and Roosevelt County, call 575-627-0272; Eddy County, call 575-361-2822; Lea County, call 575-393-3612.
- 3. <u>Blowout Preventers</u>: A blowout preventer (BOP), as appropriate, shall be installed before commencing any plugging operation. The BOP must be installed and maintained as per API and manufacturer recommendations. The minimum BOP requirement is a 2M system for a well not deeper than 9,090 feet; a 3M system for a well not deeper than 13,636 feet; and a 5M system for a well not deeper than 22,727 feet.
- 4. <u>Mud Requirement:</u> Mud shall be placed between all plugs. Minimum consistency of plugging mud shall be obtained by mixing at the rate of 25 sacks (50 pounds each) of gel per 100 barrels of **brine** water. Minimum nine (9) pounds per gallon.
- 5. <u>Cement Requirement</u>: Sufficient cement shall be used to bring any required plug to the specified depth and length. Any given cement volumes on the proposed plugging procedure are merely estimates and are not final. Unless specific approval is received, no plug except the surface plug shall be less than 25 sacks of cement. Any plug that requires a tag will have a minimum WOC time of 4 hours.

In lieu of a cement plug across perforations in a cased hole (not for any other plugs), a bridge plug set within 50 feet to 100 feet above the perforations shall be capped with 25 sacks of cement. If a bailer is used to cap this plug, 35 feet of cement shall be sufficient. Before pumping or bailing cement on top of CIBP, tag will be required to verify depth. Based on depth, a tag of the cement may be deemed necessary.

Unless otherwise specified in the approved procedure, the cement plug shall consist of either Neat Class "C", for up to 7,500 feet of depth or Neat Class "H", for deeper than 7,500 feet plugs.

6. <u>Dry Hole Marker</u>: All casing shall be cut-off at the base of the cellar or 3 feet below final restored ground level (whichever is deeper). The BLM is to be notified a minimum of 4 hours prior to the wellhead being cut off to verify that cement is to surface in the casing and all annuluses. Wellhead cut off shall commence within ten (10) calendar days of the well being plugged. If the cut off cannot be done by the 10th day, the BLM is to be contacted with justification to receive an extension for completing the cut off.

The well bore shall then be capped with a 4-inch pipe, 10-feet in length, 4 feet above ground and embedded in cement, unless otherwise noted in COA (requirements will be attached). The following information shall be permanently inscribed on the dry hole marker: well name and number, name of the operator, lease serial number, surveyed location (quarter-quarter section, section, township and range or other authorized survey designation acceptable to the authorized officer such as metes and bounds).

- 7. <u>Subsequent Plugging Reporting</u>: Within 30 days after plugging work is completed, file one original and three copies of the Subsequent Report of Abandonment, Form 3160-5 to BLM. The report should give in detail the manner in which the plugging work was carried out, the extent (by depths) of cement plugs placed, and the size and location (by depths) of casing left in the well. **Show date well was plugged.**
- 8. <u>Trash:</u> All trash, junk and other waste material shall be contained in trash cages or bins to prevent scattering and will be removed and deposited in an approved sanitary landfill. Burial on site is not permitted.

Following the submission and approval of the Subsequent Report of Abandonment, surface restoration will be required. See attached reclamation procedure.

J. Amos 3/6/11



BUREAU OF LAND MANAGEMENT

Carlsbad Field Office 620 E. Greene St. Carlsbad, New Mexico 88220-6292 www.blm.gov/nm



In Reply Refer To: 1310

Reclamation Objectives and Procedures

Reclamation Objective: Oil and gas development is one of many uses of the public lands and resources. While development may have a short- or long-term effect on the land, successful reclamation can ensure the effect is not permanent. During the life of the development, all disturbed areas not needed for active support of production operations should undergo "interim" reclamation in order to minimize the environmental impacts of development on other resources and uses. At final abandonment, well locations, production facilities, and access roads must undergo "final" reclamation so that the character and productivity of the land and water are restored.

The long-term objective of final reclamation is to set the course for eventual ecosystem restoration, including the restoration of the natural vegetation community, hydrology, and wildlife habitats. In most cases this means returning the land to a condition approximating or equal to that which existed prior to the disturbance. The final goal of reclamation is to restore the character of the land and water to its predisturbance condition. The operator is generally not responsible for achieving full ecological restoration of the site. Instead, the operator must achieve the short-term stability, visual, hydrological, and productivity objectives of the surface management agency and take steps necessary to ensure that long-term objectives will be reached through natural processes.

To achieve these objectives, remove any and all contaminants, scrap/trash, equipment, pipelines and powerlines. Strip and remove caliche, contour the location to blend with the surrounding landscape, redistribute the native soils, provide erosion control as needed, rip and seed as specified in the original APD COA. This will apply to well pads, facilities, and access roads. Barricade access road at the starting point. If reserve pits have not reclaimed due to salts or other contaminants, submit a plan for approval, as to how you propose to provide adequate restoration of the pit area.

- The Application for Permit to Drill or Reenter (APD, Form 3160-3), Surface Use Plan of
 Operations must include adequate measures for stabilization and reclamation of disturbed lands.
 Oil and Gas operators must plan for reclamation, both interim and final, up front in the APD
 process as per Onshore Oil and Gas Order No. 1.
- 2. For wells and/or access roads not having an approved plan, or an inadequate plan for surface reclamation (either interim or final reclamation), the operator must submit a proposal describing the procedures for reclamation. For interim reclamation, the appropriate time for submittal would be when filing the Well Completion or Recompletion Report and Log (Form 3160-4). For final reclamation, the appropriate time for submittal would be when filing the Notice of Intent, or the Subsequent Report of Abandonment, Sundry Notices and Reports on Wells (Form 3160-5). Interim reclamation is to be completed within 6 months of well completion, and final reclamation is to be completed within 6 months of well abandonment.
- 3. The operator must file a Subsequent Report Plug and Abandonment (Form 3160-5) following the plugging of a well.
- 4. Previous instruction had you waiting for a BLM specialist to inspect the location and provide you with reclamation requirements. If you have an approved Surface Use Plan of Operation and/or an approved Sundry Notice, you are free to proceed with reclamation as per approved APD. If you have issues or concerns, contact a BLM specialist to assist you. It would be in your interest to have a BLM specialist look at the location and access road prior to the removal of reclamation

equipment to ensure that it meets BLM objectives. Upon conclusion submit a Form 3160-5, Subsequent Report of Reclamation. This will prompt a specialist to inspect the location to verify work was completed as per approved plans.

- 5. The approved Subsequent Report of Reclamation will be your notice that the native soils, contour and seedbed have been reestablished. If the BLM objectives have not been met the operator will be notified and corrective actions may be required.
- 6. It is the responsibility of the operator to monitor these locations and/or access roads until such time as the operator feels that the BLM objective has been met. If after two growing seasons the location and/or access roads are not showing the potential for successful revegetation, additional actions may be needed. When you feel the BLM objectives have been met submit a Final Abandonment Notice (FAN), Form 3160-5, stating that all reclamation requirements have been achieved and the location and/or access road is ready for a final abandonment inspection.
- 7. At this time the BLM specialist will inspect the location and/or access road. If the native soils and contour have been restored, and the revegetation is successful, the FAN will be approved, releasing the operator of any further liability of the location and/or access road. If the location and/or access road have not achieved the objective, you will be notified as to additional work needed or additional time being needed to achieve the objective.

If there are any questions, please feel free to contact any of the following specialists:

Jim Amos Supervisory Petroleum Engineering Tech 575-234-5909, 575-361-2648 (Cell)

Arthur Arias Environmental Protection Specialist 575-234-6230

Linda Denniston Environmental Protection Specialist 575-234-5974

Henryetta Price Environmental Protection Specialist 575-234-5951

Dara Glass
Environmental Protection Specialist
575-234-5924

Shelly Tucker Environmental Protection Specialist 575-234-5979