


Operator Ray Westall
 Well Log #1
 Unit P Section 16 Township 19 Range 31
 API # 30-015-27090

TOPS	
Rustler	~ 550
Salado	~ 700
B Salt	~ 2200
Yates	~ 2350
Rivers	~ 2650
Bowers	~ 3200
Queen	~ 3500
Delaware	4479 *
Base spring	6789 *

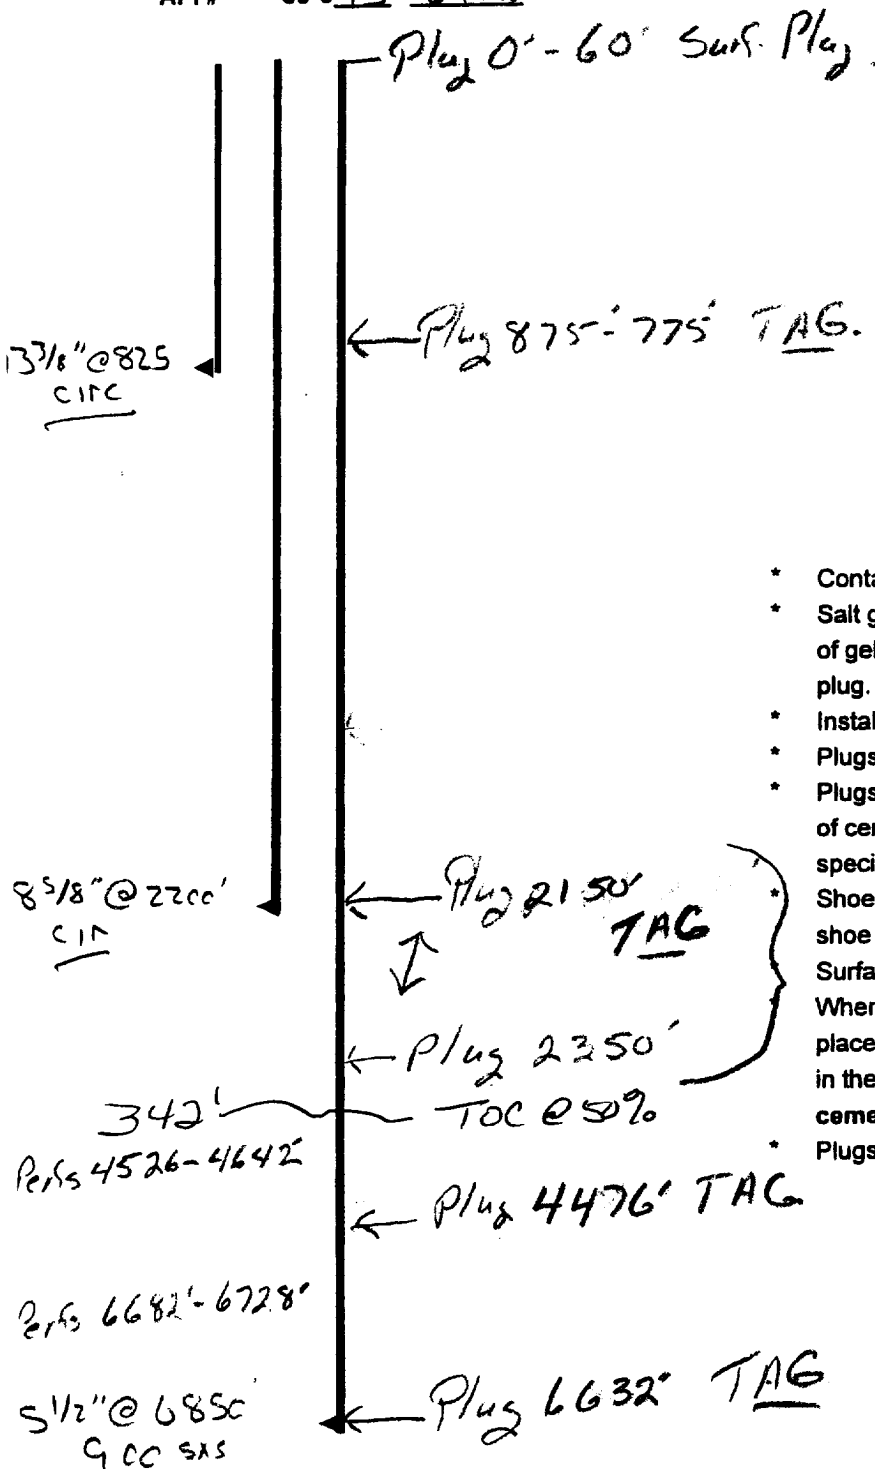

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

[Handwritten signature]