

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

OCD-ARTESIA

FORM APPROVED
Budget Bureau No. 1004-0135
Expires: March 31, 1993

SUNDRY NOTICES AND REPORTS ON WELLS

Do not use this form for proposals to drill or to deepen or reentry to a different reservoir.
Use "APPLICATION FOR PERMIT—" for such proposals

SUBMIT IN TRIPLICATE

1. Type of Well

☒ Oil Well ☐ Gas Well ☐ Other _____

2. Name of Operator

COG Operating LLC

3. Address and Telephone No.

550 W. Texas, Suite 1300 Midland, TX 79701

(432) 685-4372

4. Location of Well (Footage, Sec., T. R., M. or Survey Description)

660 FNL & 1980 FWL, Sec. 28 T18S R29E

5. Lease Designation and Serial No.

NMLC-067348

6. If Indian, Allottee or Tribe Name

7. If Unit or CA, Agreement Designation

8. Well Name and No.

YD Federal #1

9. API Well No.

30-015-03469

10. Field and Pool, or Exploratory Area

Turkey Track SR Q G SA

11. County or Parish, State

Eddy, NM

12. CHECK APPROPRIATE BOX(S) TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

TYPE OF SUBMISSION

- ☒ Notice of Intent
☐ Subsequent Report
☐ Final Abandonment Notice

TYPE OF ACTION

- ☒ Abandonment
☐ Recompletion
☐ Plugging Back
☐ Casing Repair
☐ Altering Casing
☐ Other _____
- ☐ Change of Plans
☐ New Construction
☐ Non-Routine Fracturing
☐ Water Shut-Off
☐ Conversion to Injection
☐ Dispose Water

(Note: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

13 Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work)*

1. Notify BLM 24 hours prior to starting plugging operations.
2. Set CIBP @ 1885' w/35' cement cap and circ hole with mud.
3. Perf and squeeze 100' cement plug from 980-880', 50 above and below bottom of salt.
4. Set 100' cement plug from 453-353', 50 above and below 8 5/8" casing shoe WOC and tag.
5. Set 10 sx surface plug.
6. Install dry hole marker.

Accepted for record
NMOCD

SEE ATTACHED FOR
CONDITIONS OF APPROVAL

14. I hereby certify that the foregoing is true and correct

*Signed

Perry W. Shenell

Title

Production Clerk

Date

8/14/2006

(This space for Federal or State office use)

DAVID E. CLARK

Approved by

Conditions of approval, if any:


Title

PETROLEUM ENGINEER

Date

AUG 23 2006

MACK ENERGY CORPORATION
YD Federal #1
Sec 28 T18S R29E

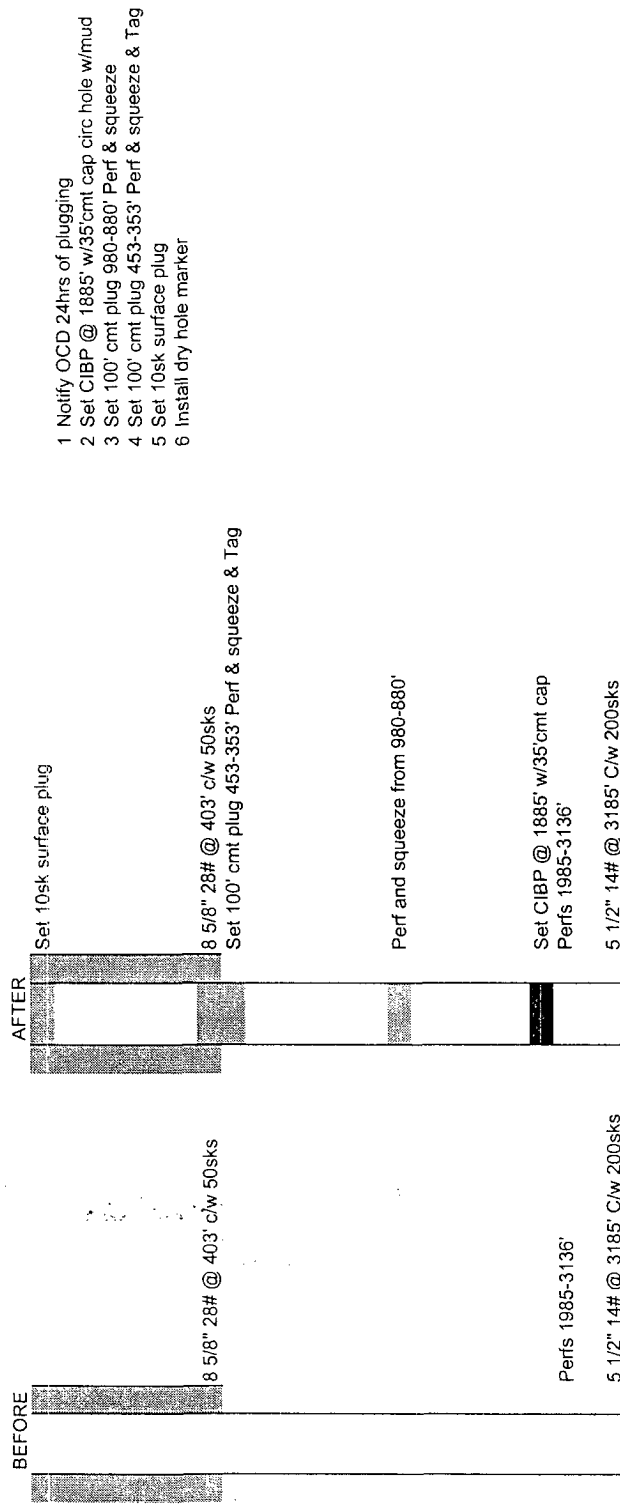

- 1 Notify OCD 24hrs of plugging
- 2 Set CIBP @ 1885' w/35'cmt cap circ hole w/mud
- 3 Set 100' cmt plug 980-880' Perf & squeeze
- 4 Set 100' cmt plug 453-353' Perf & squeeze & Tag
- 5 Set 10sk surface plug
- 6 Install dry hole marker

Accepted for record
NMOCD