Submit 3 Copies To Appropriate District Office	State of New Mexico			Form C-103
District I	Energy, Minerals a	nd Natural Resources	WELL API NO	May 27, 2004
1625 N. French Dr., Hobbs, NM,88240 District II	OH COMUEDIA	ATIONI DIMITOIONI		0-015-32818
1301 W Grand Ave., Artesia NM 88210		ATION DIVISION	7. Indicat	e Type of Lease
District III 1000 Rio Brazos Rd., Aztec, NM:87410;		St. Francis Dr.	STATE	☐ FEE ☒
District IV 1220 S. St. Francis Dr., Santa Les NM 87505	Santa Fe,	NM 87505	7. State C	oil & Gas Lease No.
	CES AND REPORTS ON	WELLS	7. Lease Name	or Unit Agreement Name
(DO NOT USE THIS FORM FOR PROPOSE DIFFERENT RESERVOIR. USE "APPLICE PROPOSALS.)				s Wand Waver Fee
1. Type of Well: Oil Well	Gas Well 🛛 Other	AUG 03 2007	8. Well Number	r 1
2. Name of Operator Mark	oob Energy Corporation	OCD-ARTESIA	9. OGRID Num	
3. Address of Operator	10. Pool name o	or Wildcat		
4. Well Location	27, Artesia, NM 88211-02	21	Black	k River; Morrow
	1650 feet from the	North line and	660 feet f	from the West line
Section 6	Township 24S	Range 28E	NMPM Eddy	County
The state of the s	11. Elevation (Show whe			
Pit or Below-grade Tank Application ☐ o	r Closure	3096' GL		
	aterDistance from near	est fresh water well	Distance from nearest su	rface water
Pit Liner Thickness: mil			Construction Material	
12. Check A	Appropriate Box to Ind	icate Nature of Noti	ce, Report or Othe	r Data
NOTICE OF IN	TENTION TO:	l s	UBSEQUENT RI	EPORT OF:
PERFORM REMEDIAL WORK	PLUG AND ABANDON	☐ REMEDIAL W		ALTERING CASING
TEMPORARILY ABANDON	CHANGE PLANS		DRILLING OPNS.	P AND A
PULL OR ALTER CASING	MULTIPLE COMPL	☐ CASING/CEN	MENT JOB	
OTHER: Recompletion		☑ OTHER:		П
13. Describe proposed or comp		state all pertinent details		
	rk). SEE RULE 1103. Fo	r Multiple Completions	: Attach wellbore diag	gram of proposed completion
or recompletion.				
Marbob Energy Corporation	n proposes to perforate, tes	t & possibly frac the Mo	orrow zone as follows:	
Dump hail 15' 20' amt an	ton of free plug & 12200'	•		
Dump bail 15' – 20' cmt on Morrow 12008' –	12123' (117 shots)			
(See attached procedure & v	wellhore schematics)			
(See allachea procedure ee	veneere senemmies,			
I hereby centify that the information	shove is true and complete	to the best of my knowl	ladge and haliaf If	
grade tank has been/will be constructed or	closed according to NMOCD go	idelines \Box , a general permi	it \square or an (attached) alter	ner certify that any pit or below- native OCD-approved plan
SIGNATURE	MURCO T	ITLEProduction Ana	alyst	DATE7/31/07
Type or print name Diana J. Brigg		production@marbob.	com Telephone N	o. (505) 748-3303
	G. ARRANT			AUG 0 4 200
APPROVED DI:	CT II GEOLOGIST _T	ITLE		DATE
Conditions of Approval (if any):				_

Edsel's Wand Waver 1 E-6-24S-28E Eddy Co., NM

Recompletion Procedure 26 July 07

Basic Data:

13-3/8" @ 508' Circ. Cmt.
9-5/8" @ 2203' Circ. Cmt.
7" @ 10164' Circ. Cmt.
4.5"/11.6ppf/M95-110/LTC Burst=10690 psi, 8552 psi at 80% Nom. ID=4.000" Drift ID=3.875"
2.375"/4.7ppf/L80/EUE Burst=11200 psi, 8960 psi at 80% Nom ID=1.995" Drift ID=1.901"
Collapse=11780 psi, 9424 at 80%
Tensile=104,300 lb with no safety factor

Objective: Complete well in the Morrow Chert.

Procedure:


1. When ready to move to next zone, RU lubricator, run gauge ring to 12200' (composite frac plug at 12200') and dump bail 15-20' cement on top of frac plug at 12200'. RU lubricator and perf Morrow Chert with 3-1/8" or 3-3/8" deep penetrating casing guns loaded 3 spf at 60-120° phasing at the depths shown below (inclusive). Note: Atoka perfs 11463-67' are open and well bore will probably not be full of fluid. If well comes in after perfing, be ready to lubricate a packer in the hole on wireline.

Morrow Chert: 12008-12', 12039-43', 12046-50', 12054-62', 12066-70', 12114-23' (117 shots) OH Log Morrow Chert: 12006-10', 12037-41', 12044-48', 12052-60', 12064-68', 12112-21' (117 shots) GR/CCL

- 2. RIH with packer assembly with pump out plug on bottom, set packer, and break down perfs with 3000 gals Modified N-Ver-Sperse A (7% KCl base fluid). Pump break down at 3-5 bpm while limiting treating pressure to 6500 psi and keeping annulus full of fluid (may be necessary to pump fluid down annulus continuously to keep it full). Drop 5 slugs of 20 ballsealers through job. Swab/flow test until notified to do otherwise.
- 3. If decision made to frac, will set a plug above Morrow Chert (will probably have to run KCl water into well continuously while TOOH with packer and tubing to keep well under control) and squeeze off Atoka perfs so that pressure can be placed on annulus while fracing down tubing. Suggest 50 sx "H" with low fluid loss followed by 50-100 sx "H" with no fluid loss control. Drill out cement and test squeeze to 3000 psi. Resqueeze if necessary. After drilling out cement, but before drilling plug set above Morrow Chert, circulate the well with clean 7% KCl until water is clear (don't want cement solids plugging up Morrow perfs if fluid is dirty).
- 4. If decision made to frac, RIH with packer assembly on 2.875"/7.9/P-110/PH-6 rental frac string to approx. 11900' (use stabbing guides), space out with 10 pts slackoff on packer, tree up with 2-9/16" 5K tree, load annulus, test annulus to 1000 psi, install 15K tree saver, install relief valve on annulus set to vent at 3000 psi, RU high pressure pumps and frac down tubing at 10-15 bpm with 60-65Q CO2 foam carrying approx. 20,000 lbs. 18/40 versaprop (2 ppg max. but have enough fluid to stay at 1.5 ppg). Limit treating pressure to 11500 psi while holding 2000 psi on annulus during job.

- 5. Flow back until gas burns. Dump 15 bbls clean 7% KCl water down tubing, shut in overnight, and run a sinker bar past packer and tag TD. If TD is shallower than 12120', a decision will be made whether to clean out proppant with coiled tubing or to clean out with conventional jointed tubing (will likely use conventional jointed tubing).
- 6. Kill well with clean 7% KCl water, install 5K hydraulic BOP with annular preventer on top, unseat packer and TOOH laying down frac string. Other alternatives are to set blanking plug in packer and leave packer in well while TOOH with tubing or to RU snubbing unit to pull tubing and packer with live well.
- 7. If well needs clean out and decision was made to use jointed tubing, pick up bit and production tubing and clean well out. Otherwise, pick up production packer assembly and 2.375" production tubing, RIH to 11900', space out, place inhibited packer fluid in annulus (120 bbls), set packer, test annulus to 1000 psi and install 2-1/16" tree.
- 8. Swab well in, clean it up and send it to sales.

Kbc/edsel's wand waver 1 mrrw chert del

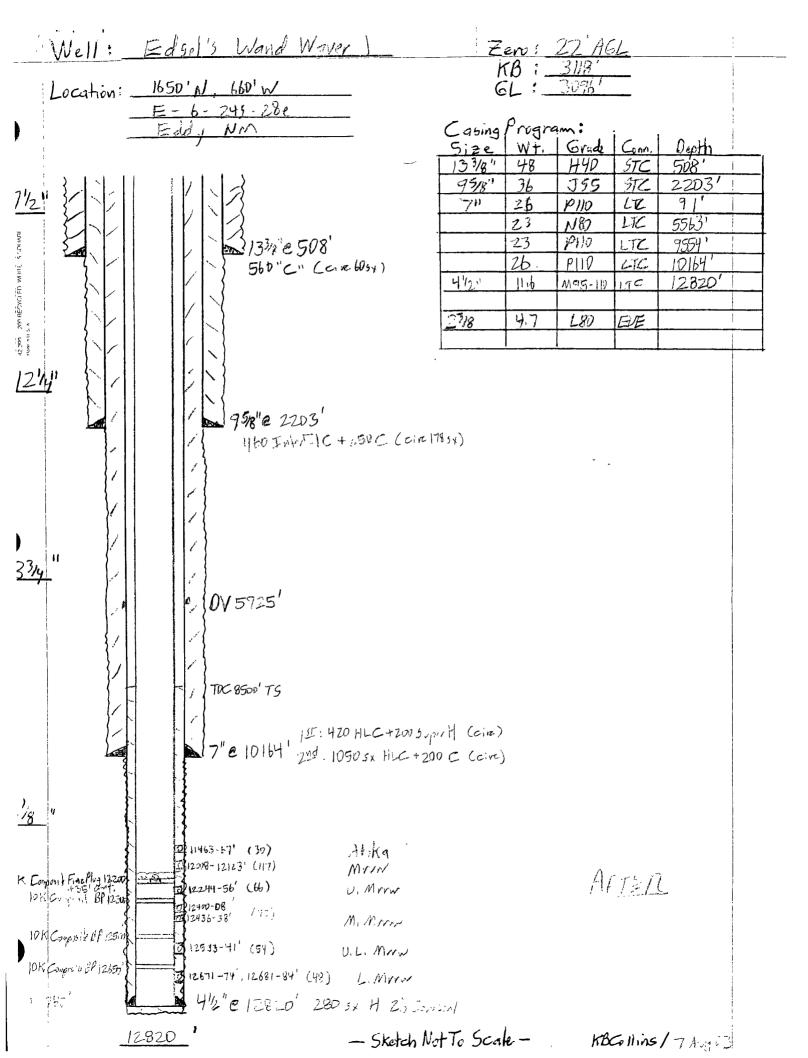

Well: Edsel's L	land Wayer Zero	22'AGL 3118'
Location: 1650'N. 465 E-6-245 Eddy NM	6L:	<u> </u>
71/2	51ze W1 51ze W1 133/8" 48 95/8" 36 71 26 23 560"C" (crebby) 25	- Grade Conn. Depth
A 42-300 Store Sto	23/8 4.7	Mas-110 176 12820' L80 EVE
199	8"e 2203" 160 INATO (CHE 17834)	
33/4" () OV 5°	725 ¹	
	1015 1年: 420 HLC+2005givith (cine) 0164 129d . 1050sx HLC+200 C (cine)	
<u>78</u> v	30) Atika	BEFORE
K Congress & FreePlug 12200 - 12 122441-56' (10 K Co. 7.20 - BP 12300 - 08 12400-08 12436-38	(12) M. Mrrw	
10K Corposit Ef 1255)	(54) U.L. Mrrw 2681-94' (49) L. Mrrw 2820' 2805x H Zio Larvasal	
12820	— Sketch Not To Scale —	KBCollins/7A203