

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF LAND MANAGEMENT

FORM APPROVED
OMB No. 1004-0137
Expires: July 31, 2010

SUNDRY NOTICES AND REPORTS ON WELLS
Do not use this form for proposals to drill or to re-enter an abandoned well. Use Form 3160-3 (APD) for such proposals.

SUBMIT IN TRIPLICATE - Other instructions on page 2

1 Type of Well

☒ Oil Well ☐ Gas Well ☐ Other

2 Name of Operator

Legacy Reserves Operating LP

3a. Address

PO Box 10848, Midland, TX 79702

3b. Phone No. (include area code)

432-689-5200

4. Location of Well (Footage, Sec., T., R., M., or Survey Description)

**D, Sec. 11, T-18-S, R-31-E
510' FSL, 2030' FEL**

5. Lease Serial No.

LC-029388

6 If Indian, Allottee or Tribe Name

7 If Unit or CA/Agreement, Name and/or No

8. Well Name and No

Johnson "B" Federal A/c 1 #8

9. API Well No

30-015-25982

10. Field and Pool, or Exploratory Area


Tamano (Bone Spring)

11 County or Parish, State

Eddy, NM

12. CHECK APPROPRIATE BOX(ES) TO INDICATE NATURE OF NOTICE, REPORT OR OTHER DATA

TYPE OF SUBMISSION	TYPE OF ACTION			
<input type="checkbox"/> Notice of Intent	<input type="checkbox"/> Acidize	<input type="checkbox"/> Deepen	<input type="checkbox"/> Production (Start/Resume)	<input type="checkbox"/> Water Shut-Off
<input checked="" type="checkbox"/> Subsequent Report	<input type="checkbox"/> Alter Casing	<input type="checkbox"/> Fracture Treat	<input type="checkbox"/> Reclamation	<input type="checkbox"/> Well Integrity
<input type="checkbox"/> Final Abandonment Notice	<input type="checkbox"/> Casing Repair	<input type="checkbox"/> New Construction	<input type="checkbox"/> Recomplete	<input type="checkbox"/> Other
	<input type="checkbox"/> Change Plans	<input checked="" type="checkbox"/> Plug and Abandon	<input type="checkbox"/> Temporarily Abandon	
	<input type="checkbox"/> Convert to Injection	<input type="checkbox"/> Plug Back	<input type="checkbox"/> Water Disposal	

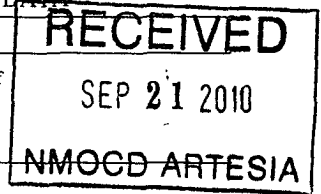

13 Describe Proposed or Completed Operation (clearly state all pertinent details, including estimated starting date of any proposed work and approximate duration thereof. If the proposal is to deepen directionally or recompleate horizontally, give subsurface locations and measured and true vertical depths of all pertinent markers and zones. Attach the Bond under which the work will be performed or provide the Bond No on file with BLM/BIA. Required subsequent reports shall be filed within 30 days following completion of the involved operations. If the operation results in a multiple completion or recompleation in a new interval, a Form 3160-4 shall be filed once testing has been completed. Final Abandonment Notices shall be filed only after all requirements, including reclamation, have been completed, and the operator has determined that the site is ready for final inspection)

08/18/10 MIRU rig and cementing equipment. Dig out cellar, Bleed down well. NU BOP. Wait on work string. Pick up packer and work string. RIH w/ 149 jts. tbg. Stack out on top of fish. SDFN.
08/19/10 Set packer @ +/- 4690'. Pump in rate @ 500 to 800 psi, 1 1/2 bbls/min. Release packer and reset @ 4500'. Sqz 100 sx cement. WOC. Tag plug @ 4790'. Circulate hole w/ 40 bbls of mud laden fluid. Spot 25 sx cement @ 4790'. Pull out of cement. WOC overnight.
08/20/10 Tagged plug @ 4269'. Call BLM. Instructed to drill out plug. Shut down.
08/23/10 RIH w/ bit, bit sub and tbg. Tag cement @ 4259'. Rig up reverse rig. Drill 341' cement down to 4600'. Circulate hole clean. SDFN.
08/24/10 rig down reverse rig. POH w/ tbg and bit. RIH w/ tbg to 4600' Circulate hole w/ mud laden fluid. Spot 65 sx. cement. Pull out of cement. WOC. Tag plug @ 4030'. Pull tbg to 2754'. Spot 25 sx cement. Pull out of cement. WOC overnight.
08/25/10 Tag plug @ 2561'. POH to 2250'. Spot 25 sx cement. WOC. Tag plug @ 2017'. Call BLM. Instructed to Perf holes @ 100'. Perf csg @ 100'. Set packer @ 30'. Circulate cement to surface. Pull packer and top off surface plug. rigged down and clean location.
08/31/10 Move in backhoe and welder. Dig out cellar. Cut off wellhead. Weld on Dry Hole Marker. Cut off dead men and clean location. Move off. *missed surface shoe plug from 850-780' will have to drill out surf plug & set shoe & surf plug*

14 I hereby certify that the foregoing is true and correct.)

Name (Printed/Typed)

Berry Johnson

Title **Production Superintendent**

Signature

Date **09/02/10**

THIS SPACE FOR FEDERAL OR STATE OFFICE USE

Rejected Approved by <i>J. Amos</i>	Title SEAS	Date 9-16-10
Conditions of approval, if any, are attached. Approval of this notice does not warrant or certify that the applicant holds legal or equitable title to those rights in the subject lease which would entitle the applicant to conduct operations thereon.	Office CFD	

Title 18 U S C. Section 1001 and Title 43 U.S.C. Section 1212, make it a crime for any person knowingly and willfully to make to any department or agency of the United States any false, fictitious or fraudulent statements or representations as to any matter within its jurisdiction.

(Instructions on page 2)

Accepted for record
NMOC D

Colt