

Submit 3 Copies To Appropriate District Office
District I
1625 N. French Dr., Hobbs, NM 88240
District II
1301 W. Grand Ave., Artesia, NM 88210
District III
1000 Rio Brazos Rd., Aztec, NM 87410
District IV
1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

Form C-103
May 27, 2004

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

WELL API NO. 30-015-29609
Indicate Type of Lease STATE ☒ FEE ☐
State Oil & Gas Lease No.


SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)		7. Lease Name or Unit Agreement Name Willow State
1. Type of Well: Oil Well ☒ Gas Well ☐ Other ☐		8. Well Number 006
2. Name of Operator COG Operating LLC		9. OGRID Number 229137
3. Address of Operator 550 W. Texas Ave., Suite 1300 Midland, TX 79701		10. Pool name or Wildcat Fren; Glorieta-Yeso 26770
Well Location Unit Letter <u>J</u> : <u>2310</u> feet from the <u>South</u> line and <u>1650</u> feet from the <u>East</u> line Section <u>16</u> Township <u>17S</u> Range <u>31E</u> NMPM County <u>Eddy</u>		
11. Elevation (Show whether DR, RKB, RT, GR, etc.) 3844 GR		
Pit or Below-grade Tank Application ☐ or Closure ☐		
Pit type _____ Depth to Groundwater _____ Distance from nearest fresh water well _____ Distance from nearest surface water _____		
Pit Liner Thickness: _____ mil Below-Grade Tank: Volume _____ bbls; Construction Material _____		

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:		SUBSEQUENT REPORT OF:	
PERFORM REMEDIAL WORK ☐	PLUG AND ABANDON ☐	REMEDIAL WORK ☐	ALTERING CASING ☐
TEMPORARILY ABANDON ☐	CHANGE PLANS ☐	COMMENCE DRILLING OPNS. ☐	P AND A ☐
PULL OR ALTER CASING ☐	MULTIPLE COMPL ☐	CASING/CEMENT JOB ☐	
DOWNHOLE COMMINGLE ☐			
OTHER: _____	Deepen ☒	OTHER: _____	☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

See Attached procedure

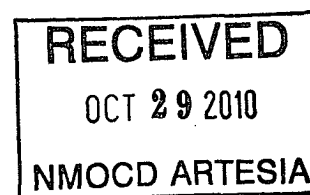

SIGNATURE Natalie Krueger TITLE Regulatory Analyst DATE 10/28/2010

Type or print name Natalie Krueger E-mail address: nkrueger@conchoresources.com PHONE: 432-221-0300
For State Use Only

APPROVED BY: [Signature] TITLE _____ DATE 11/1/2010

Conditions of Approval (if any):

[Signature]



COG Operating, LLC
Willow State No. 6
API# 30-015-29609
J-16-17S-31E
2310 FSL & 1650 FEL
Eddy Co, NM

Deepening Procedure

1. MIRU rig.
2. Sqz upper Yeso w/ +/- 400 sx of Class C neat. Drill out squeeze.
3. PU 4-3/4" bit and drill 4-3/4" hole from 5460' to 6700'.
4. POOH w/ bit and drillstring.
5. RIH w/ logs and log from TD to 4900'.
6. RIH w/ 4", 11.3# casing. See section 11 for general centralizer program.
7. Cement casing from TD to 5257' w/ 120 sxs Class C cmt. Drop plug and open DV tool. Circ cmt off DV tool. Drop plug to close DV tool.
8. PU workstring and RIH and drill out DV tool. POOH and LD workstring.
9. RDMO rig.

Completion Procedure

1. MIRU rig.
2. RIH/ w/ perforating guns and perforate Yeso from 6100 – 6300 w/ 2 spf, 30 holes.
3. Acidize w/ 2500 gals of 15% HCl. Frac zone w/ 179,800 # of sand. Set plug at 6050'.
4. RIH w/ perforating guns and perforate Yeso from 5800' – 6000'.
5. Acidize w/ 2500 gals of 15% HCl. Frac zone w/ 179,800 # of sand. Set plug at 5750'.
6. RIH w/ perforating guns and perforate Yeso from 5500' – 5700'.
7. Acidize w/ 2500 gals of 15% HCl. Frac zone w/ 179,800 # of sand.
8. RIH and drill out plug at 5750' and 6050'.
9. RIH and cut or back off 4" casing at 5257'. POOH w/ 4" casing. Leave 4" liner from 5257' to 6700' (TD).
10. RIH w/ tbg and locate end of tbg at 5200'.
11. RIH w/ rods and pump.
12. RDMO rig.