


Form 9-331
Dec. 1973

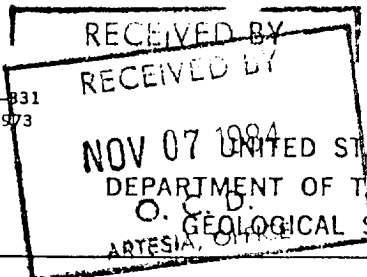

Drawer DD
Artesia, NM 88210

Form Approved.
Budget Bureau No. 42-R1424

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use Form 9-331-C for such proposals.)

1. oil ☒ well gas ☐ well other ☐

2. NAME OF OPERATOR
Sun Exploration & Production Co. ✓

3. ADDRESS OF OPERATOR
P. O. Box 1861 Midland, TX 79702

4. LOCATION OF WELL (REPORT LOCATION CLEARLY. See space 17 below.)
AT SURFACE: 2310' FNL & 2310' FWL
AT TOP PROD. INTERVAL:
AT TOTAL DEPTH:

5. LEASE
NM 022584

6. IF INDIAN, ALLOTTEE OR TRIBE NAME

7. UNIT AGREEMENT NAME

8. FARM OR LEASE NAME
Sun Federal

9. WELL NO.
5

10. FIELD OR WILDCAT NAME
N/A

11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA
Sec. 28, T-78 R-26-E

12. COUNTY OR PARISH
Chaves

13. STATE
NM

14. API NO.

15. ELEVATIONS (SHOW DF, KDB, AND WD)
3711-6A

16. CHECK APPROPRIATE BOX TO INDICATE NATURE OF NOTICE, REPORT, OR OTHER DATA

REQUEST FOR APPROVAL TO:	SUBSEQUENT REPORT OF:
TEST WATER SHUT-OFF <input type="checkbox"/>	<input type="checkbox"/>
FRACTURE TREAT <input type="checkbox"/>	<input type="checkbox"/>
SHOOT OR ACIDIZE <input type="checkbox"/>	<input type="checkbox"/>
REPAIR WELL <input type="checkbox"/>	<input type="checkbox"/>
PULL OR ALTER CASING <input type="checkbox"/>	<input type="checkbox"/>
MULTIPLE COMPLETE <input type="checkbox"/>	<input type="checkbox"/>
CHANGE ZONES <input type="checkbox"/>	<input type="checkbox"/>
ABANDON* <input type="checkbox"/>	<input checked="" type="checkbox"/>
(other) _____	

(NOTE: Report results of multiple completion or zone change on Form 9-330.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.)*

Plugged in August 1981.
MIRU Dig out well head (pump 20 sxs cmt in rat hole, filled w/sand)
Cut off wellhead, pull 2 loose jts 4 1/2 casg. Ran 2 3/8 tbg open ended to 1044.
Spot 25 sxs cmt 1044-720.. Raise tbg to 720. Spot 25 sxs 720-397. Raise tbg to 220, spot 30 sxs cmt 220 to surface. POH w/2 3/8 tbg. Install well head marker.

Form 9-331 H.E. Pineda
Post FD-3
11-9-84
Edy Op.

Post FD-2
11-6-84
PAA

Subsurface Safety Valve: Manu. and Type _____ Set @ _____ Ft.

18. I hereby certify that the foregoing is true and correct
SIGNED Dee Ann Kemp TITLE Associate Account. DATE 9-7-84

(This space for Federal or State office use)

APPROVED BY _____ TITLE _____ DATE _____
CONDITIONS OF APPROVAL, IF ANY: