


Operator N. Dale Nichols
 Well Avulanche Journal State #4
 Unit 16 Section 4 Township 8 Range 27
 API # 30-005-10471

TOPS

<u>Avulcher</u>	<u>246</u>
<u>Salado</u>	<u>364</u>
<u>B Salt</u>	<u>831 ?</u>
<u>Green</u>	<u>872 ?</u>
<u>San Andres</u>	<u>1354</u>

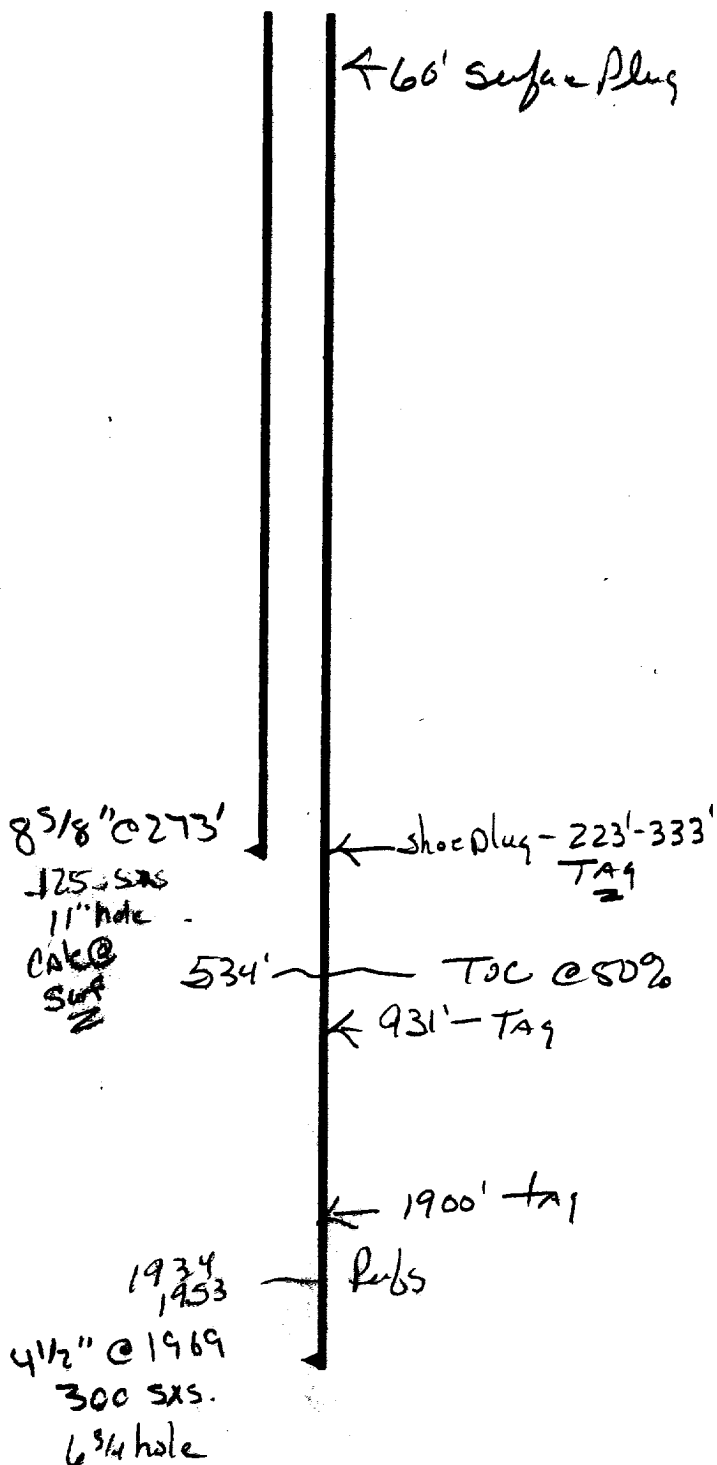

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.