

DEPARTMENT OF THE INTERIOR *Oil Conservation Commission*
BUREAU OF LAND MANAGEMENT *Artesia, NM 88210*

5. LEASE DESIGNATION AND SERIAL NO. *258*
NM-13978
6. IF INDIAN, ALLOTTEE OR TRIBE NAME

SUNDRY NOTICES AND REPORTS ON WELLS

(Do not use this form for proposals to drill or to deepen or plug back to a different reservoir. Use "APPLICATION FOR PERMIT" for such proposals.)

1. OIL WELL <input type="checkbox"/> GAS WELL <input checked="" type="checkbox"/> OTHER <input type="checkbox"/>	RECEIVED	7. UNIT AGREEMENT NAME
2. NAME OF OPERATOR McClellan Oil Corporation ✓	MAY 16 '89	8. FARM OR LEASE NAME Leeman Fed.
3. ADDRESS OF OPERATOR P.O. Box 730, Roswell, NM 88202	O. C. D. ARTESIA OFFICE	9. WELL NO. #5
4. LOCATION OF WELL (Report location clearly and in accordance with any State requirements. See also space 17 below.) At surface 1525' FSL & 1915 FWL		10. FIELD AND POOL, OR WILDCAT 5. Pecos Slope Abo
14. PERMIT NO.	15. ELEVATIONS (Show whether DF, RT, GR, etc.) 3623 G.L.	11. SEC., T., R., M., OR BLK. AND SURVEY OR AREA Sec 1-T9S-R25E
		12. COUNTY OR PARISH Chaves
		13. STATE NM

Check Appropriate Box To Indicate Nature of Notice, Report, or Other Data

NOTICE OF INTENTION TO:

TEST WATER SHUT-OFF	PULL OR ALTER CASING
FRACTURE TREAT	MULTIPLE COMPLETE
SHOOT OR ACIDIZE	ABANDON*
REPAIR WELL	CHANGE PLANS
(Other)	

SUBSEQUENT REPORT OF:

WATER SHUT-OFF	REPAIRING WELL
FRACTURE TREATMENT	ALTERING CASING
SHOOTING OR ACIDIZING	ABANDONMENT*
(Other)	

(NOTE: Report results of multiple completion on Well Completion or Recompletion Report and Log form.)

17. DESCRIBE PROPOSED OR COMPLETED OPERATIONS (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work. If well is directionally drilled, give subsurface locations and measured and true vertical depths for all markers and zones pertinent to this work.) *

Request approval to change approved A.P.D. as follows:

- (1) Change setting depth of 8 5/8" casing from 700 ft to ±700 ft. Exact depth will be determined from top of San Andres. *at least 50' into San Andres. Minimum setting depth 650'.*
- (2) Change mud program to: Drilling program: Drill and set surface with air and/or aerated water. Drill from casing shoe to top of Abo with air, drill Abo with air and/or aerated mud. Upon T.D. load hole with mud and run logs.
- (3) Change drilling plat orientation as indicated by enclosed diagram.



18. I hereby certify that the foregoing is true and correct

SIGNED *Paul Ryzdale*

TITLE Operations Manager


DATE 5/3/89

(This space for Federal or State office use)

APPROVED BY
CONDITIONS OF APPROVAL, IF ANY:

TITLE

*See Instructions on Reverse Side

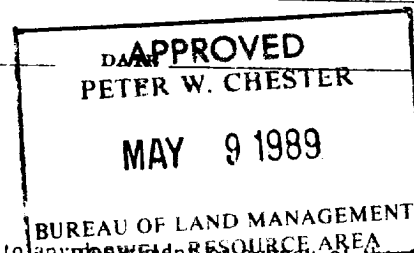

McClellan O.I. Corp.
Herman 120 #5
Sec 1-T 95-R256



UNITED DRILLING, INC.
LOCATION PLAT
RIG 3
AIR DRILLING
Scale: 1"=40' 4/25/81

