

COMPANY <i>Rault Petroleum</i>		PROPERTY NAME <i>Mark Wm. Isler</i>		WELL NO. <i>1</i>
DATE	LOCATION (ULSTR)	FOOTAGE		
	<i>M-33-3-25</i>	<i>6605+W</i>		
API NO.		POOL <i>Wildcat Abo</i>		

- ① Spot a 60 sx plug @ 3537' and tag
- ② Load hole volume to 1015'
- ③ Perforate 4 1/2" csg @ 1008'
- ④ RIH w/ 7 1/2" to 1008' & circulate cement to surface up backside of 4 1/2" leaving 150' plug inside of 4 1/2"
- ⑤ Plug mud in hole & spot a 10 sx surface plug & set P&A marker
- ⑥ Clean & level location

Mud will be 25 lb per bbl brine
Contractor will need to check condition of roads & locations.

CASING RECORD:

10 3/4" @ 958'

4 1/2" @ 4040 Est TOC @ 2768'
cemented w/ 230 sx
50/50 Poz


* 10 sx surface Plug

* Perf. 4 1/2" csg @ 1008' Circ. cement to surface leaving 150' cement in 4 1/2" above 8 1/2" csg shoe. TAG

* Circ. brine gel.

* 60 sx cement Plug @ 3537' TAG

After

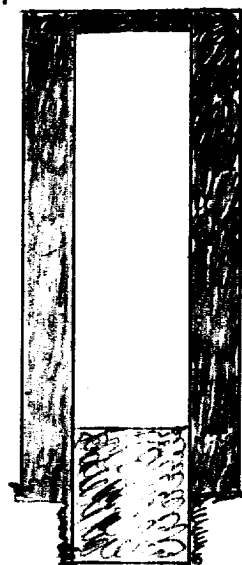

Plug
1008'

60 SX

Perfs @
3537

Est
TOC 2768'

TAG @ 3290'