


Operator Cibola Energy Corp
 Well U.S. 10 Lane Carbon Reed
 Unit P-1 Section 7 Township 14 Range 11
 API # 30-035-20025

TOPS Open Est Tops

Aluminum	Surface
Ann/Well-Frame	1350
C15cc	1700
Canyon	2100
Stream	2500
Arche	3100
Asaga	3200
Feasidman	3400

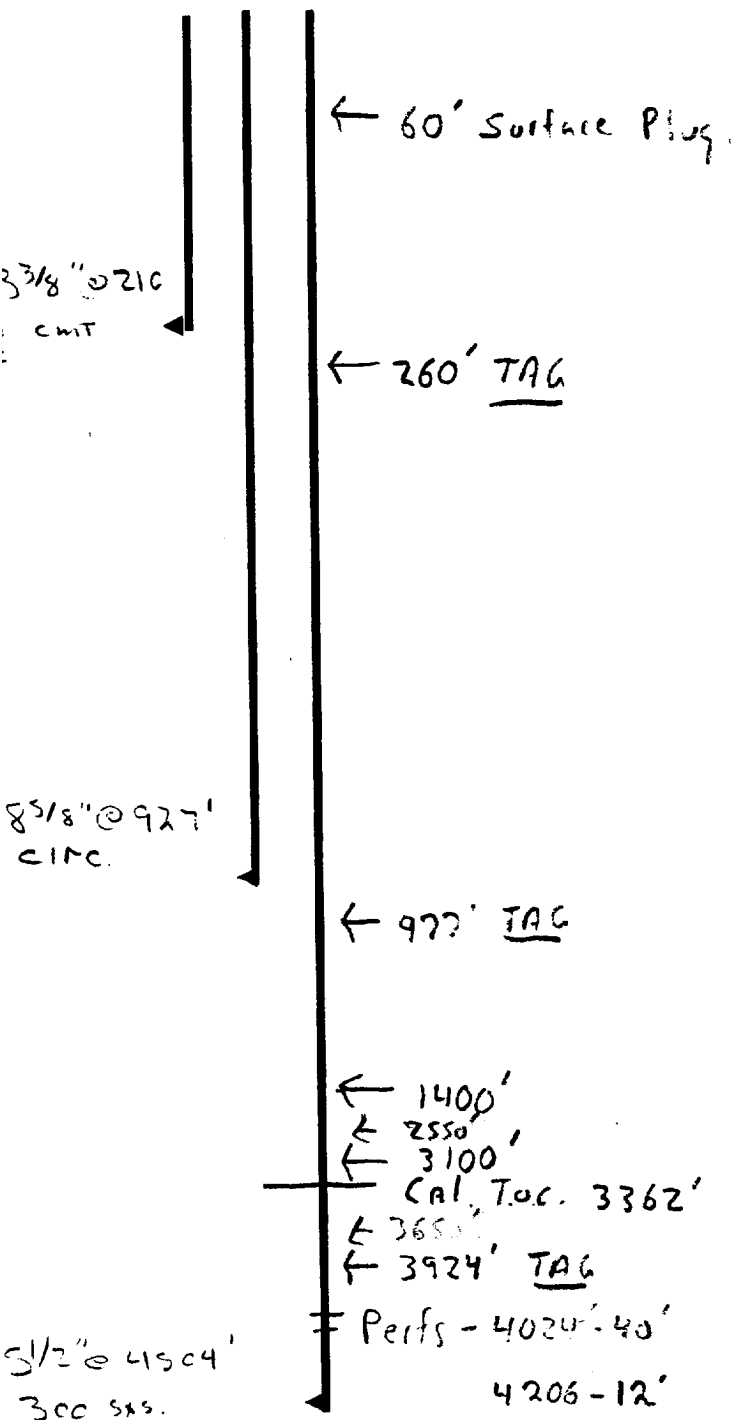

- * Contact OCD 24 hrs. prior to any work done.
- * Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- * Install dry hole marker as per Rule 202.B.2
- * Plugs are to be set from point indicated up.
- * Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- * Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- * Surface plug will be from 0' - 60'
- * Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- * Plugs to be tagged will be indicated.

WIS