


Operator Melrose Operating Co.  
 Well Gatesia Unit #23  
 Unit L Section 35 Township 17 Range 28  
 API # 30-015-C1746

# TOPS

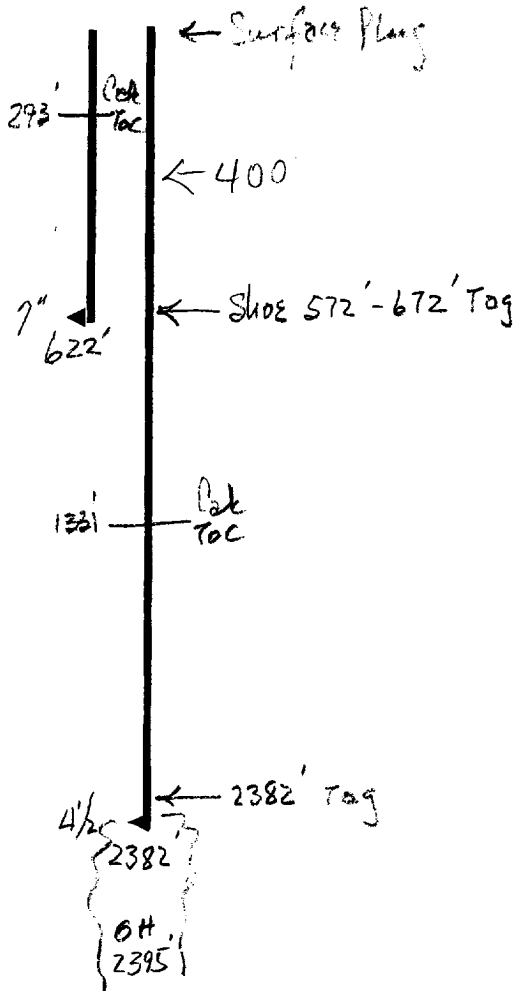

Gatesia	~ 550'
T. Rivers	~ 800'
Bowers	~ 1200'
Garrison	~ 1450'
Grayburg	~ 1900'
San Andres	2380'

- \* Contact OCD 24 hrs. prior to any work done.
- \* Salt gel mud consisting of 10# brine with 25# of gel per barrel must be placed between each plug.
- \* Install dry hole marker as per Rule 202.B.2
- \* Plugs are to be set from point indicated up.
- \* Plugs must not be less than 100' or 25 Sacks of cement, whichever is greater, unless specifically indicated.
- \* Shoe and stub plugs will be 50' above and below shoe or stub and tagged.
- \* Surface plug will be from 0' - 60'
- \* Where plugs are required, cement must be placed inside and outside of all casing string(s) in the correct footage or sacks required, if no cement exists.
- \* Plugs to be tagged will be indicated.

*[Handwritten signature]*