


Atha SWD Sampling Plan

1. Collect soil samples on the surface at all sample locations indicated on the map.
2. Collect soil samples at 1 ft bsg at each sample location inside the affected areas indicated on the map (same as surface samples)
3. Collect soil samples at 2 ft bsg at each sample location inside the affected areas indicated on the map (same as surface samples)
4. Run the following test for all samples collected.
 - TPH (8015)
 - BTEX (8260 or 8021)
 - Chlorides (EPA 300)

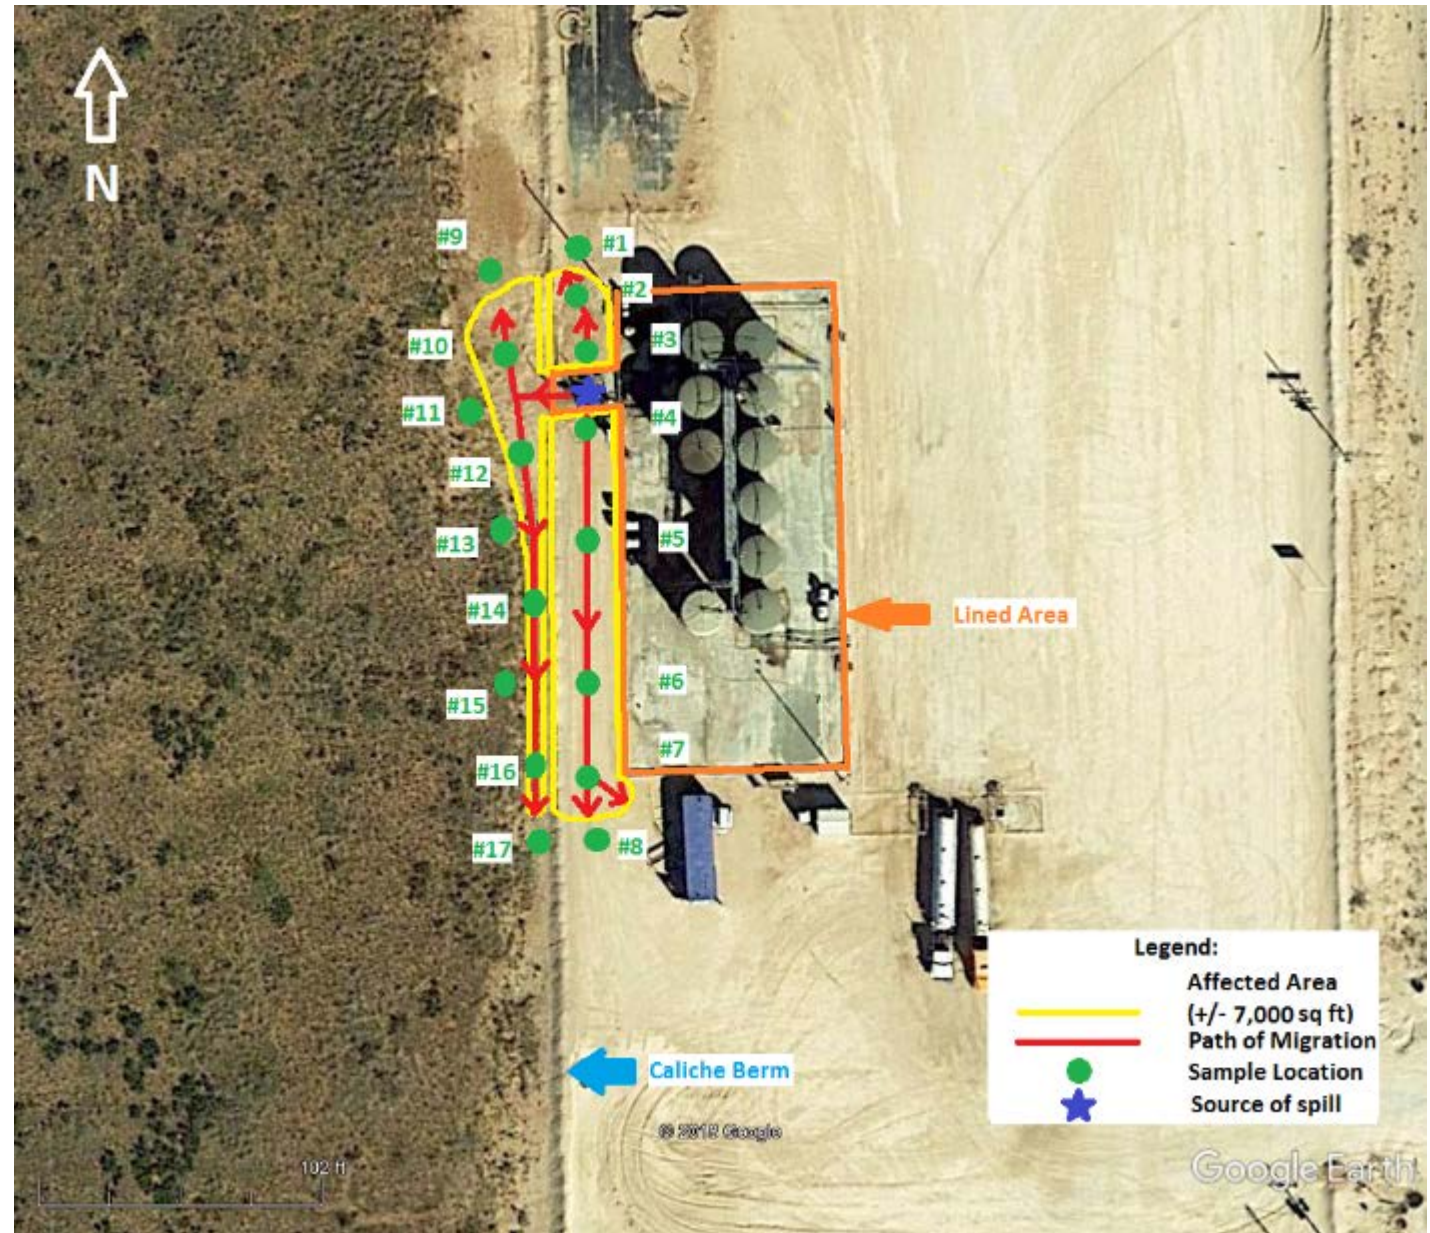

Sample Location Coordinates

#1 - 32°25'38.11"N
103°17'49.35"W

#2 - 32°25'38.00"N
103°17'49.37"W

#3 - 32°25'37.79"N
103°17'49.36"W

#4 - 32°25'37.50"N
103°17'49.36"W

#5 - 32°25'37.12"N
103°17'49.34"W

#6 - 103°17'49.70"W
103°17'49.34"W

#7 - 32°25'36.28"N
103°17'49.33"W

#8 - 32°25'36.01"N
103°17'49.27"W

#9 - 32°25'38.08"N
103°17'49.70"W

#10 - 32°25'37.77"N
103°17'49.66"W

#11 - 32°25'37.57"N
103°17'49.93"W

#12 - 32°25'37.43"N
103°17'49.59"W


#13 - 32°25'37.16"N
103°17'49.73"W

#14 - 32°25'36.84"N
103°17'49.56"W

#15 - 32°25'36.54"N
103°17'49.70"W

#16 - 32°25'36.36"N
103°17'49.57"W

#17 - 32°25'36.16"N
103°17'49.56"W

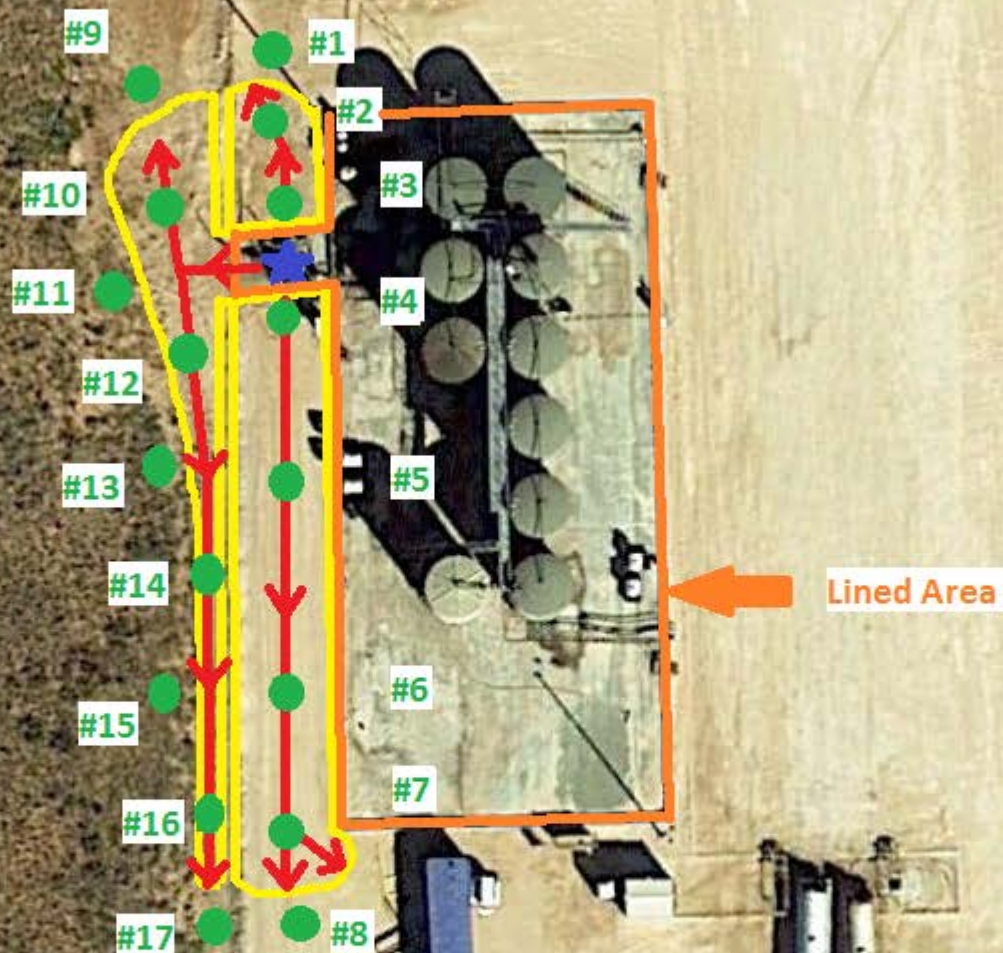

Legend:

- Affected Area
(+/- 7,000 sq ft)
- Path of Migration
- Sample Location
- Source of spill

© 2018 Google

Google Earth

102 ft

