
Submit 3 Copies To Appropriate District	State of New Mexico	Form C-103
Office District I 1625 N. French Dr., Hobbs, NM 88 10 BBS OUT OF COMMON COMM	, Minerals and Natural Resources	June 19, 2008
1625 N. French Dr., Hobbs, NM 88 10 BBS District II 1301 W. Grand Ave., Artesia, NM 88210 District III 1000 Rio Brazos Rd., Aztec, NM 87406 District IV		WELL API NO. / 30-025-23625
1301 W. Grand Ave., Artesia, NM 88210	CONSERVATION DIVISION	5. Indicate Type of Lease
1000 Rio Brazos Rd., Aztec, NM 8740	220 South St. Francis Dr.	STATE FEE
District IV	Santa Fe, NM 87505	6. State Oil & Gas Lease No.
1220 S. St. Francis Dr., Santa Fe, NM 87505 RECEIVED		
SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH		7. Lease Name or Unit Agreement Name SFPRR
PROPOSALS.) 1. Type of Well: Oil Well Gas Well	Other	8. Well Number 011
2. Name of Operator		9. OGRID Number
VPR Operating, LLC 3. Address of Operator		266091 10. Pool name or Wildcat
1406 Camp Craft Rd, Suite 106, Austin, TX 7874	46	West Sawyer (San Andres)
4. Well Location		
Unit Letter L 1980 feet from the SOUTH line and 860 feet from the WEST_line		
	Township 09S Range 37E	NMPM LEA County
	on (Show whether DR, RKB, RT, GR, etc.	
GL: 3975'	`	The second secon
12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data		
NOTICE OF INTENTION	TO: SUE	SEQUENT REPORT OF:
	ABANDON REMEDIAL WOR	
TEMPORARILY ABANDON	== ·	ILLING OPNS. P AND A
PULL OR ALTER CASING MULTIPLE DOWNHOLE COMMINGLE	COMPL CASING/CEMEN	II JOB
DOWNHOLE COMMINGLE		
	— l	_
OTHER:	OTHER:	
13. Describe proposed or completed operation	ns. (Clearly state all pertinent details, ar	ad give pertinent dates, including estimated date
13. Describe proposed or completed operation of starting any proposed work). SEE RU	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A	nd give pertinent dates, including estimated date ttach wellbore diagram of proposed completion
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A a after 8/15/2009)	ttach wellbore diagram of proposed completion
 13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 C	ttach wellbore diagram of proposed completion (F/SX).
 Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC . 	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 C PERF @ 2945' \$ SQZ.	ttach wellbore diagram of proposed completion (F/SX).
 Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. Circulate Well w/ Gelled Brine. POOH to 2.000'. Spot 25 SX 	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 C PERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3	EF/SX). L) OC & TAG- 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'.
 Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. Circulate Well w/ Gelled Brine. POOH to 2,000'. Spot TOOH. 	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 C PERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3	EF/SX). L) OC & TAGE 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'.
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2,000'. Spot TOOH. 2,000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2,250'. TI 5) TIH w/ Open Ended Tbg T/ +/-440'. Spot/Circulate	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 CPEF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQC 25 SX Class C to surface (14.8 PPG, 6.32 GPS)	EF/SX). L) OC & TAGE 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'.
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2.250'. TI TIH w/ Open Ended Tbg T/ +/-440'. Spot/Circulate Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQC 25 SX Class C to surface (14.8 PPG, 6.32 GS) 5 Q Z	### Action wellbore diagram of proposed completion ###################################
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2,000'. Spot TOOH. 2,000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2,250'. TI 5) TIH w/ Open Ended Tbg T/ +/-440'. Spot/Circulate	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQC 25 SX Class C to surface (14.8 PPG, 6.32 GSQZ) IW/ Open Ended Tbg T/ +/-425'. Cut Off Welling Cartesians (14.8 PPG, 6.32 GSQZ)	### Action wellbore diagram of proposed completion ###################################
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.000'. Spot TOOH. 2.000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2.250'. TIH w/ Open Ended Tbg T/ +/-440'. Spot/Circulate Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQC 25 SX Class C to surface (14.8 PPG, 6.32 GS) s O SX Class C to surface (14.8 PPG, 6.32 GS) w/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release.	### Action wellbore diagram of proposed completion ###################################
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2,000'. Spot TOOH. 2,000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2,250'. TIH start Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQC 25 SX Class C to surface (14.8 PPG, 6.32 GSQZ) IW/ Open Ended Tbg T/ +/-425'. Cut Off Welling Cartesians (14.8 PPG, 6.32 GSQZ)	### Action wellbore diagram of proposed completion ###################################
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2,000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2,250'. TIH w/ Open Ended Tbg T/ +-440'. Spot/Circulate Tbg 6) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 425". TIH level Location File C103 w/ OCD to Obtain Location Spud Date:	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.32 GQZ. IH w/ Open Ended +/-2,260'. Spot 25 SX Class C to surface (14.8 PPG, 6.32 GQZ. IW/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release. Rig Release Date:	EF/SX). 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). 3PS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" head & Weld On Regulation P&A marker. Clean &
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.000'. Spot TOOH. 2.000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2.250'. TIH w/ Open Ended Tbg T/ +/-440'. Spot/Circulate Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.32 GQZ. IH w/ Open Ended +/-2,260'. Spot 25 SX Class C to surface (14.8 PPG, 6.32 GQZ. IW/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release. Rig Release Date:	EF/SX). 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). 3PS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" head & Weld On Regulation P&A marker. Clean &
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2,000'. Spot TOOH. 2,000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2,250'. TIH start Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQT 25 SX Class C to surface (14.8 PPG, 6.32 GS) W/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release. Rig Release Date:	ttach wellbore diagram of proposed completion F/SX). UOC FTAG- 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). GPS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" head & Weld On Regulation P&A marker. Clean &
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2,000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2,250'. TIH w/ Open Ended Tbg T/ +-440'. Spot/Circulate Tbg 6) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 425". TIH level Location File C103 w/ OCD to Obtain Location Spud Date:	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.32 GQZ. IH w/ Open Ended +/-2,260'. Spot 25 SX Class C to surface (14.8 PPG, 6.32 GQZ. IW/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release. Rig Release Date:	EF/SX). 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). 3PS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" head & Weld On Regulation P&A marker. Clean &
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.000'. Spot 700H. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2.250'. TIH w/ Open Ended Tbg T/ +/-440'. Spot Circulate Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 CPEF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQT. IN W/ Open Ended Tog T/ +/-425'. Cut Off Wellion Release. Rig Release Date: TITLE Agent	ttach wellbore diagram of proposed completion F/SX). UOC FTAG- 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). GPS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" head & Weld On Regulation P&A marker. Clean &
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.990'. Spot TOOH. 2.900'. S	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.32 GQZ. IH w/ Open Ended +/-2,260'. Sepot 25 SX Class C to surface (14.8 PPG, 6.32 GQZ. IW/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release. Rig Release Date: Rig Release Date: TITLE Agent E-mail address: james@kiamic	ttach wellbore diagram of proposed completion F/SX). UOC FTAG- 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). GPS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" Thead & Weld On Regulation P&A marker. Clean & Ge and belief. DATE Chienergy.com PHONE: (817) 923-8323
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2.250'. TI TIH w/ Open Ended Tbg T/ +/-440'. Spot Circulate Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.32 GQZ. IH w/ Open Ended +/-2,260'. Sepot 25 SX Class C to surface (14.8 PPG, 6.32 GQZ. IW/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release. Rig Release Date: Rig Release Date: TITLE Agent E-mail address: james@kiamic	ttach wellbore diagram of proposed completion F/SX). UOC FTAG- 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). GPS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" Thead & Weld On Regulation P&A marker. Clean & Ge and belief. DATE Chienergy.com PHONE: (817) 923-8323
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.990'. Spot TOOH. 2.900'. S	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 CPEF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.3 SQZ. IH w/ Open Ended +/-2,260'. SQT. IN W/ Open Ended Tog T/ +/-425'. Cut Off Wellion Release. Rig Release Date: TITLE Agent	ttach wellbore diagram of proposed completion F/SX). UOC FTAG- 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). GPS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" Thead & Weld On Regulation P&A marker. Clean & Ge and belief. DATE Chienergy.com PHONE: (817) 923-8323
13. Describe proposed or completed operation of starting any proposed work). SEE RU or recompletion. (Plan to Start Operation 1) MI&RU e-Line set CIBP @ 4950', Spot 25 SX Class 2) Leave Well SI for 4 Hrs. RIH w/ Tbg & Tag TOC. 3) Circulate Well w/ Gelled Brine. POOH to 2.000'. Spot TOOH. 4) RIH w/ 3-1/8" Csg Gun & Perf 4 Holes @ 2.250'. TI TIH w/ Open Ended Tbg T/ +/-440'. Spot Circulate Tbg	ns. (Clearly state all pertinent details, ar LE 1103. For Multiple Completions: A after 8/15/2009) s C + 1% CaCl2 (14.8 PPG, 6.32 GPS, 1.32 COMPERF @ 2945' \$ SQZ. ot 25 SX Class C + 2% CaCl2 (14.8 PPG, 6.32 GQZ. IH w/ Open Ended +/-2,260'. Sepot 25 SX Class C to surface (14.8 PPG, 6.32 GQZ. IW/ Open Ended Tbg T/ +/-425'. Cut Off Wellion Release. Rig Release Date: Rig Release Date: TITLE Agent E-mail address: james@kiamic	ttach wellbore diagram of proposed completion F/SX). UOC FTAG- 2 GPS, 1.32 CF/SX) Plug F/ 2900' - T/ 2,700'. SS C + 2% CaCl2 (14.8 PPG, 6 32 GPS, 1.32 CF/SX). GPS, 1.32 CF/SX). Immediately TOOH & LD 2-3/8" Thead & Weld On Regulation P&A marker. Clean & Ge and belief. DATE Chienergy.com PHONE: (817) 923-8323

.

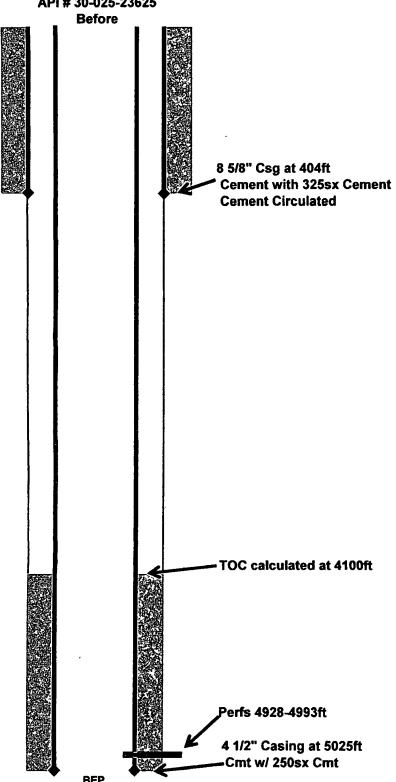

VPR OPERATING

SFPRR # 011 API # 30-025-23625



VPR OPERATENG

SFPRR # 011 API # 30-025-23625

