

State of New Mexico
Energy, Minerals and Natural Resources Department

Form C-103
Revised 5-27-2004

FILE IN TRIPLICATE

OIL CONSERVATION DIVISION

DISTRICT I
1625 N French Dr, Hobbs, NM 88240

1220 South St. Francis Dr.
Santa Fe, NM 87505

DISTRICT II
1301 W Grand Ave, Artesia, NM 88210

DISTRICT III
1000 Rio Brazos Rd, Aztec, NM 87410

HOBBS OCD

MAY 11 2012

WELL API NO 30-025-07571
5. Indicate Type of Lease STATE ☐ FEE ☒
6. State Oil & Gas Lease No
7. Lease Name or Unit Agreement Name South Hobbs (G/SA) Unit
8. Well No 2
9. OGRID No. 157984
10. Pool name or Wildcat Hobbs (G/SA)

SUNDRY NOTICES AND REPORTS ON WELLS (DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR USE "APPLICATION FOR PERMIT" (Form C-101) for such proposals.)	
1. Type of Well Oil Well ☒ Gas Well ☐ Other Temporarily Abandoned	11. Elevation (Show whether DF, RKB, RTGR, etc) 3642' KB
2. Name of Operator Occidental Permian Ltd	
3. Address of Operator HCR 1 Box 90 Denver City, TX 79323	
4. Well Location Unit Letter E, 1980 Feet From The North 660 Feet From The West Line Section 34 Township 18-S Range 38-E NMPM Lea County	
Pit or Below-grade Tank Application ☐ or Closure ☐ Pit Type _____ Depth of Ground Water _____ Distance from nearest fresh water well _____ Distance from nearest surface water _____ Pit Liner Thickness _____ mil Below-Grade Tank. Volume _____ bbls; Construction Material _____	

12. Check Appropriate Box to Indicate Nature of Notice, Report, or Other Data	
NOTICE OF INTENTION TO:	SUBSEQUENT REPORT OF:
PERFORM REMEDIAL WORK ☐ PLUG AND ABANDON ☐	REMEDIAL WORK ☐ ALTERING CASING ☐
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐	COMMENCE DRILLING OPNS. ☐ PLUG & ABANDONMENT ☐
PULL OR ALTER CASING ☐ Multiple Completion ☐	CASING TEST AND CEMENT JOB ☐
OTHER: _____	OTHER: Temporarily Abandon well/TA status request ☒

13. Describe Proposed or Completed Operations (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work) SEE RULE 1103. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

1. RUPU & RU.
2. NU BOP/ND wellhead.
3. POOH and lay down ESP & tubing.
4. RIH w/bit. Tag @4050'. POOH w/bit.
5. RIH w/CIBP set @4000'. RU wireline & dump 35' of cement on top of CIBP. RD wireline.
6. NU TA wellhead/ND BOP.
7. Test casing to 580 PSI for 30 minutes and chart for the NMOCD.
8. RDPU & RU. Clean location. Well is TA'd.

RUPU 03/14/2012
RDPU 03/20/2012

This Approval of Temporary
Abandonment Expires 3-19-2017


I hereby certify that the information above is true and complete to the best of my knowledge and belief. I further certify that any pit or below-grade tank has been/will be constructed or closed according to NMOCD guidelines ☐ , a general permit ☐ or an (attached) alternative OCD-approved plan ☐.

SIGNATURE Mendy A. Johnson TITLE Administrative Associate DATE 05/11/2012
TYPE OR PRINT NAME Mendy A. Johnson E-mail address: mendy_johnson@oxy.com TELEPHONE NO 806-592-6280

For State Use Only


APPROVED BY [Signature] TITLE STAFF NGR DATE 5-11
CONDITIONS OF APPROVAL IF ANY

MAY 14 2012

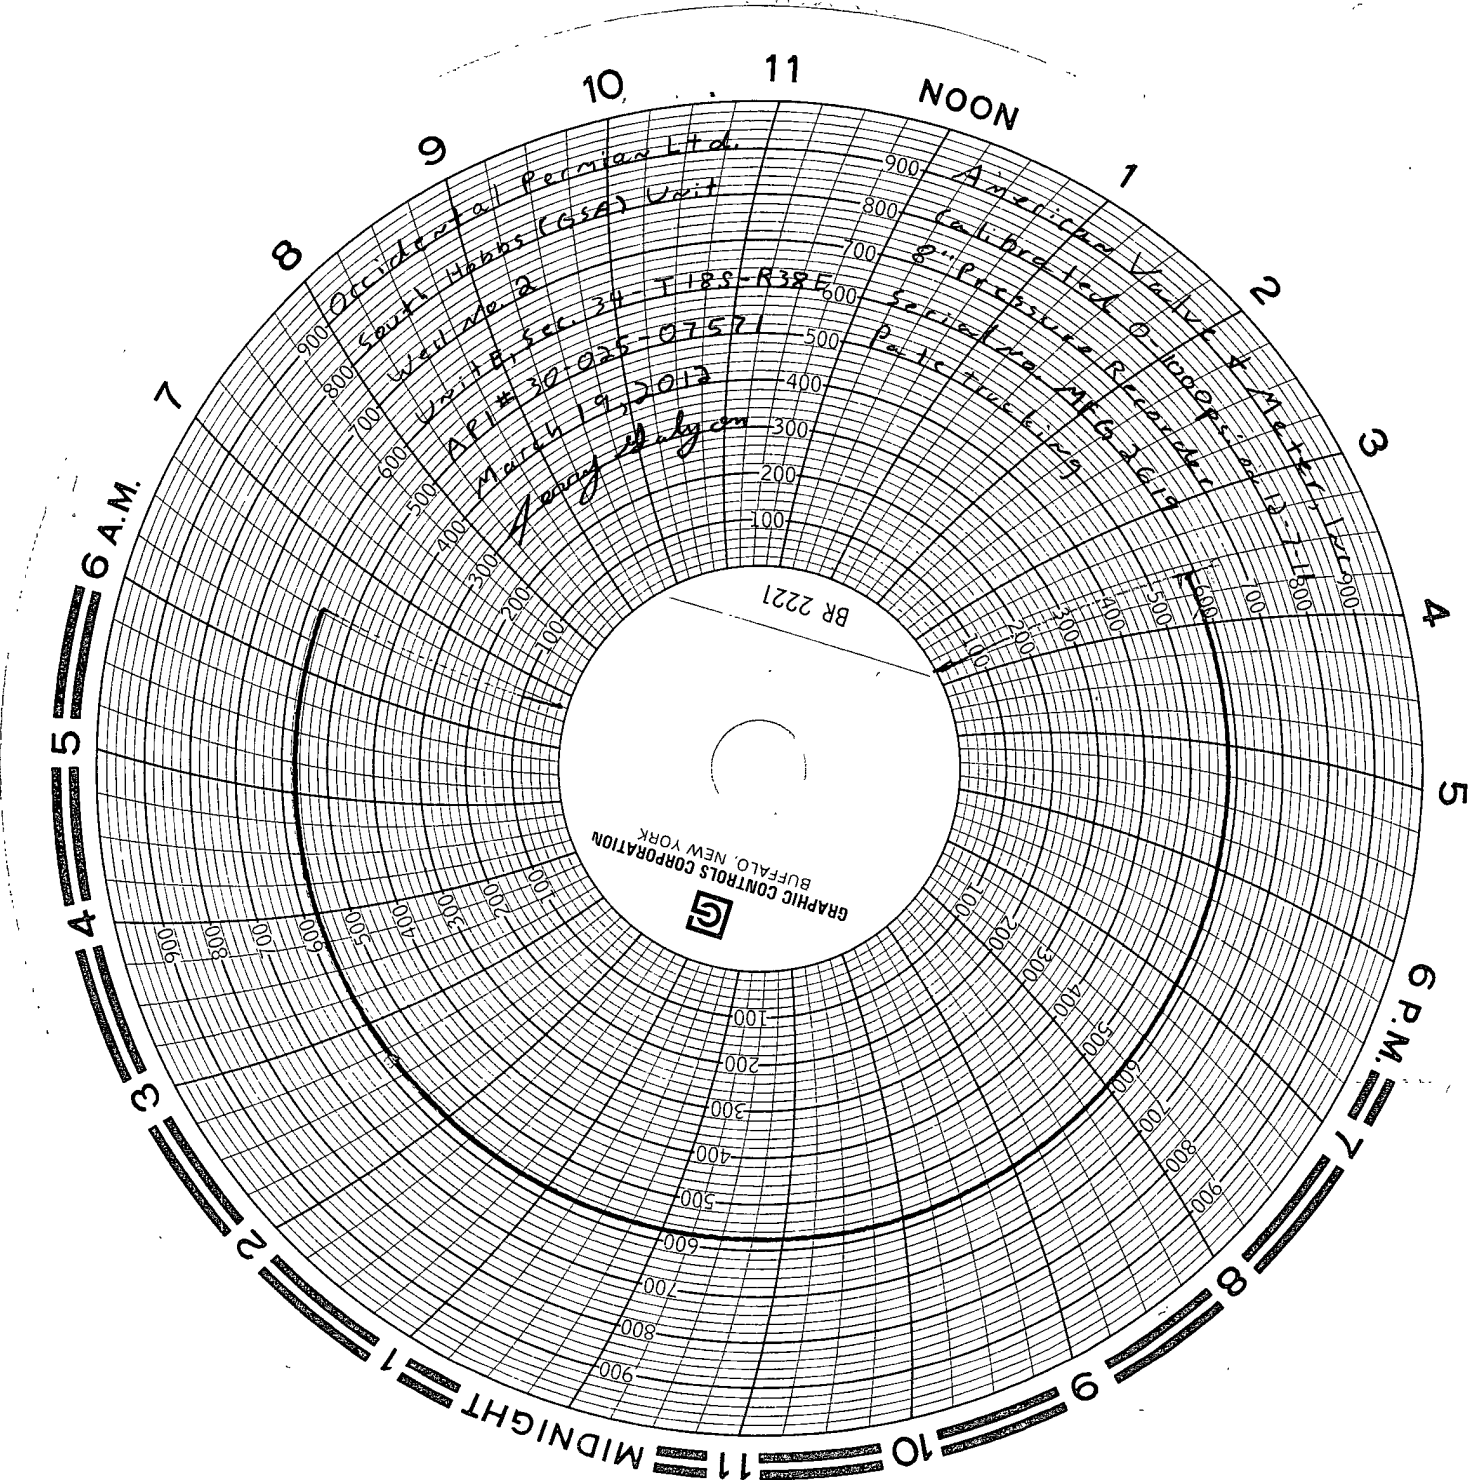

April 20, 2012

Work Plan Report for Well:SHOU-2E34

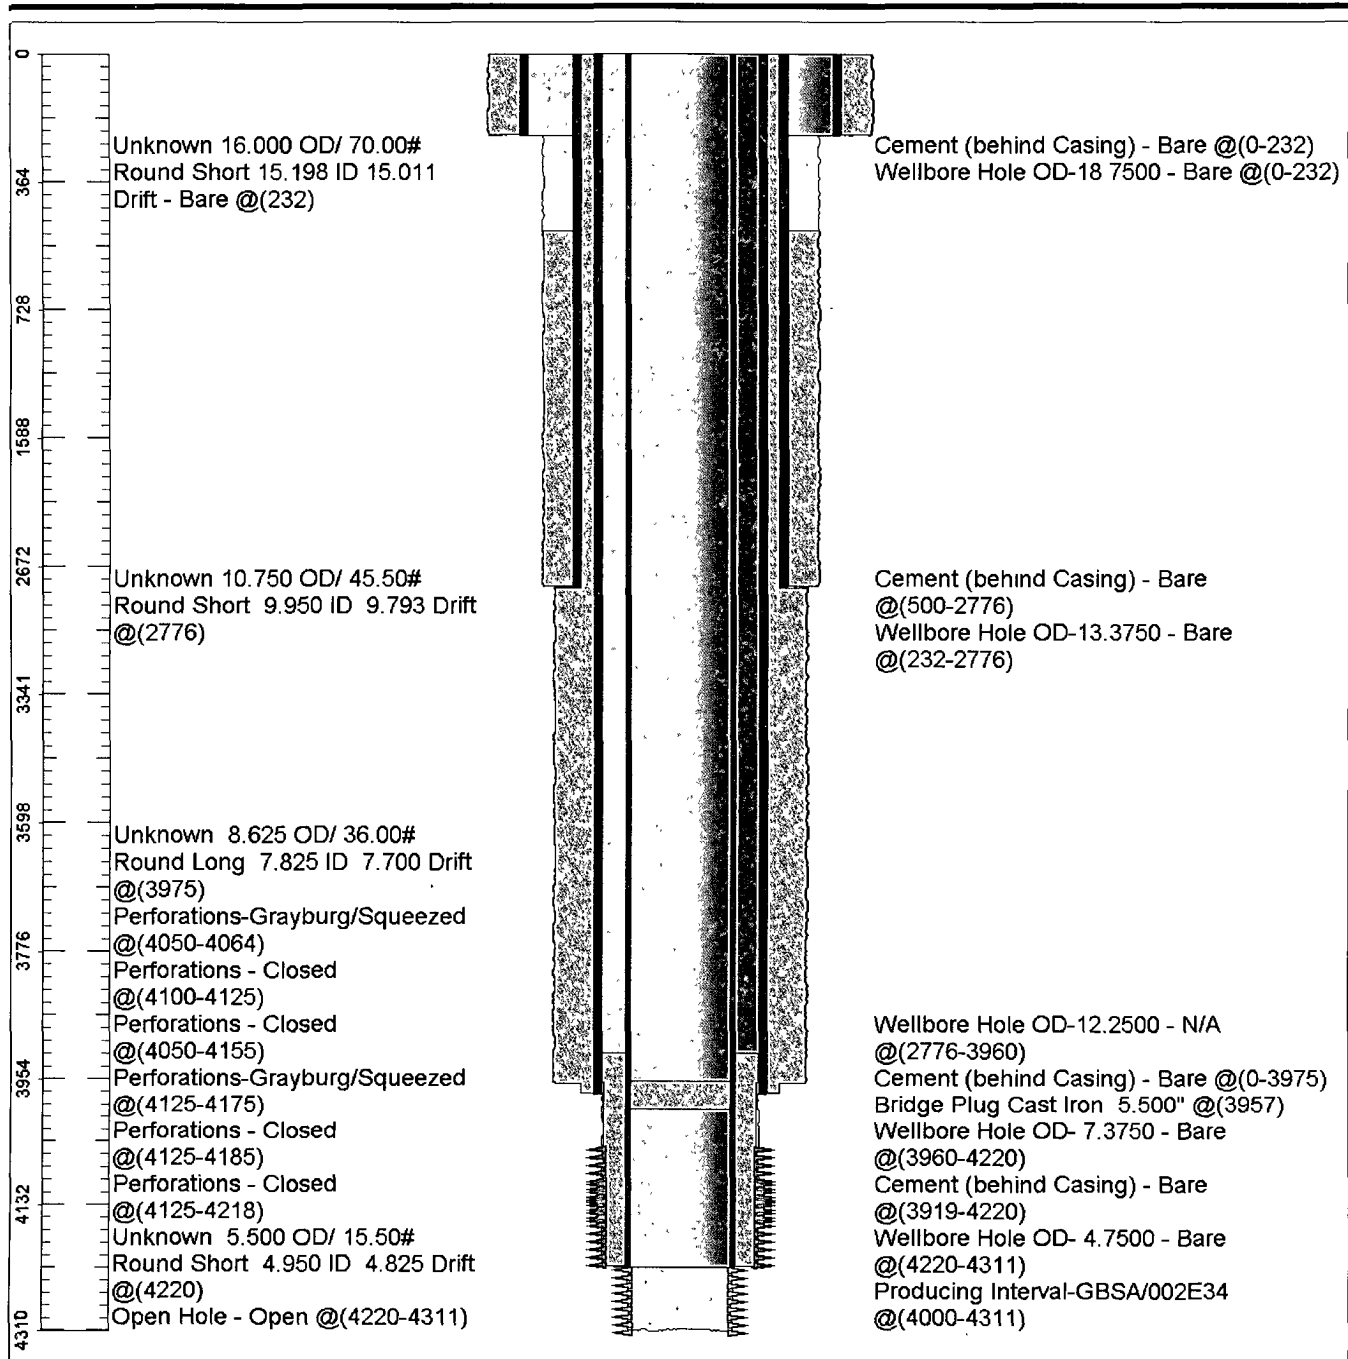

Survey Viewer