

Submit 1 Copy To Appropriate District
Office
District I - (575) 393-6161
1625 N. French Dr., Hobbs, NM 88240
District II - (575) 748-1283
811 S. First St., Artesia, NM 88210
District III - (505) 334-6178
1000 Rio Brazos Rd., Aztec, NM 87410
District IV - (505) 476-3460
1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico

Energy, Minerals and Natural Resources

Form C-103

Revised July 18, 2013

HOBBS OCE

JUN 30 2014

RECEIVED

OIL CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

WELL API NO. 30-025-26512
5. Indicate Type of Lease STATE ☒ FEE ☐
6. State Oil & Gas Lease No. 312479
7. Lease Name or Unit Agreement Name SOUTHEAST MALJAMAR GRAYBURG-SAN ANDRES UNIT
8. Well Number 105
9. OGRID Number 298299
10. Pool name or Wildcat MALJAMAR; GRAYBURG SAN ANDRES
11. Elevation (Show whether DR, RKB, RT, GR, etc.) 4061 GR

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well: Oil Well ☒ Gas Well ☐ Other ☐

2. Name of Operator
CROSS TIMBERS ENERGY, LLC

3. Address of Operator
400 WEST 7th STREET, FORT WORTH, TX 76102

4. Well Location
Unit Letter J : 2490 feet from the SOUTH line and 1595 feet from the EAST line
Section 30 Township 17S Range 33E NMPM County LEA

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☒ PLUG AND ABANDON ☐
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐
PULL OR ALTER CASING ☐ MULTIPLE COMPL ☐
DOWNHOLE COMMINGLE ☐
CLOSED-LOOP SYSTEM ☐
OTHER: ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐
COMMENCE DRILLING OPNS. ☐ P AND A ☐
CASING/CEMENT JOB ☐
OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

CONVERT TO WATER INJECTION

1. MIRU
2. POH & LAY DOWN RODS & PUMP
3. RUN BIT & SCRAPER THRU PERFS
4. ACIDIZE W/5000 GALLSS 15% NEFE HCl
5. TIH W/INJ PKR & PLASTIC COATED TBG
6. NU INJ WH
7. TIE INJ LINE INTO WH
- * 8. START INJECTING WATER

Per Underground Injection Control Program Manual

11.6 C Packer shall be set within or less than 100 feet of the uppermost injection perfs or open hole.

DO NOT INJECT PENDING APPROVAL OF ORDER.

Spud Date: 12/18/1979

Rig Release Date: 04/19/1980

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE Robbie A. Grigg TITLE Regulatory Compliance DATE 6/26/2014
Type or print name Robbie A Grigg E-mail address: rgrigg@mspartners.com PHONE: 817-334-7842


For State Use Only

APPROVED BY: Mary Brown TITLE Dist. Supervisor DATE 6/30/2014

Conditions of Approval (if any):

JUL 01 2014

SEMGS AU #105 Existing Wellbore Diagram

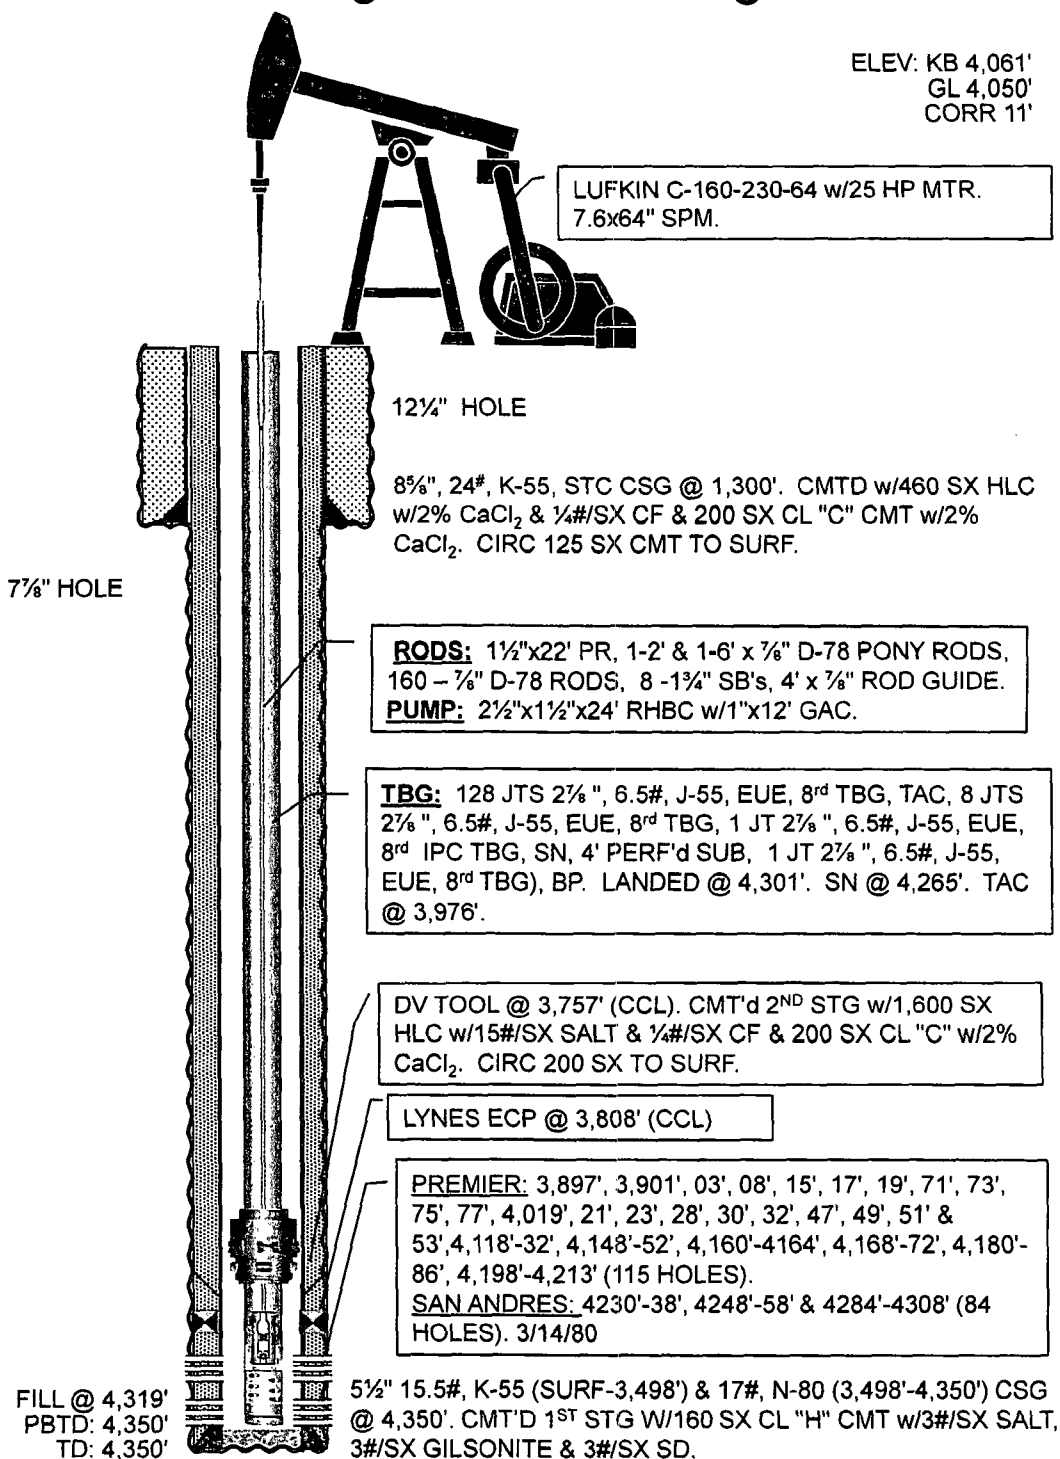

SEMGSAU #105 Proposed Wellbore Diagram

ELEV: KB 4,061'
GL 4,050'
CORR 11'

