
## MACK ENERGY CORPORATION PETRUS D #3 Sec 10 T17S R33E

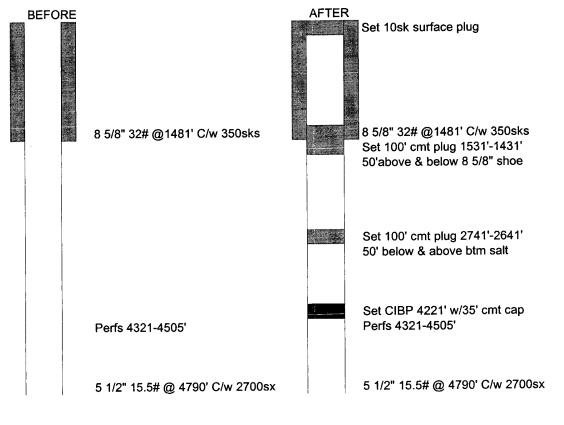

- 1 Notify OCD 24hrs of plugging
- 2 Set CIBP 4221'w/35' cmt cap circ hole w/mud
- 3 Set 100' cmt plug 2741'-2641' 50' below & above btm salt
- 4 Set 100' cmt plug 1531'-1431' 50' above & below 8 5/8" shoe
- 5 Set 10sk surface plug
- 6 Install dry hole marker