

Submit 1 Copy To Appropriate District Office
District I – (575) 393-6161
1625 N. French Dr., Hobbs, NM 88240
District II – (575) 748-1283
811 S. First St., Artesia, NM 88203
District III – (505) 334-6177
1000 Rio Brazos Rd., Aztec, NM 87410
District IV – (505) 476-3460
1220 S. St. Francis Dr., Santa Fe, NM 87505

State of New Mexico
Energy, Minerals and Natural Resources

Form C-103
Revised July 18, 2013

OH CONSERVATION DIVISION
1220 South St. Francis Dr.
Santa Fe, NM 87505

WELL API NO. 30-025-41278
5. Indicate Type of Lease STATE ☐ FEE ☒
6. State Oil & Gas Lease No.
7. Lease Name or Unit Agreement Name Northeast Drinkard Unit (NEDU) [22503]
8. Well Number 727
9. OGRID Number 873
10. Pool name or Wildcat Eunice; B-T-D, North [22900]

SUNDRY NOTICES AND REPORTS ON WELLS
(DO NOT USE THIS FORM FOR PROPOSALS TO DRILL OR TO DEEPEN OR PLUG BACK TO A DIFFERENT RESERVOIR. USE "APPLICATION FOR PERMIT" (FORM C-101) FOR SUCH PROPOSALS.)

1. Type of Well: Oil Well ☒ Gas Well ☐ Other

2. Name of Operator
Apache Corporation

3. Address of Operator
303 Veterans Airpark Lane, Suite 1000 Midland, TX 79705

4. Well Location
Unit Letter O : 1240 feet from the South line and 1855 feet from the East line
Section 15 Township 21S Range 37E NMPM County Lea

11. Elevation (Show whether DR, RKB, RT, GR, etc.)
3415' GL

12. Check Appropriate Box to Indicate Nature of Notice, Report or Other Data

NOTICE OF INTENTION TO:

PERFORM REMEDIAL WORK ☒ PLUG AND ABANDON ☐
TEMPORARILY ABANDON ☐ CHANGE PLANS ☐
PULL OR ALTER CASING ☐ MULTIPLE COMPL ☐
DOWNHOLE COMMINGLE ☐
CLOSED-LOOP SYSTEM ☐
OTHER: ☐

SUBSEQUENT REPORT OF:

REMEDIAL WORK ☐ ALTERING CASING ☐
COMMENCE DRILLING OPNS. ☐ P AND A ☐
CASING/CEMENT JOB ☐
OTHER: ☐

13. Describe proposed or completed operations. (Clearly state all pertinent details, and give pertinent dates, including estimated date of starting any proposed work). SEE RULE 19.15.7.14 NMAC. For Multiple Completions: Attach wellbore diagram of proposed completion or recompletion.

Apache intends to add Blinbry, Tubb & Drinkard pay and acidize, per the attached procedure and WBD information.

Spud Date:

10/23/2013

Rig Release Date:

10/29/2013

I hereby certify that the information above is true and complete to the best of my knowledge and belief.

SIGNATURE

Reesa Fisher

TITLE Sr. Staff Reg Analyst

DATE 10/26/2018

Type or print name Reesa Fisher

E-mail address: Reesa.Fisher@apachecorp.com

PHONE: (432) 818-1062

For State Use Only

APPROVED BY:

[Signature]

TITLE

Petroleum Engineer

DATE

11/02/18


Conditions of Approval (if any):

NEDU 727D: (API: 30-025-41278)


OBJECTIVE: ADD BLINEBRY, TUBB & DRINKARD PAY, ACIDIZE

1. POOH with rods and 2-7/8" production tubing.
2. PU workstring and RIH with bit and scraper. Clean out wellbore to PBTD at 6830'. POOH.
3. RIH with wireline and perforate Blinebry, Tubb and Drinkard formations at 5723-5762', 6182-6256' and 6508-6586', respectively. POOH.
4. RIH w/ work string and 5-1/2" treating packer. Acidize Blinebry-Tubb-Drinkard interval with 10,000 gallons 15% HCL acid. POOH.
5. RIH with 2-7/8" production tubing and seat nipple set at ~6645'.
6. Return well to production.


Current Wellbore Diagram

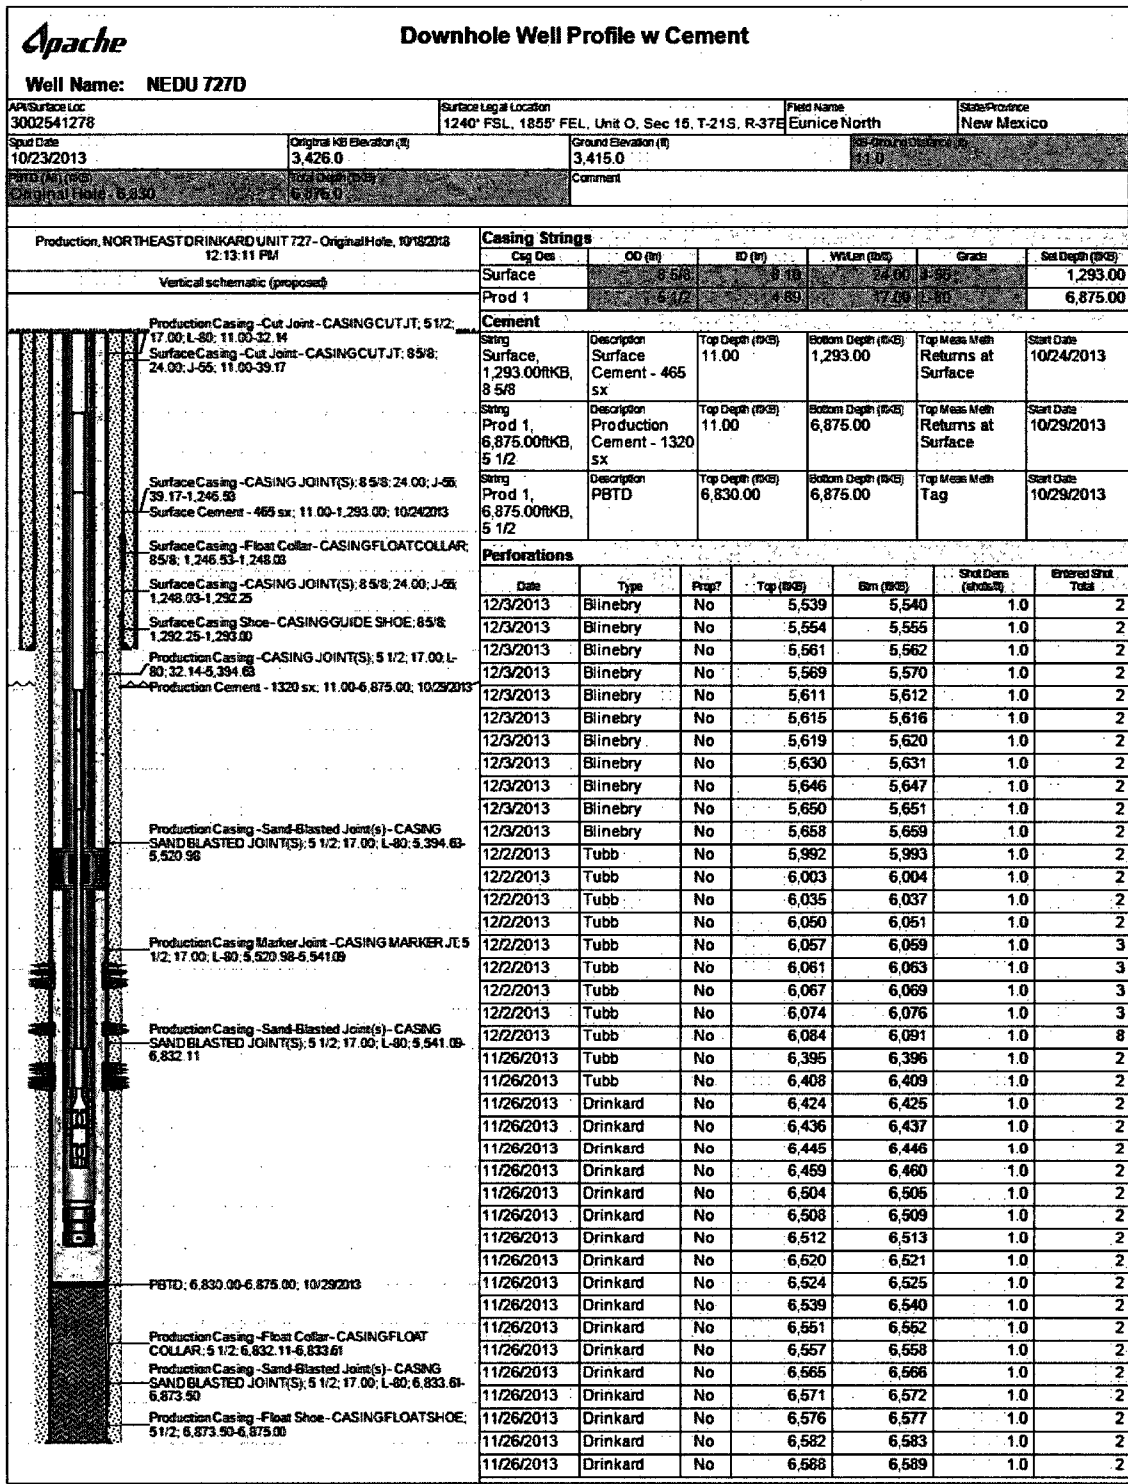


Current Wellbore Diagram

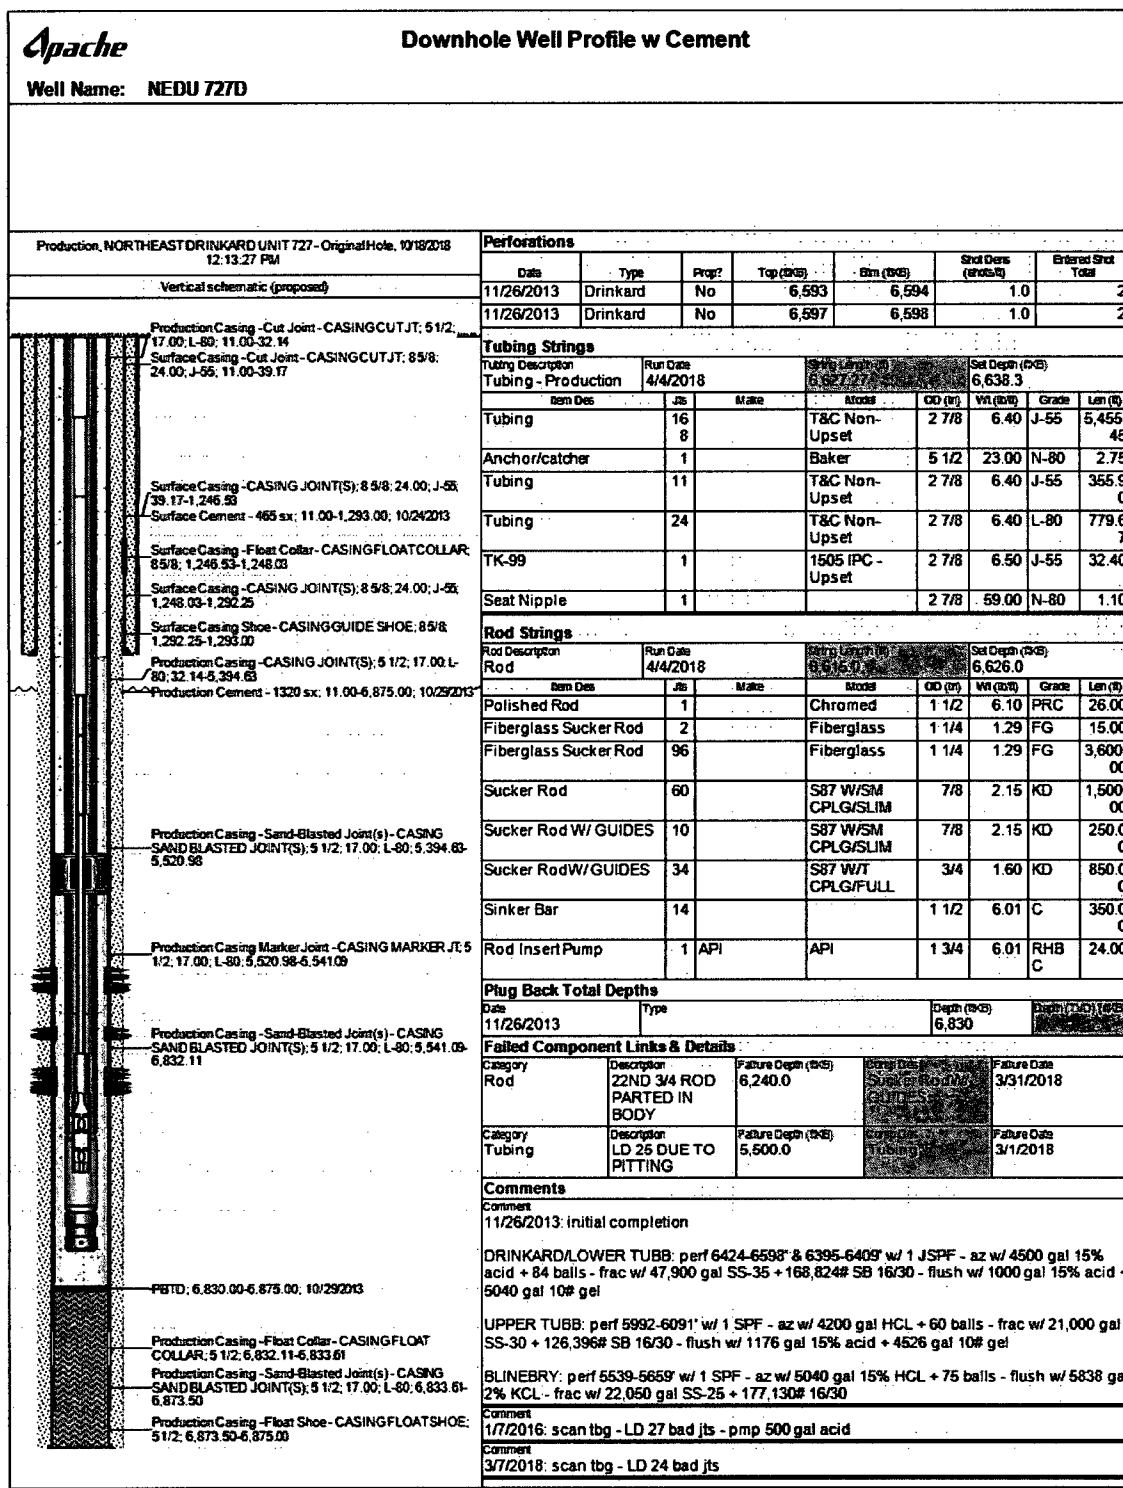

Proposed Wellbore Diagram (Proposed Changes in Yellow)

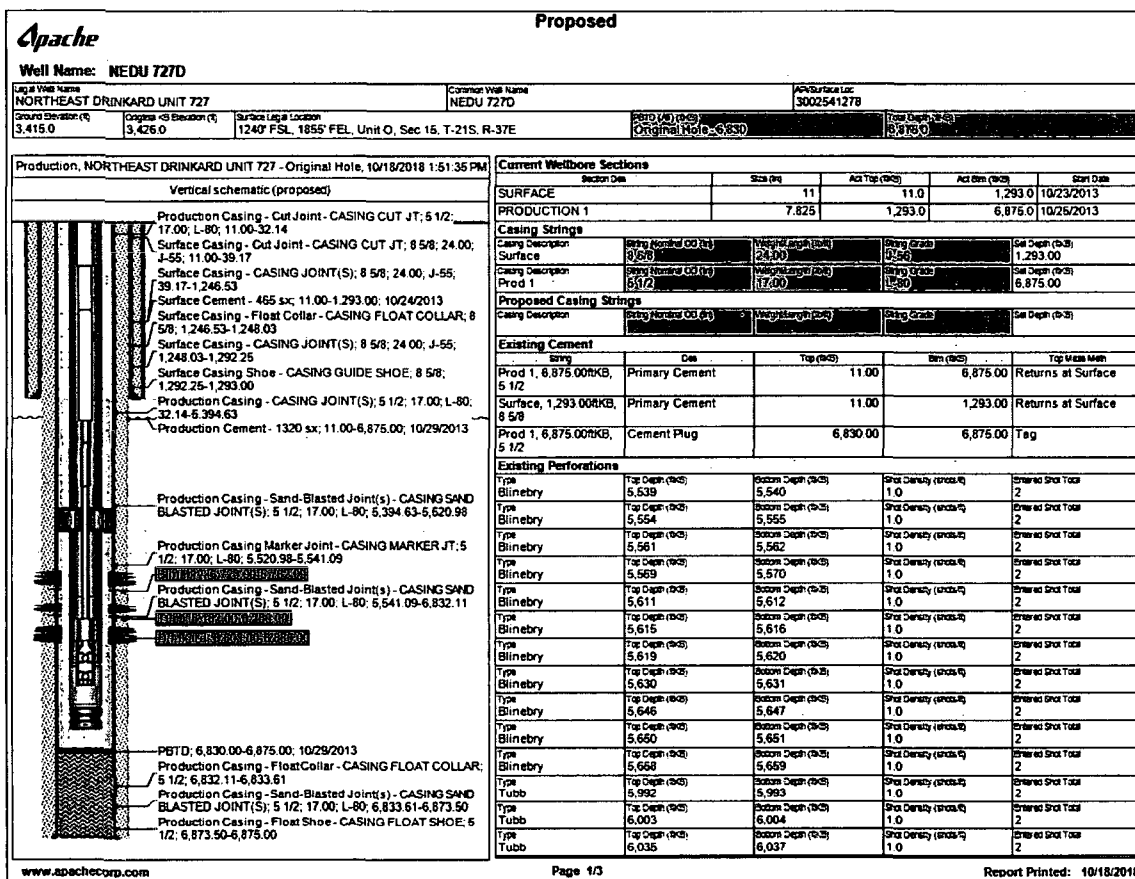

Proposed Wellbore Diagram (Proposed Changes in Yellow)

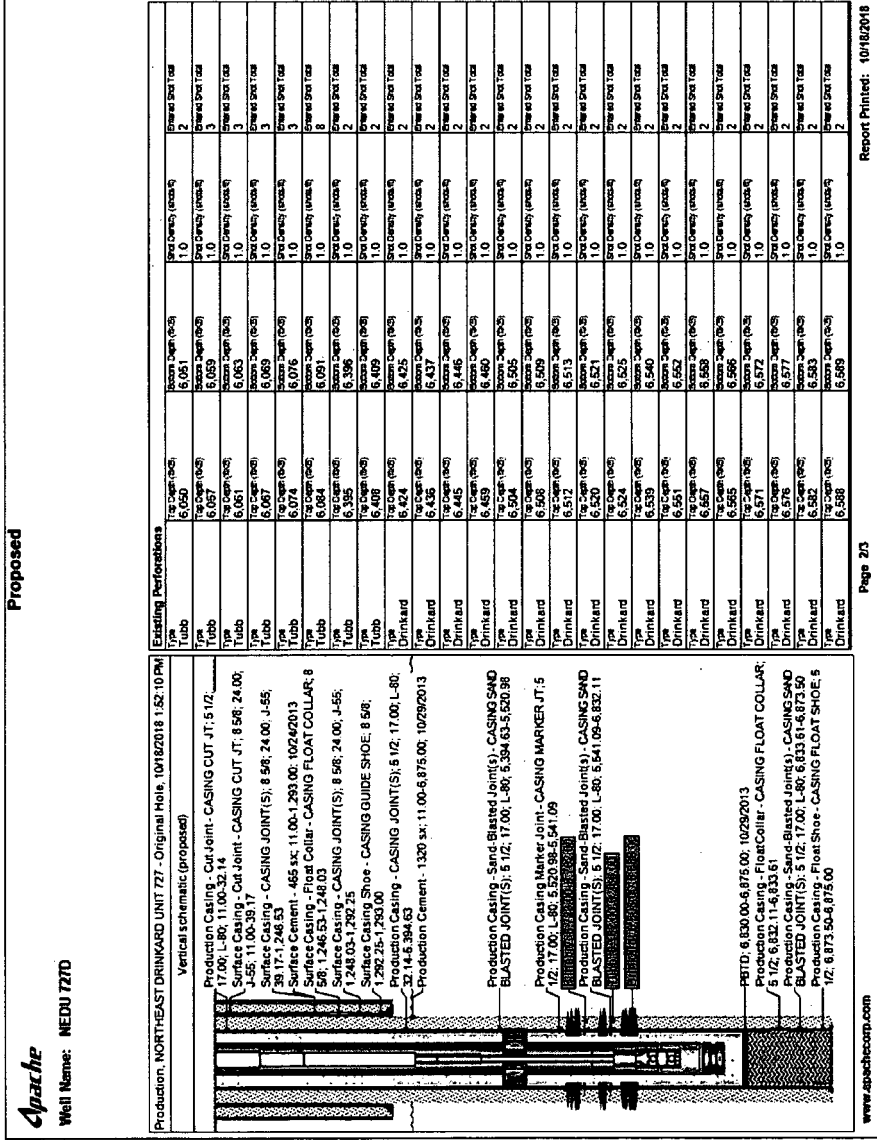

Proposed Wellbore Diagram (Proposed Changes in Yellow)

